

SERVICE MANUAL

W370ET

notebook



Notebook Computer

W370ET

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
July 2012

Trademarks

Intel and **Intel Core** are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *W370ET* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit (Full Range AC/DC Adapter – AC Input 100 - 240V, 50 - 60Hz, DC Output 19V, 6.3A).

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

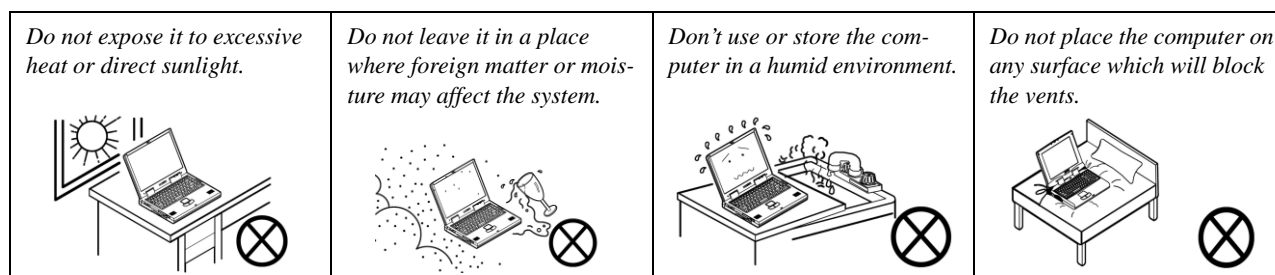


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

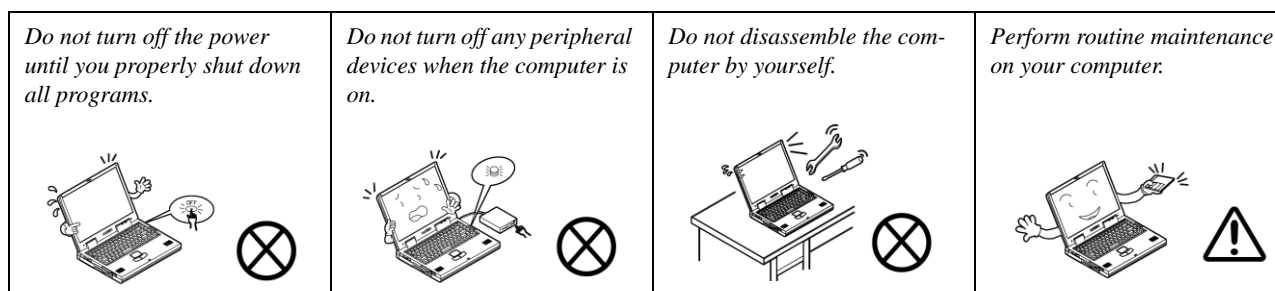

Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

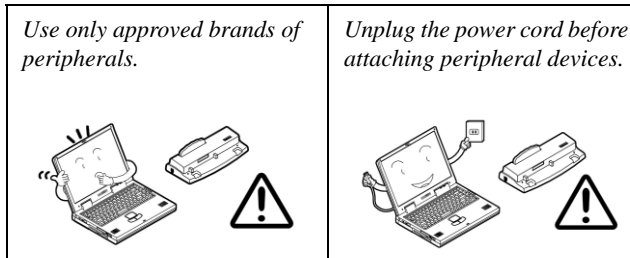

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

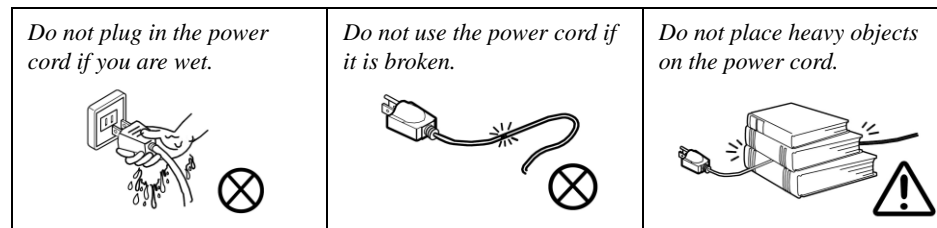

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

Contents

Introduction1-1

Overview	1-1
System Specifications	1-2
External Locator - Front View with LCD Panel Open	1-4
External Locator - Front & Right side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Optical (CD/DVD) Device	2-6
Removing the Hard Disk Drive	2-7
Removing and Installing the Processor	2-10
Removing the Keyboard	2-13
Removing the Primary System Memory (RAM)	2-14

Part ListsA-1

Part List Illustration Location	A-2
Top	A-3
Bottom	A-4
LCD	A-5
HDD	A-6

2nd HDD	A-7
DVD	A-8
COMBO	A-9

Schematic Diagrams.....B-1

System Block Diagram	B-2
Ivy Bridge 1/7	B-3
Ivy Bridge 2/7	B-4
Ivy Bridge 3/7	B-5
Ivy Bridge 4/7	B-6
Ivy Bridge 5/7	B-7
Ivy Bridge 6/7	B-8
Ivy Bridge 7/7	B-9
DDR3 SO-DIMM A_0	B-10
DDR3 SO-DIMM B_0	B-11
DDR3 SO-DIMM A_1	B-12
Panel, Inverter, CRT	B-13
VGA PCI-E Interface	B-14
VGA Frame Buffer Interface	B-15
VGA Frame Buffer A	B-16
VGA Frame Buffer A	B-17
VGA Frame Buffer B	B-18
VGA Frame Buffer B	B-19
VGA I/O	B-20
VGA NVDD Decoupling	B-21
PantherPoint M 1/9	B-22
PantherPoint M 2/9	B-23
PantherPoint M 3/9	B-24
PantherPoint M 4/9	B-25
PantherPoint M 5/9	B-26
PantherPoint M 6/9	B-27

Preface


PantherPoint M 7/9	B-28
PantherPoint M 8/9	B-29
PantherPoint M 9/9	B-30
Mini PCIE, Fan, Audio Con	B-31
USB Charge, CCD, TPM, Multi-Con	B-32
ESATA/USB3.0 Connector	B-33
Card Reader / LAN RTL8411	B-34
SATA HDD, VLED CON, LID SW	B-35
HDMI, RJ45, Audio AMP	B-36
Audio Codec ALC269	B-37
KBC ITE IT8518E	B-38
5VS, 3VS, 3.3VM, 1.5VS_CPU	B-39
VDD3, VDD5	B-40
Power 0.85VS, 1.8VS	B-41
Power 1.5/0.75V/PEX_VDD	B-42
Power 1.05VS, 0.85VS	B-43
Power V-Core 1	B-44
Power V-Core 2	B-45
VGA NVVDD	B-46
AC-In, Charger	B-47
W370/350ET Audio Board	B-48
W370/350ET Power LED Board	B-49
W370/350ET Click Board	B-50
W370ET Power Switch Board	B-51
W350ET Power Switch Board	B-52
W370ET LID / VGA LED Board	B-53
W350ET LID / VGA LED Board	B-54
W350ET VGA / WLAN SW Board	B-55
POWER ON SEQUENCE	B-56
Updating the FLASH ROM BIOS.....	C-1

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W370ET** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 7*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W370ET** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

System Specifications

Processor Options

Intel® Core™ i7 Processor

i7-3820QM (2.70GHz)

8MB L3 Cache, 22nm, DDR3-1600MHz, TDP 45W

i7-3720QM (2.60GHz), i7-3610QM (2.30GHz)

6MB L3 Cache, 22nm, DDR3-1600MHz, TDP 45W

i7-3520M (2.90GHz)

4MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i5 Processor

i5-3360M (2.80GHz), i5-3320M (2.60GHz), i5-3210M (2.50GHz), i5-3110M (2.40GHz)

3MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i7 Processor

i7-2860QM (2.50GHz), i7-2820QM (2.30GHz)

8MB L3 Cache, 32nm, DDR3-1600MHz, TDP 45W

i7-2760QM (2.40GHz), i7-2720QM (2.20GHz)

6MB L3 Cache, 32nm, DDR3-1600MHz, TDP 45W

i7-2670QM (2.20GHz), i7-2630QM (2.00GHz)

6MB L3 Cache, 32nm, DDR3-1333MHz, TDP 45W

i7-2640M (2.80GHz), i7-2620M (2.70GHz)

4MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i5 Processor

i5-2540M (2.60GHz), i5-2520M (2.50GHz), i5-2450M (2.50GHz), i5-2430M (2.40GHz), i5-2410M (2.30GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i3 Processor

i3-2370M (2.40GHz), i3-2350M (2.30GHz), i3-2330M (2.20GHz), i3-2310M (2.10GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Core Logic

Intel® HM77 Chipset

BIOS

One 48Mb SPI Flash ROM

AMI BIOS

LCD

17.3" (43.94cm) HD+/ FHD LCD

Security

BIOS Password

Security (Kensington® Type) Lock Slot

Audio

High Definition Audio Compliant Interface

THX TruStudio Pro

2 * Built-In Speakers

Built-In Microphone

Memory

Three 204 Pin SO-DIMM Sockets Supporting

DDR3 1333/1600MHz Memory

Memory Expandable up to **24GB**

(The real memory operating frequency depends on the FSB of the processor.)

Note: Three SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports NVIDIA® Optimus Technology

Intel Integrated GPU (GPU is Dependent on Processor)

Intel® HD Graphics 3000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®10 Compatible

Intel® HD Graphics 4000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®11 Compatible

NVIDIA Discrete GPU

NVIDIA® GeForce GTX 660M

2GB GDDR5 Video RAM

Microsoft DirectX®11 Compatible

Storage

(**Factory Option**) One Changeable 12.7mm(h) Optical Device Type Drive (Super Multi Drive Module or Blu-Ray Combo Drive Module)

(**Factory Option**) Two Changeable 2.5" (6cm) 9.5mm (h) **SATA** (Serial) Hard Disk Drives supporting RAID level 0/1

Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

Interface

One USB 2.0 Port
Three USB 3.0 Ports
One eSATA Port (USB 3.0 Port Combined)
One HDMI-Out Port
One Headphone-Out Jack
One Microphone-In Jack
One S/PDIF Out Jack
One RJ-45 LAN Jack
One External Monitor Port
One DC-in Jack

Communication

Built-In Gigabit Ethernet LAN
(Factory Option) 1.3M Pixels/2M Pixels (HD)
PC Camera Module

WLAN/ Bluetooth Half Mini-Card Modules:

(Factory Option) Intel® Centrino® Ultimate-N
6300 Wireless LAN (802.11a/g/n)

(Factory Option) Intel® Centrino® Advanced-N
6235 Wireless LAN (802.11a/g/n) + Bluetooth
4.0

(Factory Option) Intel® Centrino® Wireless-N
2230 Wireless LAN (802.11b/g/n) + Bluetooth
4.0

(Factory Option) Third-Party Wireless LAN
(802.11b/g/n)

(Factory Option) Third-Party Wireless LAN
(802.11b/g/n) + Bluetooth 4.0

Card Reader

Embedded Multi-in-1 Push-Push Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC
MS (Memory Stick) / MS Pro / MS Duo

Mini Card Slots

Slot 1 for WLAN Module or WLAN and Bluetooth Combo Module

Environmental Spec**Temperature**

Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%

Power

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19V, 6.3A (120W)

8 Cell Smart Lithium-Ion Battery Pack, 76.96WH

Dimensions & Weight

413mm (w) * 277.5mm (d) * 17.5 - 44mm (h)
3.2kg with ODD & 76.96WH Battery

Introduction

Figure 1
Top View

1. Optional Built-In PC Camera
2. LCD
3. GPU Button
4. LED Status Indicators
5. Power Button
6. Hot Key Buttons
7. Speakers
8. Keyboard
9. Built-In Microphone
10. Touchpad & Buttons

External Locator - Front View with LCD Panel Open



External Locator - Front & Right side Views

Figure 2
Front Views

1. LED Indicators



Figure 3
Right Side Views

1. Multi-in-1 Card Reader
2. USB 3.0 Ports
3. Combined eSATA/USB 3.0 Port
4. HDMI-Out Port
5. RJ-45 LAN Jack



Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Security Lock Slot
2. USB 2.0 Port
3. S/PDIF-Out Jack
4. Microphone-In Jack
5. Headphone-Out Jack
6. Optical Device Drive Bay
7. Emergency Eject Hole



Figure 5
Rear View

1. External Monitor Port
2. DC-In Jack
3. Vent



External Locator - Bottom View

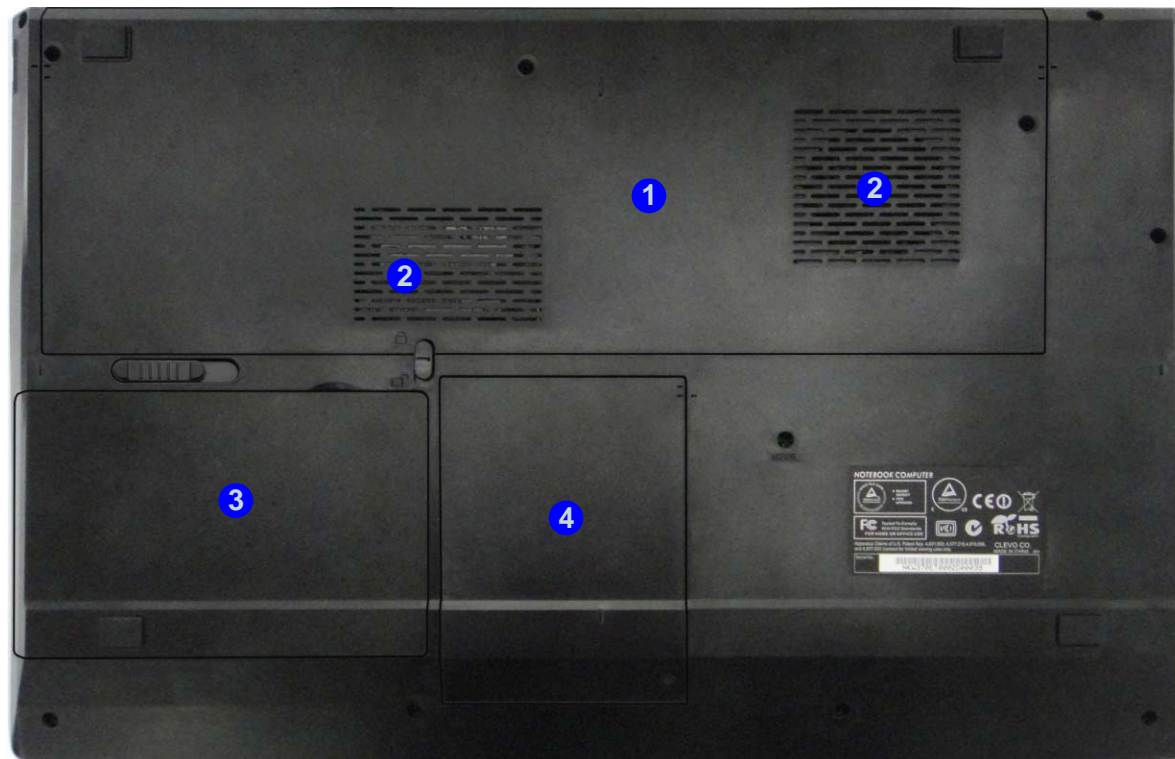


Figure 6
Bottom View

1. Component Bay Cover
2. Vent
3. Battery
4. HDD Bay




Overheating

To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**


1. Memory Slots DDR3 So-DIMM
2. CMOS Battery
3. Mini-Card Connector (WLAN Module)
4. Mini-Card Connector (3G Module)

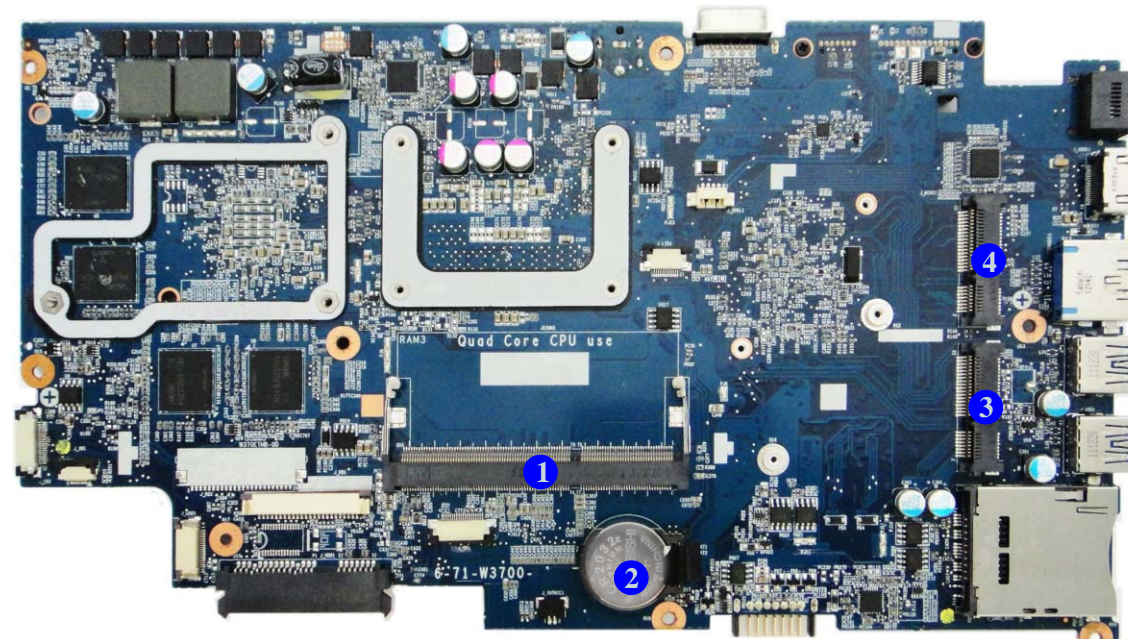

Mainboard Overview - Bottom (Key Parts)

Figure 8
**Mainboard Bottom
Key Parts**

1. PantherPoint
Controller
2. CPU Socket
3. Memory Slots DDR3
So-DIMM
4. NV Graphic
5. KBC

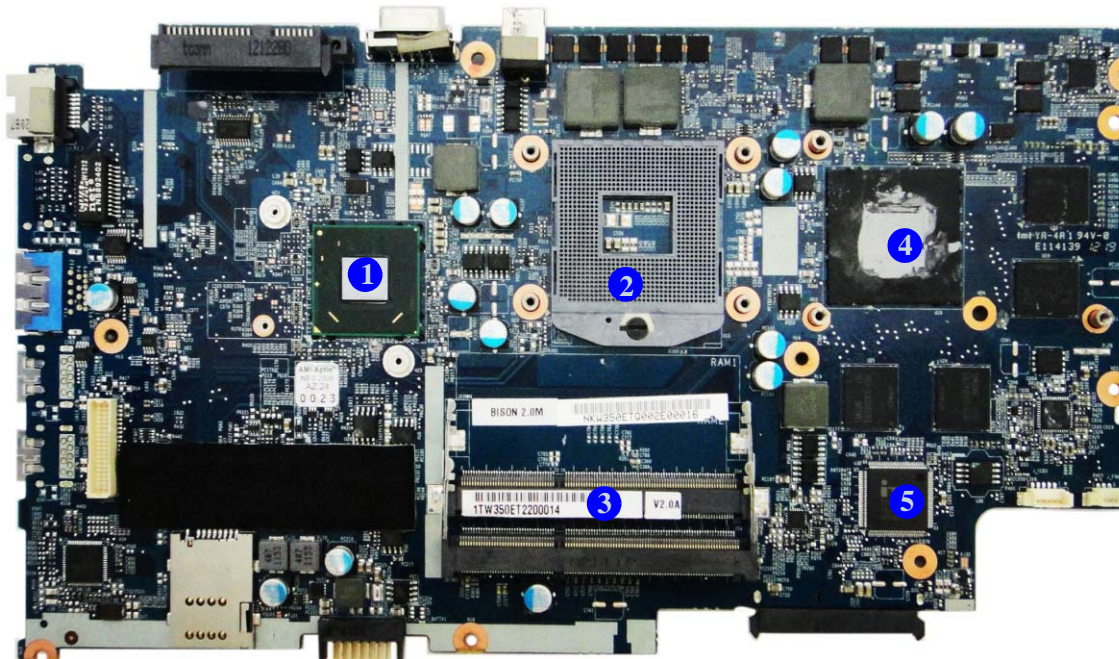


Introduction

Figure 9
**Mainboard Top
Connectors**


Mainboard Overview - Top (Connectors)

1. Audio Cable Connector
2. Power Switch Cable Connector
3. ODD Cable Connector
4. Keyboard Cable Connector
5. Click Board Cable Connector
6. VGA SW Cable Connector
7. Speaker Cable Connector
8. RJ-45 LAN Jack
9. HDMI-Out Port
10. eSATA Connector
11. USB 3.0 Ports
12. Multi-in-1 Card Reader

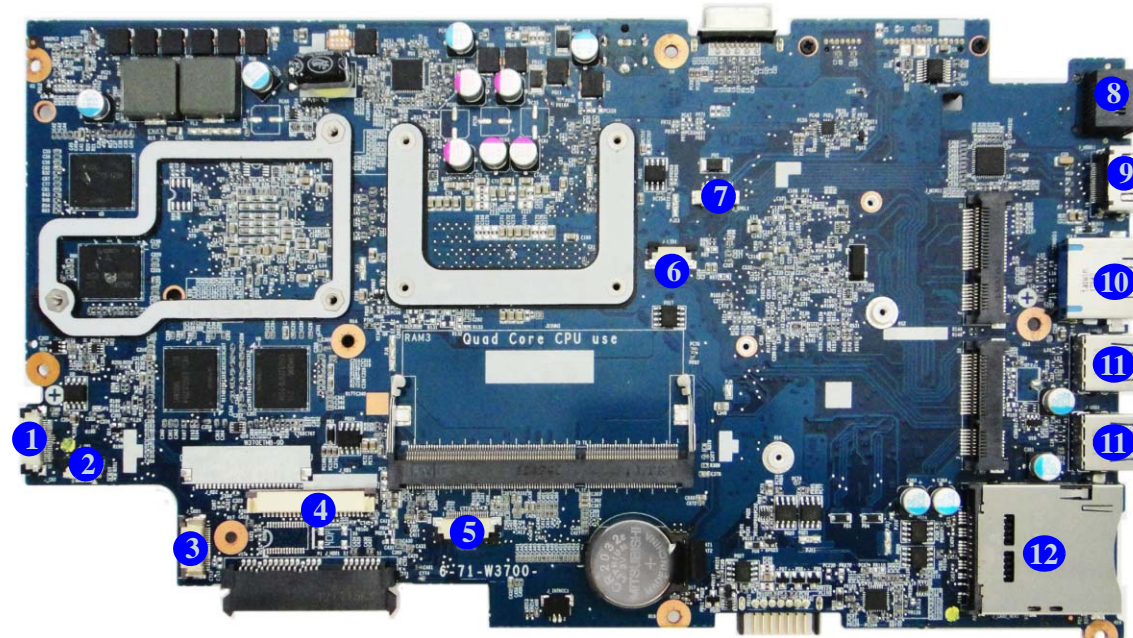

Mainboard Overview - Bottom (Connectors)

Figure 10
**Mainboard Bottom
Connectors**

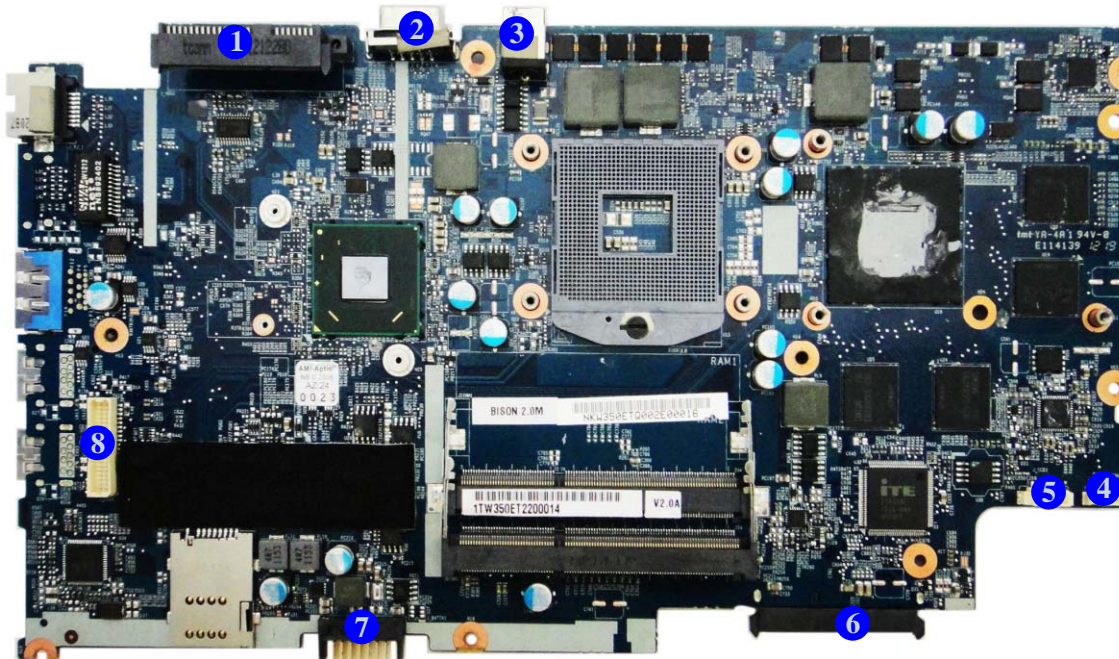

1. HDD2 Connector
2. External Monitor Port
3. DC-In Jack
4. Fan Cable Connector
5. CCD Cable Connector
6. HDD1 Connector
7. Battery Connector
8. LCD Cable Connector


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **W370ET** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).


We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

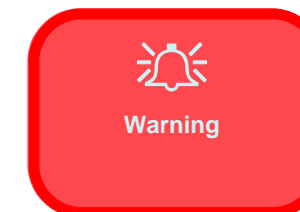

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery *page 2 - 5*

To remove the Optical Device:

1. Remove the battery *page 2 - 5*
2. Remove the Optical device *page 2 - 6*

To remove the HDD:

1. Remove the battery *page 2 - 5*
2. Remove the HDD *page 2 - 7*

To remove and install the Processor:

1. Remove the battery *page 2 - 5*
2. Remove the Processor *page 2 - 10*
3. Install the Processor *page 2 - 12*

To remove the Keyboard:

1. Remove the battery *page 2 - 5*
2. Remove the System Memory *page 2 - 13*

To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the System Memory *page 2 - 14*

Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery.

1. Turn the computer off, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow and battery will pop-up.
4. Lift the battery **3** up (*Figure b*) and out of the battery bay.


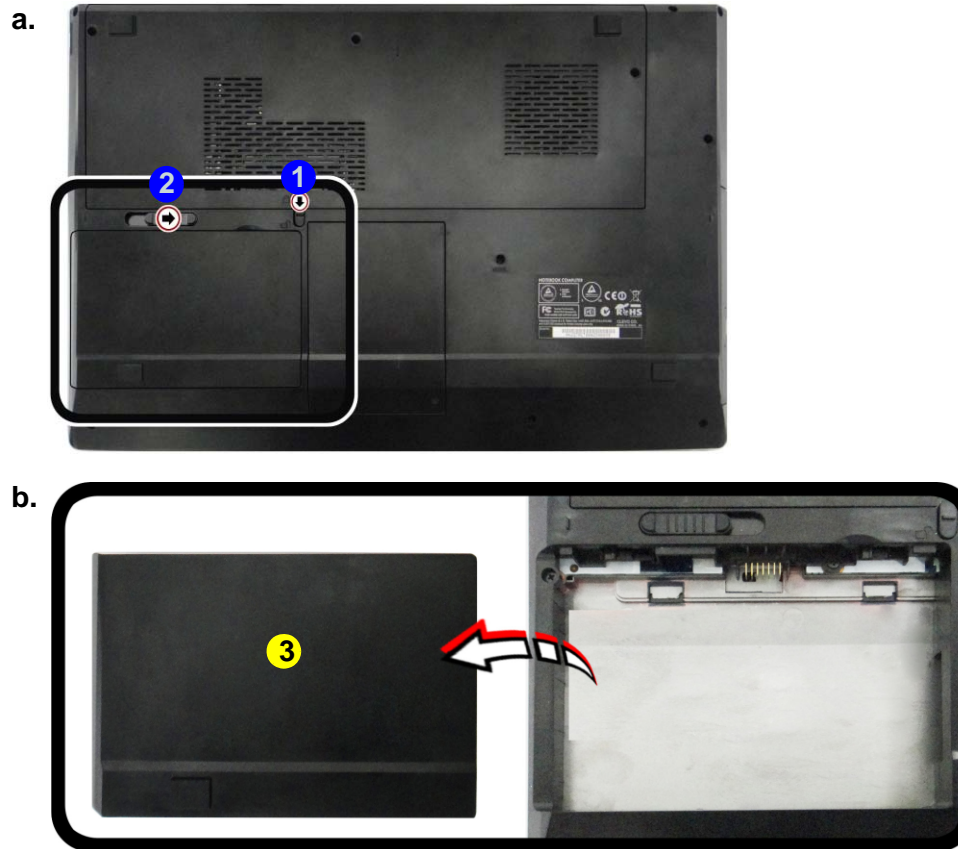


Figure 1
Battery Removal

- a. Slide the latch **1** in the direction of the arrow. and slide the latch **2** in the direction of the arrow and battery will pop-up.
- b. Lift the battery out of the bay as indicated.

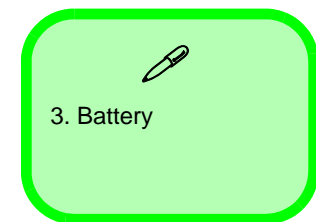


Disassembly

Figure 2
**Optical Device
Removal**

- a. Remove the screw and push the optical device out of the computer.

Removing the Optical (CD/DVD) Device

1. Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)) and remove the component bay cover ([page 2 - 5](#)).
2. Remove the screw **1**, and use a screwdriver to carefully push out the optical device **3** at point **2**.
3. Reverse the process to install the new device.

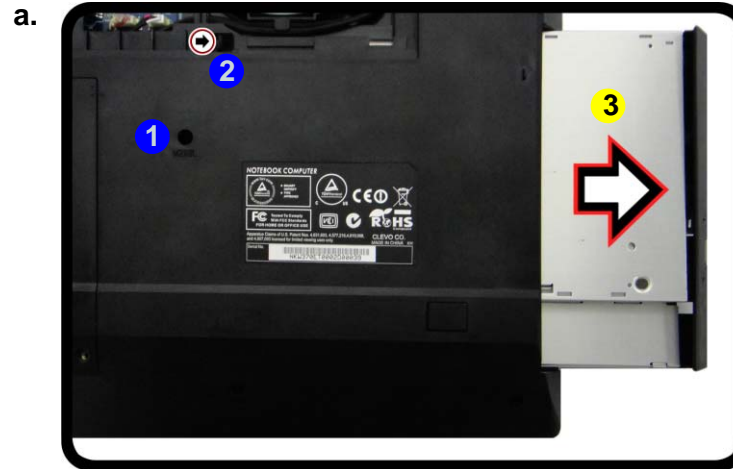

3. Optical Device

- 1 Screw

Removing the Hard Disk Drive

The hard disk drive is mounted in a removable case and can be taken out to accommodate other 2.5" SATA hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

1. Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)).
2. Locate the Hard disk bay cover and remove screw **1**.
3. Slide the cover at point **2** in the direction of the arrow (as illustrated) until the case markers line up.
4. Remove the bay cover **3**.

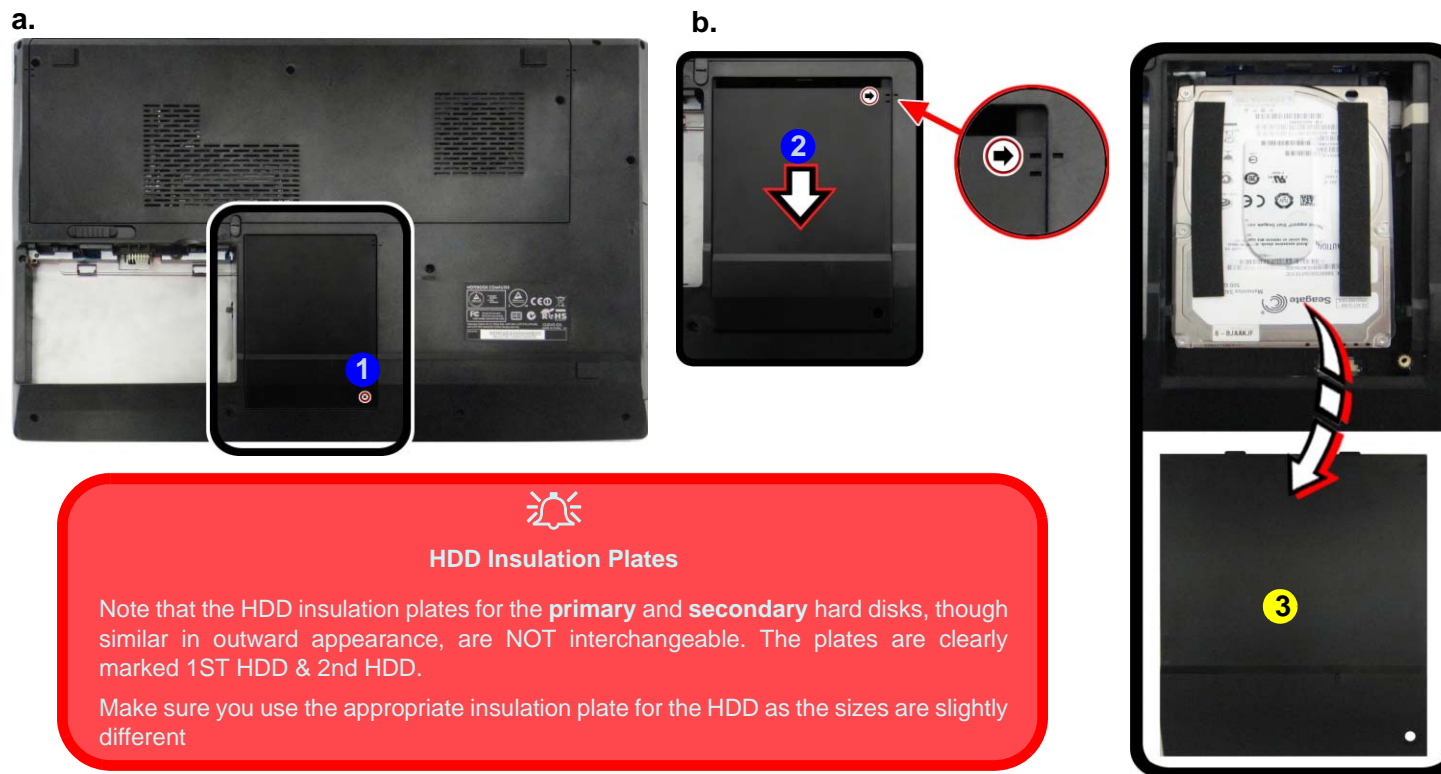


Figure 3
HDD Assembly Removal

- a. Remove the screws.
- b. Remove the cover

Disassembly

Figure 4
**HDD Assembly
Removal (cont'd.)**

- c. Lift the hard disk assembly out off the computer.
- d. Remove the screws to release the hard disk from the mylar.

5. Lift the hard disk assembly **4** out of the computer (*Figure 4c*).
6. Remove screws **5** - **6**.
7. Separate the hard disk **7** and hard disk mylar **8**.
8. Reverse the process to install a new hard disk(s).



- 4 Hard Disk Assembly
- 7 Hard Disks
- 8 Hard Disk Mylar

- 2 Screws

Removing the Hard Disk(s) in the Secondary HDD Bay

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the component bay cover and remove screws **1** - **3** and the cover.
3. The hard disk will be visible at point **4** on the mainboard (**Figure 5b**).
4. Remove screws **5** - **6** (**Figure 5c**).
5. Grip the tab and slide the hard disk in the direction of arrow **7** (**Figure 5d**).
6. Lift the hard disk assembly **8** out of the compartment (**Figure 5e**).
7. Remove the screws **9** - **10** to release the hard disk(s) **11** and hard disk mylar **12** from the case **13**.
8. Reverse the process to install any new hard disk(s).

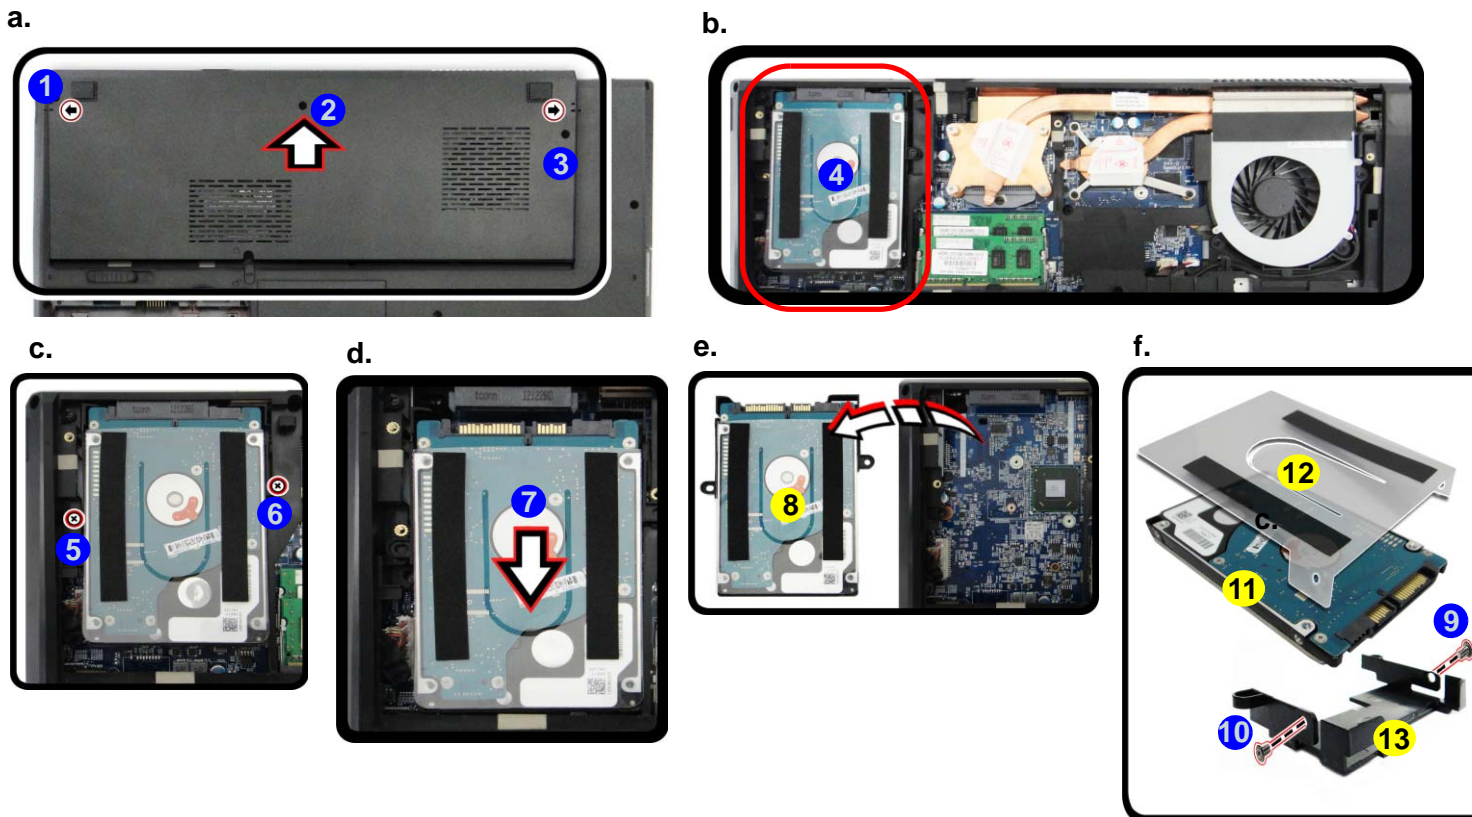



Figure 5
**Secondary HDD
Assembly Removal**

- a. Remove the screws and cover.
- b. Locate the hard disk.
- c. Remove the screws.
- d. Slide the HDD out.
- e. Lift the hard disk assembly out of the computer.
- f. Remove the screws and separate the HDD(s) from case.

- 
- 8 Hard Disk Assembly
 - 11. Hard Disks
 - 12. Hard Disk Mylar
 - 13. Hard Disk Case
 - 5 Screws

Disassembly

Figure 6
Processor Removal

- Locate the heat sink.
- Remove the screws.
- Grip the heat sink tab and carefully lift the heat sink up and off the computer.



Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.







9. CPU Heat Sink


- 7 Screws

Removing and Installing the Processor

Processor Removal Procedure

- Turn off the computer, and turn it over, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 9](#)).
- The CPU heat sink will be visible at point **A** on the mainboard ([Figure 6a](#)).
- Remove screws **7**, **6**, **5**, **4**, **3**, **2** & **1**, the reverse order indicated on the label ([Figure 6b](#)).
- Carefully lift the heat sink **9** up straight (**do not angle it as you lift it**) about a centimeter in order to clear the fan unit, and then angle it around 45° to remove it from the computer ([Figure 6c](#)).

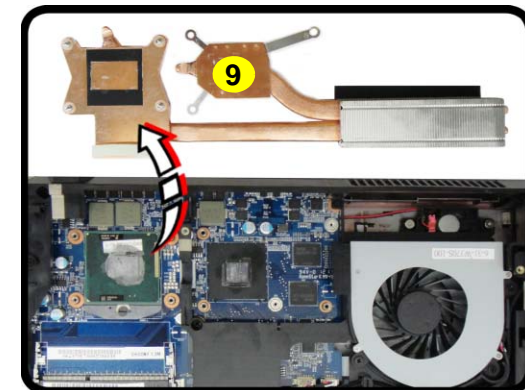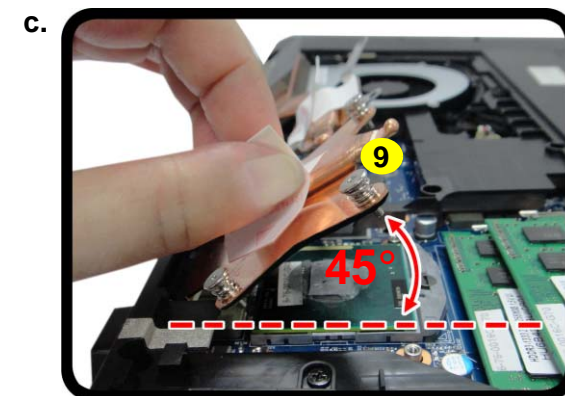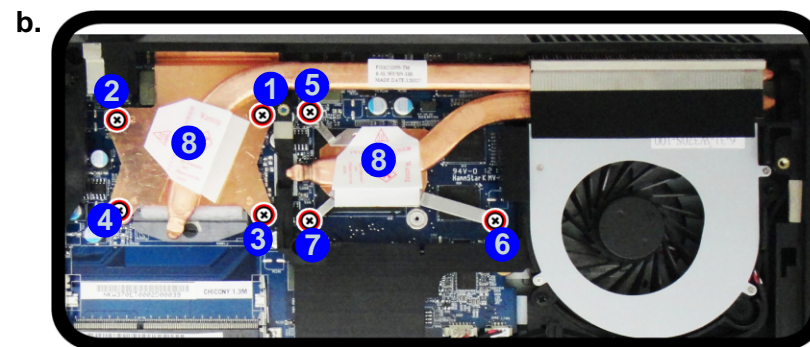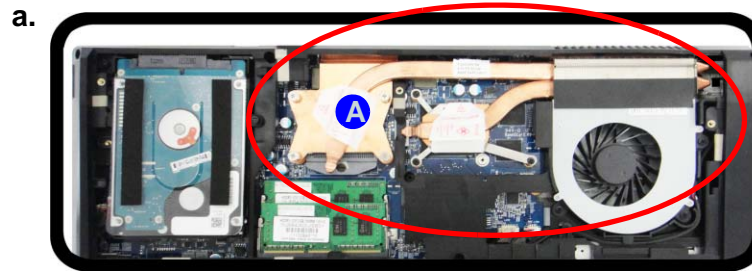

5. Turn the release latch **10** towards the unlock symbol  to release the CPU (**Figure 7d**).
6. Carefully (it may be hot) lift the CPU **11** up and out of the socket (**Figure 7e**).
7. Reverse the process to install a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

d.




Unlock



Lock

e.

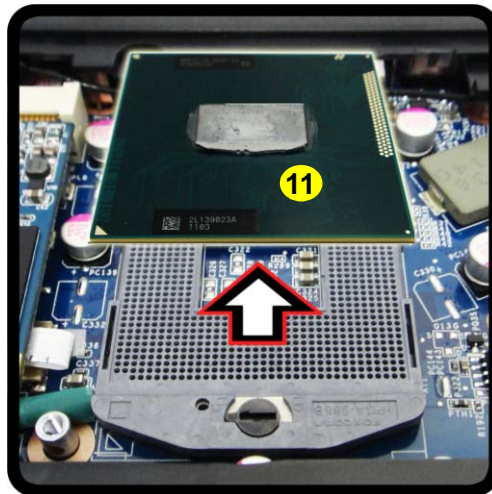

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

Figure 7

Processor Removal (cont'd)

- d. Turn the release latch to unlock the CPU.
- e. Lift the CPU out of the socket.




11. CPU


Disassembly

Figure 8
Processor Installation

- Insert the CPU.
- Turn the release latch towards the lock symbol.
- Insert the heat sink.
- Tighten the screws.

Processor Installation Procedure

- Insert the CPU **A** (**Figure 8a**), pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (**Figure 8b**).
- Insert the heat sink **D** at an angle of around 30° as indicated in **Figure 8c**.
- Tighten the CPU heat sink screws in the order **1**, **2**, **3**, **4**, **5**, **6** & **7** (the order as indicated on the label and **Figure 8d**).
- Replace the component bay cover.



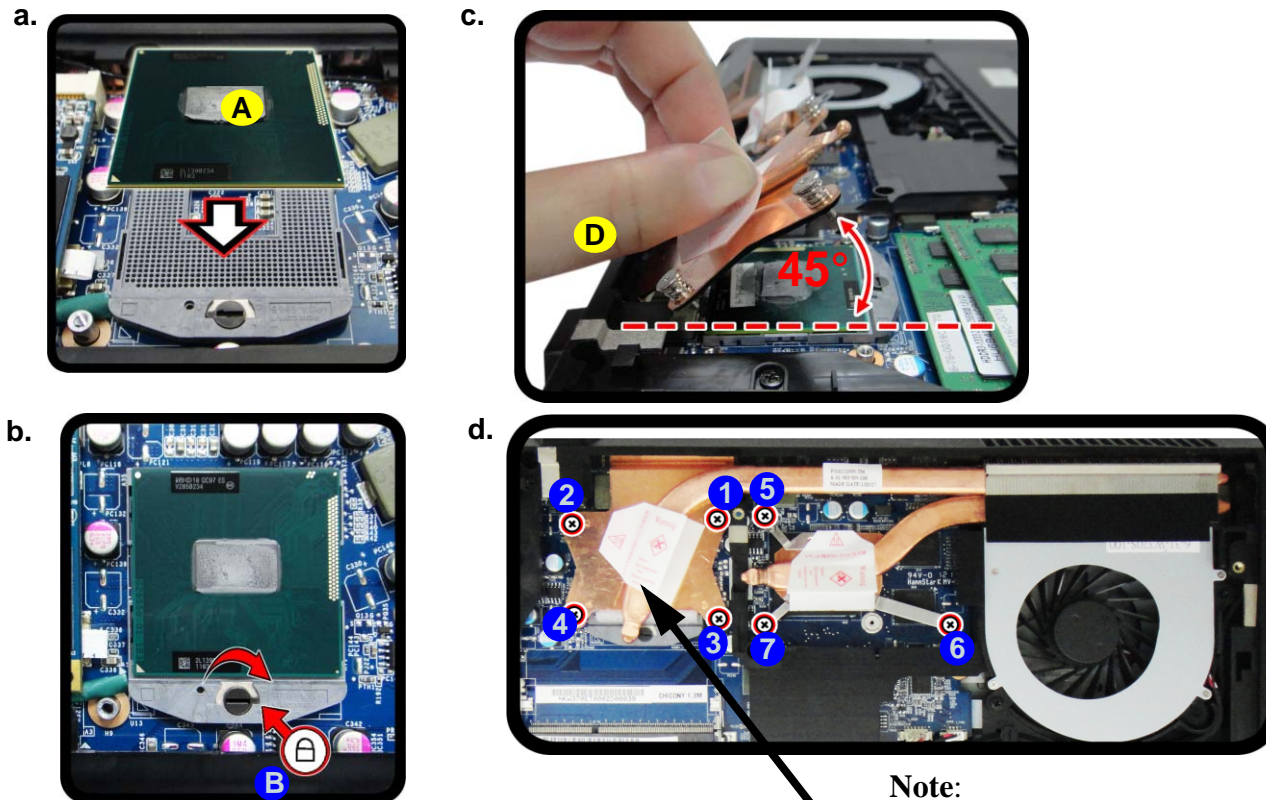


Note:
Tighten the screws in the order as indicated on the label.

- A. CPU
D. Heat Sink
- 7 Screws

Removing the Keyboard

1. Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 9](#)).
2. Use a screwdriver to carefully push out the speakers cover **2** at point **1**.
3. Turn the computer over, unsnap the speaker cover **2** upwards from the center of the computer ([Figure 9b](#)).
4. Remove screws **3** - **7** from the keyboard ([Figure 9c](#)).
5. Carefully lift the keyboard **8** up, being careful not to bend the keyboard ribbon cable **9**. Disconnect the keyboard ribbon cable **9** from the locking collar socket **10** by using a flat-head screwdriver to pry the locking collar pins away from the base ([Figure 9d](#)).
6. Carefully lift up the keyboard **8** ([Figure 9e](#)) off the computer.

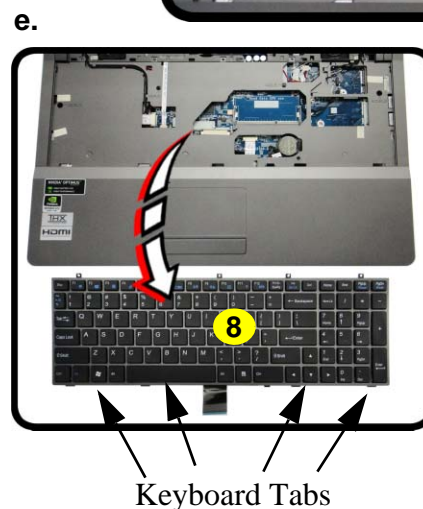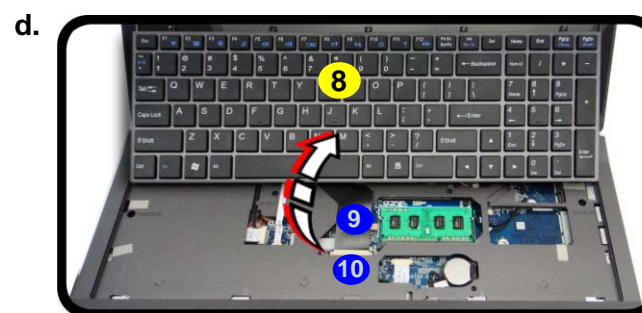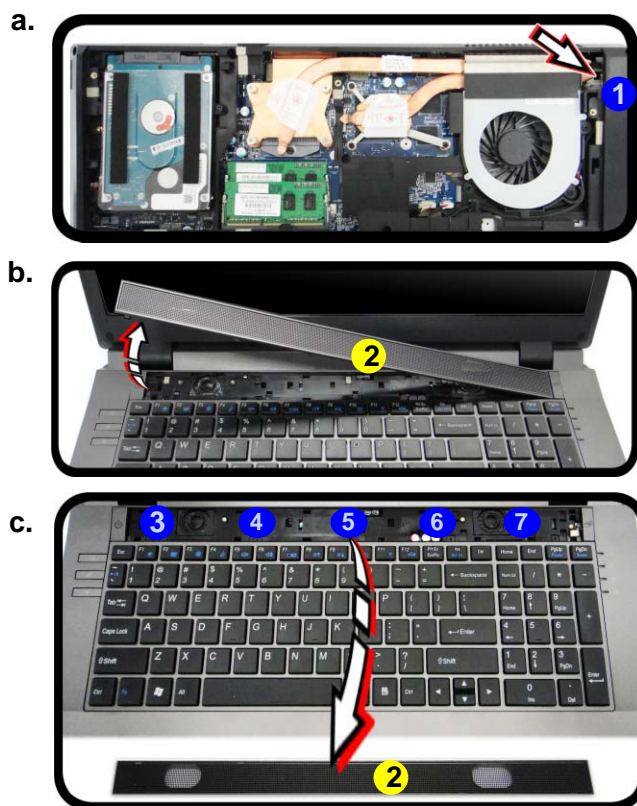

Re-Inserting the Keyboard

When re-inserting the keyboard firstly align the **four** keyboard tabs at the bottom ([Figure 9e](#)) at the bottom of the keyboard with the slots in the case.

Figure 9
Keyboard Removal

- a. Use a screwdriver to carefully push out the speakers cover at point **1**.
- b. Turn the computer over, unsnap the LED cover module upwards from the center of the computer.
- c. Remove screws from the keyboard.
- d. Carefully lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins away from the base.
- e. Remove the keyboard.

- 2. Speaker Cover
- 8. Keyboard
- 5 Screws

Disassembly

Figure 10
**Primary RAM
Module Removal**

- The RAM modules will be visible at point ① on the mainboard.
- Pull the release latches.
- Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module

Removing the Primary System Memory (RAM)

The computer has **three** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules. The total memory size is automatically detected by the POST routine once you turn on your computer.


Note that **three SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum.**

Two primary memory sockets are located under component bay cover (the bottom case cover), and one secondary memory sockets are located under the keyboard (not user upgradable). If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Primary System Memory Upgrade Process

- Turn **off** the computer, turn it over and remove the battery ([page 2 - 5](#)) and remove the component bay cover ([page 2 - 9](#)).
- The RAM modules will be visible at point ① on the mainboard.
- Gently pull the two release latches (② & ③) on the sides of the memory socket in the direction indicated by the arrows ([Figure 10b](#)). The RAM module ④ will pop-up ([Figure 10c](#)), and you can then remove it.
- Pull the latches to release the second module if necessary.


a.

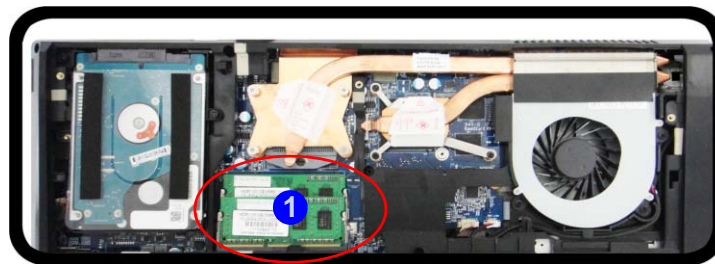

b.




c.

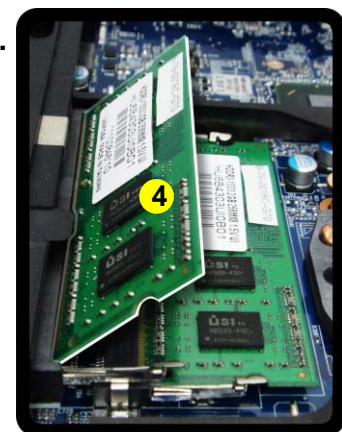

Memory (under Keyboard) Upgrade Process

5. Turn **off** the computer, turn it over and remove the battery ([page 2 - 5](#)), component bay cover ([page 2 - 9](#)) and keyboard ([page 2 - 13](#)).
6. The memory sockets will be visible at point **5** ([Figure 11d](#)).
7. Gently pull the two release latches (**6** & **7**) on the sides of the memory socket(s) in the direction indicated below.
8. The RAM module **4** will pop-up, and you can remove it ([Figure 11f](#)).

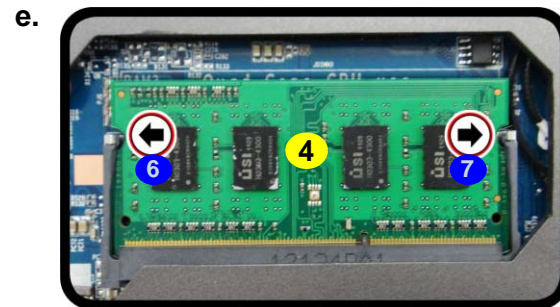

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

9. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
10. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
11. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
12. Replace the bay cover and screws.
13. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.



4 RAM Modules

Figure 11
**RAM Module
(under keyboard)
Removal**

- d. The secondary RAM modules will be visible at point **5**.
- e. Pull the release latches.
- f. Remove the module.

Appendix A: Part Lists

This appendix breaks down the *W370ET* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A- 1
**Part List Illustration
Location**

Parts	W370ET
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
LCD	<i>page A - 5</i>
HDD	<i>page A - 6</i>
2nd HDD	<i>page A - 7</i>
DVD	<i>page A - 8</i>
COMBO	<i>page A - 9</i>

Top

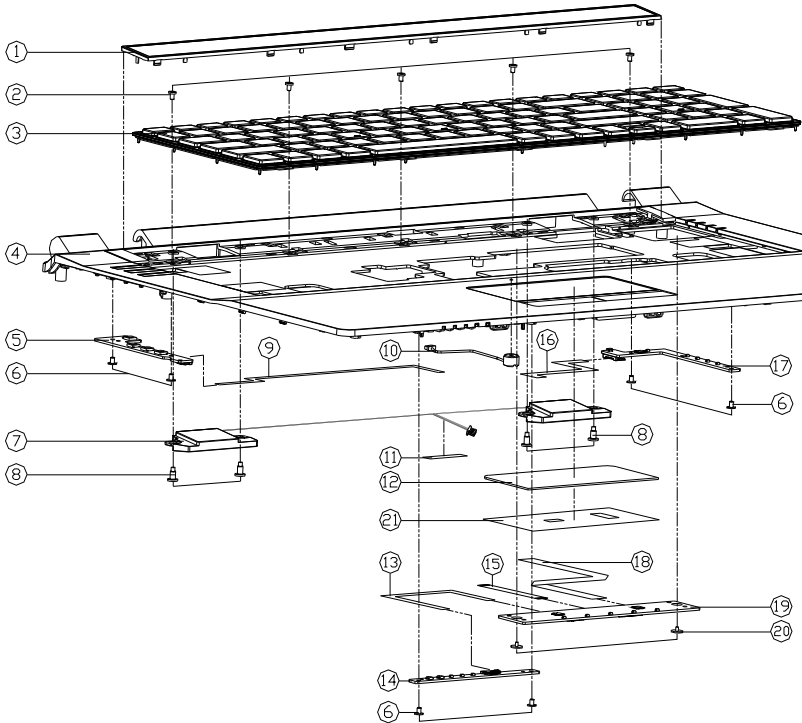



Figure A - 1
Top

ITEM	PART NAME	PART NO	REMARK
1	CENTER COVER MODULE W370ET	6-42-W370B-202	
2	SCREW M2xL KI BZ ICT NY (DD=45,DT=04)	6-35-B6120-3RD	
3	K/B US/BLACK/ FRAME/US) MODULE W370ET	6-79-W370E.TOK-010	
4	TOP CASE MODULE (CH/NO SPEAKER) W370ET (GAP/DO)	6-39-W3702-012-N	
5	POWER SWITCH BOARD V2.0A W370ET	6-77-W370S-D02A	
6	SCREW M2xL KI NI ICT NY (DD=45,DT=04)	6-35-B1120-3RE	
7	SPK CABLE FROM R/L SHX 152 2IN AT TERMINAL POWER	6-23-SP15E-0S1	
8	SCREW M2xL KI NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
9	FFC CABLE FOR NO TO POWER BOARD SPIN (NO) W370ET	6-43-W3700-052	
10	RE-IMPOSED TO 0 BAY OR POWER (0) 11 LUMEN (0) 11	6-23-EM55G-011-2	
11	TAPE MYLAR (C) MYLAR M550J	6-40-M55J2-030	
12	TOUCH PAD CLIN (0) 11 LUMEN (0) 11	6-49-W25A2-011	
13	FFC CABLE FOR FROM LED NO TO CLICK NO TOP (NO) W370ET	6-43-W3700-040-1	
14	POWER LED BOARD V2.0A W370ET	6-77-W3704-D02A	
15	FFC CABLE FOR TP TO CLICK BOARD SPIN (NO) W370ET	6-43-X5102-011-2	
16	FFC CABLE FOR NO TO RIGHT LED BOARD SPIN (NO) W370ET	6-43-W3700-032	
17	LID SWITCH BOARD V2.0A W370ET	6-77-W370C-D02A	
18	FFC CABLE FOR CLICK BOARD TO NO SPIN (NO) W370ET	6-43-W3700-011-1	
19	CLICK BOARD V2.0B W370ET	6-77-W3702-D02B	
20	SCREW M2xL KI BK/Z ICT NY (06,1=06)	6-35-B6120-2RE	
21	TP MYLAR (06=42.5*0.25) W253HPD	6-40-W2532-030-1	

Part Lists

Bottom

Figure A - 2
Bottom

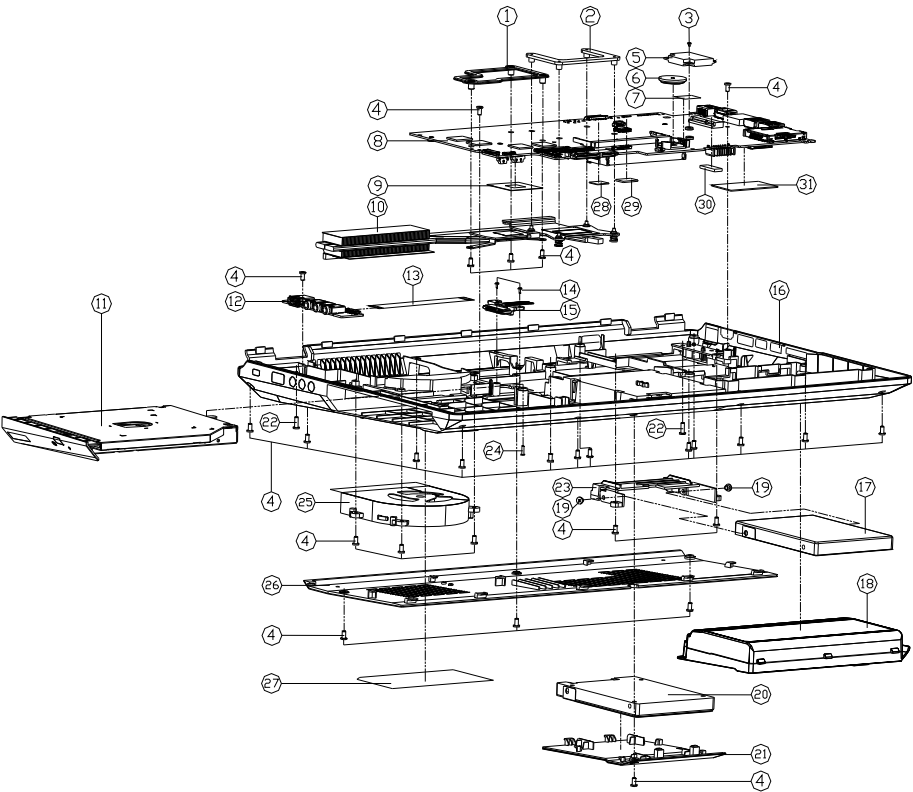

ITEM	PART NAME	PART NO	REMARK
1	VGA SUPPORTER SECC W150ERD	6-33-W15ES-012	
2	CPU SUPPORT BRACKET TH15 P150M	6-33-XS10S-011	
3	SCREW M2X4 KI NY ICT NY (D=4.5, H1.44)	6-35-B1120-3RE	
4	SCREW M2.5X6L K BZ ICT NY	6-35-B2125-6RA	
5	SCREW M2.5X6L K BZ ICT NY	6-88-M77C2-4200	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-P17EF-4200	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-W25SF-4200	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-W24SF-9400	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-W34SF-8700	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-W25H2-9400	(OPTION)
5	SCREW M2.5X6L K BZ ICT NY	6-88-W25H2-7000	(OPTION)
6	BATTERY 3V ZHUM CR2032 (OUTSUBSH)	6-23-62015-607	
7	SCREW M2.5X6L K BZ ICT NY	6-40-XS10S-020	
8	MAIN BOARD V2.0B W370ET	6-77-W3700-002R	
9	VGA DIP M2.5X6L WPP-022 (G4M2) M001U	6-40-M860S-092	
10	CPU HEATSINK MODULE W370ET	6-31-W370N-101	
10	W/D DDD ASSY W370ET (OPTION)	6-79-W370ET02-000	(OPTION)
10	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W370ET00-010	(OPTION)
11	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-W370ET01-000	(OPTION)
12	PHONE JACK & USB BOARD V2.0B W370ET	6-77-W370A-002A	
13	OTC CABLE FOR AUDIO BOARD TO MP3 MP W370ET	6-43-W3700-022	
14	SCREW M2X4 KI NY ICT NY (D=4.5, H1.44)	6-35-B6120-5R0	
15	OTC CABLE FOR AUDIO BOARD TO MP3 MP W370ET	6-23-FW370-011	
16	BOTTOM CASE MODULE W370ET	6-39-W3703-012	
17	W/D 2HDD ASSY W150ERD/W150ERM	6-79-W150ERD-040	
17	W/HDD W/ 2HDD ASSY W370ET	6-79-W370ET03-030	(OPTION)
18	SCREW M2X4 KI NY ICT NY (D=4.5, H1.44)	6-87-W370S-4271	
19	SCREW M2X4 KI NY ICT NY (D=4.5, H1.44)	6-35-B6130-4R8	
20	W/HDD W/ 2HDD ASSY W370ET	6-79-W370ET03-030	(OPTION)
20	W/HDD ASSY W370ET	6-79-W370ET03-000	(OPTION)
20	W/D HDD ASSY W370ET	6-79-W370ET03-010	(OPTION)
21	HDD COVER MODULE W370ET	6-42-W370J-102	
22	SCREW M2.5X6L KI BK/Z NY ICT	6-35-B6125-8R0	
23	SECOND HDD HOODING PLATE (G4M2) W370ET	6-42-W370J-020	
24	SCREW M2X4L KI BK/Z NY ICT	6-35-B6120-8R0	
25	FAN MODULE (ADDA) W370ET	6-31-W370S-101	
26	CPU COVER MODULE W370ET	6-42-W3708-102	
27	PRODUCT LABEL FOR W370ET	6-45-W370ET03-010	
28	GASKET (V2.0B) FOR MP3 MP W370ET	6-47-00190-086	
29	GASKET (V2.0B) FOR MP3 MP W370ET	6-47-00190-12J	
30	GASKET (V2.0B) FOR MP3 MP W370ET	6-47-00190-10E	
31	SPRING-LOADED PIN (V2.0B) FOR MP3 MP W370ET	6-47-0019A-702	

LCD


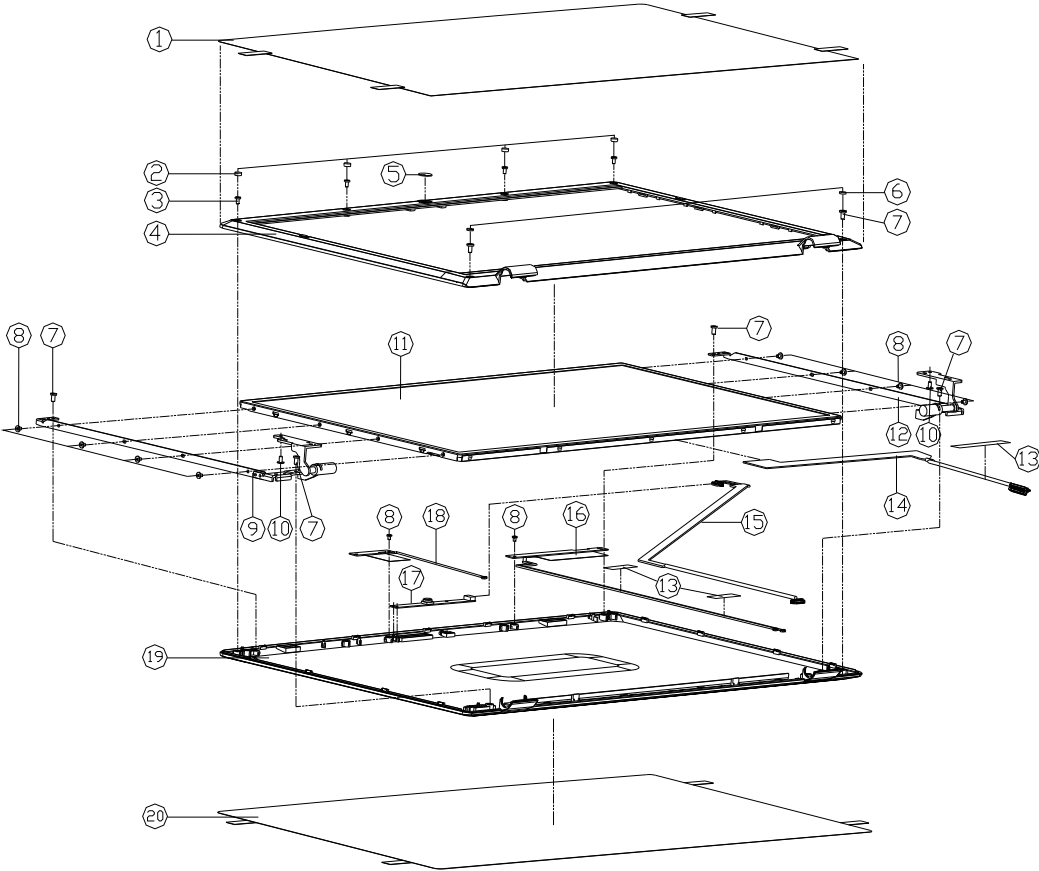


Figure A - 3
LCD

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT CASE PROTECT MYLAR PET B7110	6-40-B7118-012	
2	FRONT COVER (CHANGE) RUBBER SILICON 60 B7110	6-47-B7111-033	
3	SCREW M2*5L KI NY BZ/2 ICT NY	6-35-B6120-5R0	
4	LCD FRONT COVER MODULE B7110	6-39-B7111-012	
5	LCD MODULE (CHANGE) TO THE AREA 1MM (CNC) (OPTION) B7110	6-42-B7111-012	OPTION
6	W/O CCD LENS PC B7110	6-42-B7111-020	OPTION
7	FRONT RUBBER (45*115) SILICON 60PVD B7110	6-47-B7111-021	
8	SCREW M2.5*5L KI BK/2 ICT NY	6-35-B6125-5RA	
9	SCREW M2*5L KI NY ICT NY (CNC) (4.5, 0.1*0.4)	6-35-B1120-3RE	
10	HINGE L (SECC+SK7) W370ET	6-33-W3701-DL0	
11	SCREW M2.5*6L K BZ ICT NY	6-35-B2125-6RA	
12	LCD 17.2" HD LG LPT20VH-1LP3 QLED (40*60) 60 NM	6-50-NA160-L07	OPTION
13	LCD 17.2" HD CHINESE M720H-121 QLED TYPE QLED 60 NM	6-50-NB260-D00	OPTION
14	LCD 17.2" HD CHINESE M720H-122 QLED TYPE QLED 60 NM	6-50-NA158-D00	OPTION
15	LCD 17.2" HD CHINESE M720H-123 QLED TYPE QLED 60 NM	6-50-NB258-N00	OPTION
16	HINGE R (SECC+SK7) W370ET	6-33-W3701-DR0	
17	TAPE MYLAR (C) MYLAR M550J	6-40-M55J2-030	
18	WIRE CABLE FOR LED TO BOW UP 10MM (CNC) (OPTION) V20ET	6-43-W3701-010-C	
19	WIRE CABLE SPIN FOR CCD 310MM (CNC) W370ET	6-43-W3701-012	
20	BACK CASE PROTECT MYLAR PET B7110	6-40-B7111-012	

HDD

Figure A - 4
HDD

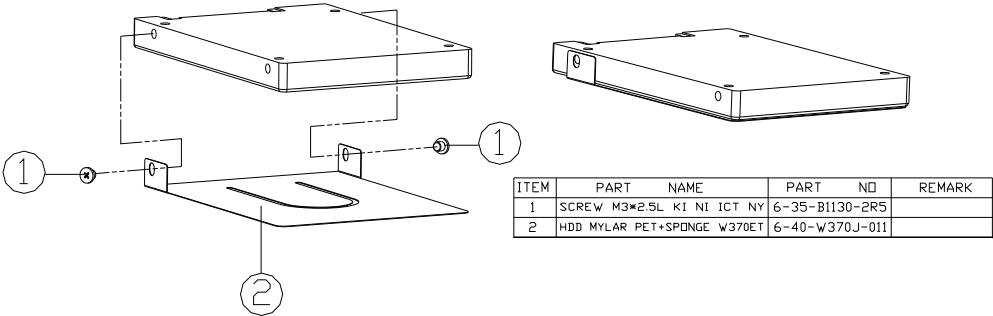

2nd HDD


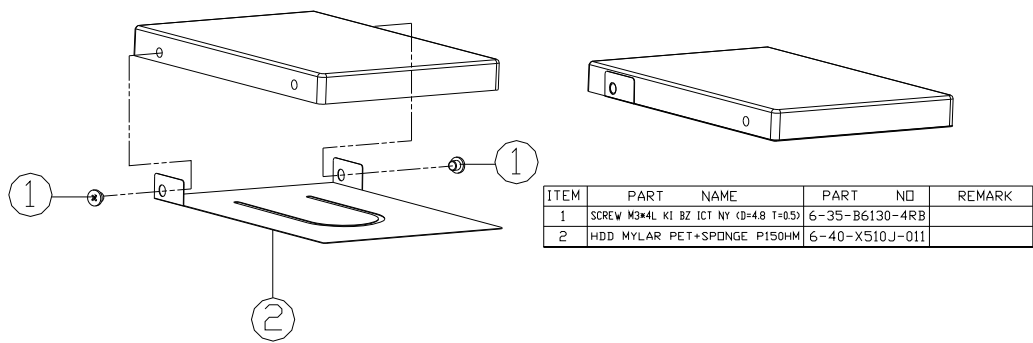


Figure A - 5
2nd HDD

Part Lists

DVD

Figure A - 6
DVD

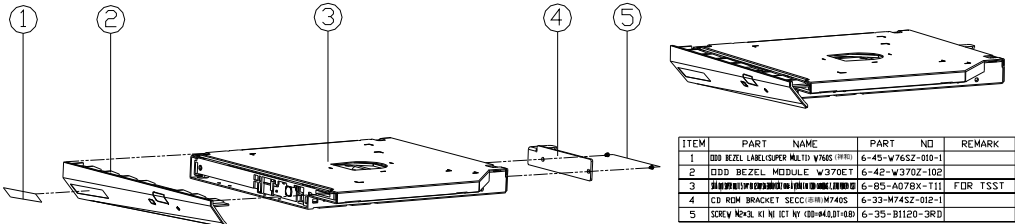

COMBO

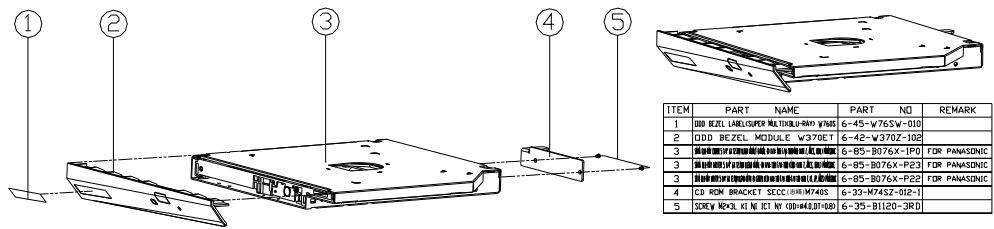


Figure A - 7
COMBO

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the W370ET notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
System Block Diagram - Page B - 2	VGA NVDD Decoupling - Page B - 21	VDD3, VDD5 - Page B - 40
Ivy Bridge 1/7 - Page B - 3	PantherPoint M 1/9 - Page B - 22	Power 0.85VS, 1.8VS - Page B - 41
Ivy Bridge 2/7 - Page B - 4	PantherPoint M 2/9 - Page B - 23	Power 1.5/0.75V/PEX_VDD - Page B - 42
Ivy Bridge 3/7 - Page B - 5	PantherPoint M 3/9 - Page B - 24	Power 1.05VS, 0.85VS - Page B - 43
Ivy Bridge 4/7 - Page B - 6	PantherPoint M 4/9 - Page B - 25	Power V-Core 1 - Page B - 44
Ivy Bridge 5/7 - Page B - 7	PantherPoint M 5/9 - Page B - 26	Power V-Core 2 - Page B - 45
Ivy Bridge 6/7 - Page B - 8	PantherPoint M 6/9 - Page B - 27	VGA NVVDD - Page B - 46
Ivy Bridge 7/7 - Page B - 9	PantherPoint M 7/9 - Page B - 28	AC-In, Charger - Page B - 47
DDR3 SO-DIMM A_0 - Page B - 10	PantherPoint M 8/9 - Page B - 29	W370/350ET Audio Board - Page B - 48
DDR3 SO-DIMM B_0 - Page B - 11	PantherPoint M 9/9 - Page B - 30	W370/350ET Power LED Board - Page B - 49
DDR3 SO-DIMM A_1 - Page B - 12	Mini PCIE, Fan, Audio Con - Page B - 31	W370/350ET Click Board - Page B - 50
Panel, Inverter, CRT - Page B - 13	USB Charge, CCD, TPM, Multi-Con - Page B - 32	W370ET Power Switch Board - Page B - 51
VGA PCI-E Interface - Page B - 14	ESATA/USB3.0 Connector - Page B - 33	W350ET Power Switch Board - Page B - 52
VGA Frame Buffer Interface - Page B - 15	Card Reader / LAN RTL8411 - Page B - 34	W370ET LID / VGA LED Board - Page B - 53
VGA Frame Buffer A - Page B - 16	SATA HDD, VLED CON, LID SW - Page B - 35	W350ET LID / VGA LED Board - Page B - 54
VGA Frame Buffer A - Page B - 17	HDMI, RJ45, Audio AMP - Page B - 36	W350ET VGA / WLAN SW Board - Page B - 55
VGA Frame Buffer B - Page B - 18	Audio Codec ALC269 - Page B - 37	POWER ON SEQUENCE - Page B - 56
VGA Frame Buffer B - Page B - 19	KBC ITE IT8518E - Page B - 38	
VGA I/O - Page B - 20	5VS, 3VS, 3.3VM, 1.5VS_CPU - Page B - 39	

Table B - 1
Schematic
Diagrams




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-W3709-003. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).


System Block Diagram

Sheet 1 of 55
System Block
Diagram

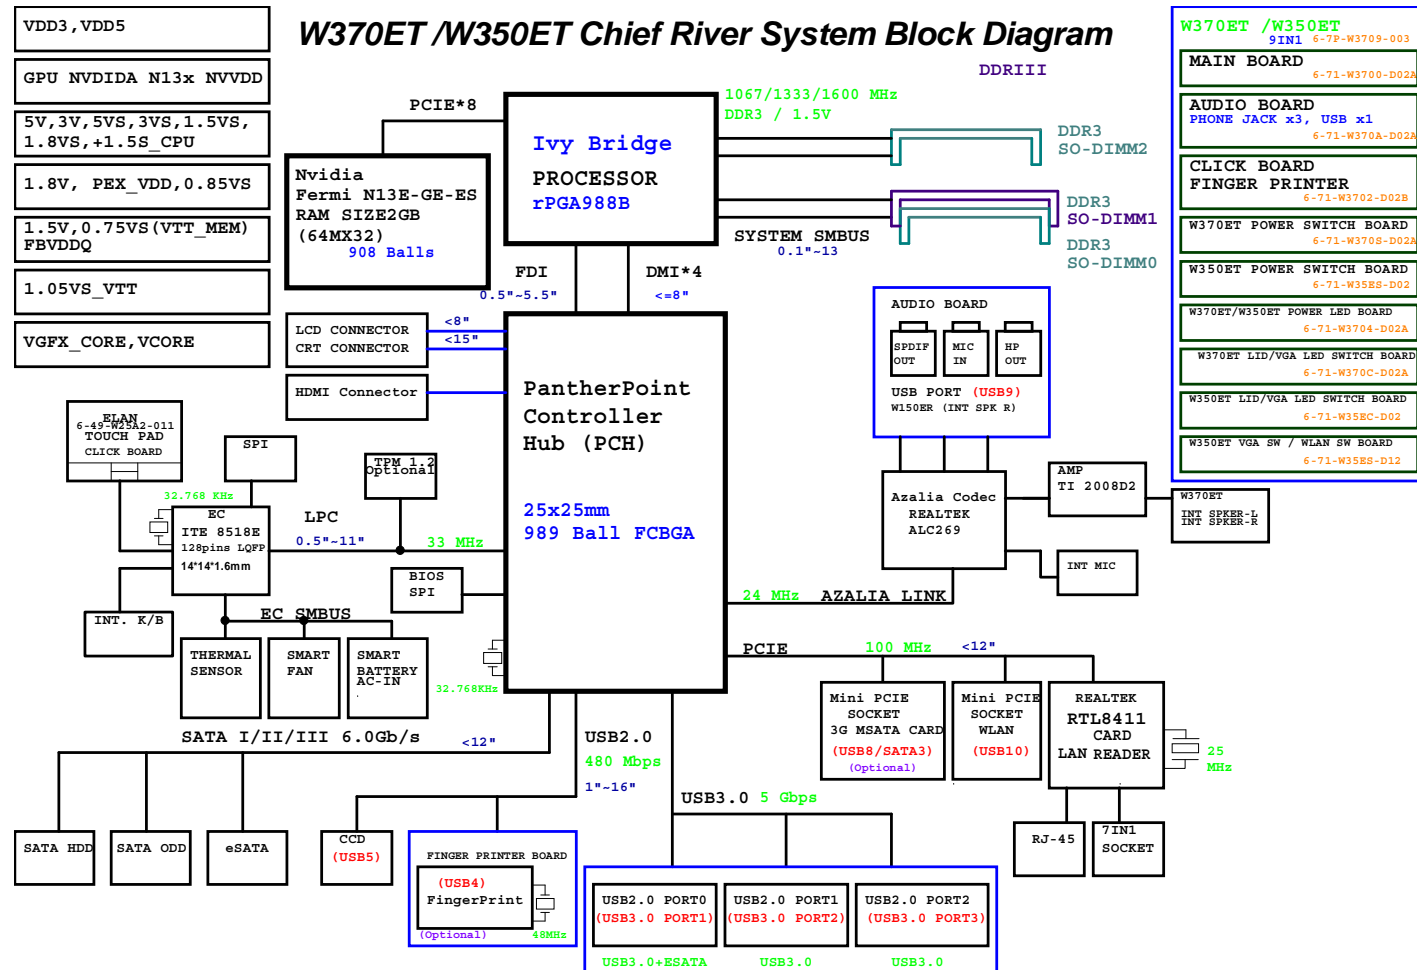

Ivy Bridge 1/7

Ivy Bridge Processor 1/7 (DMI,PEG,FDI)

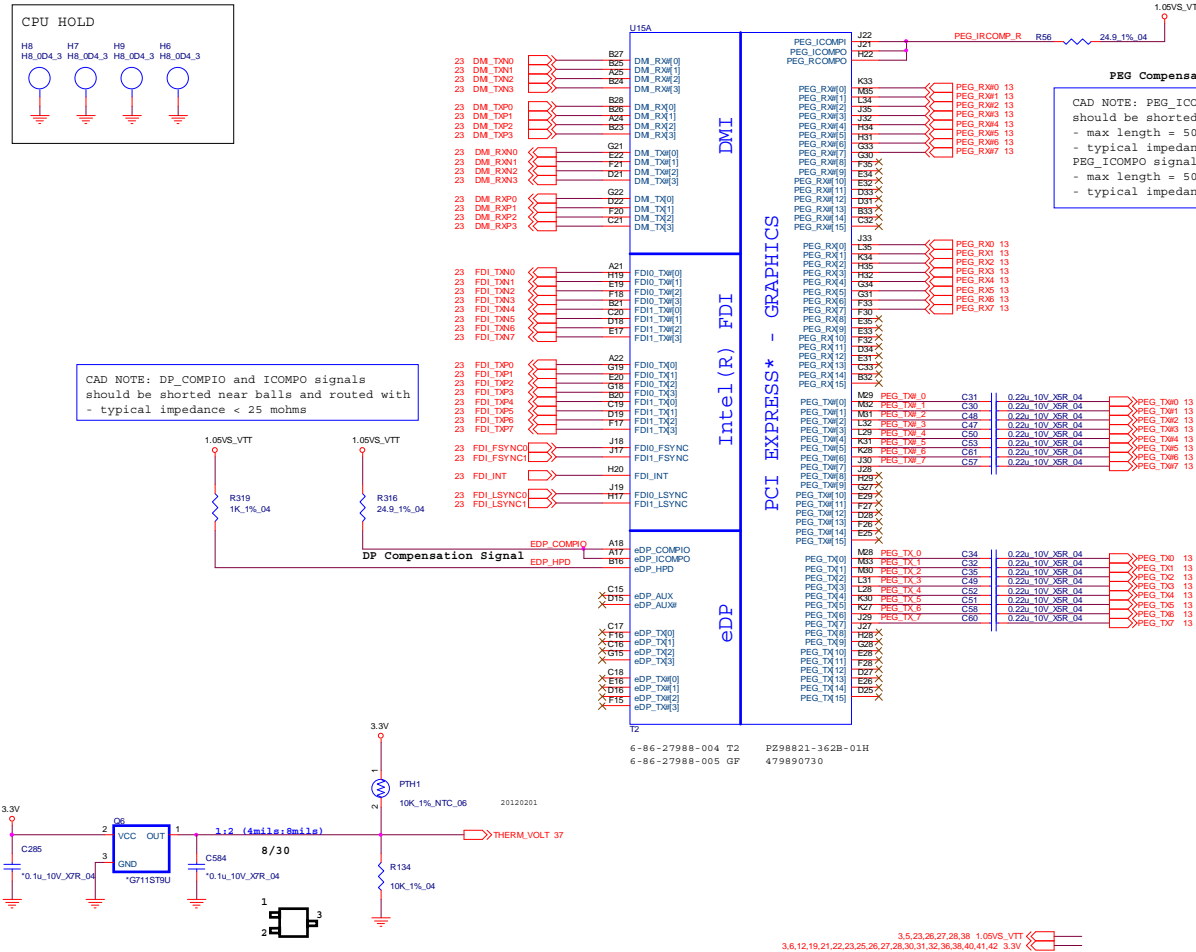
Sheet 2 of 55
Ivy Bridge 1/7

Schematic Diagrams

Ivy Bridge 2/7

Sheet 3 of 55
Ivy Bridge 2/7

Ivy Bridge Processor 2/7 (CLK,MISC,JTAG)

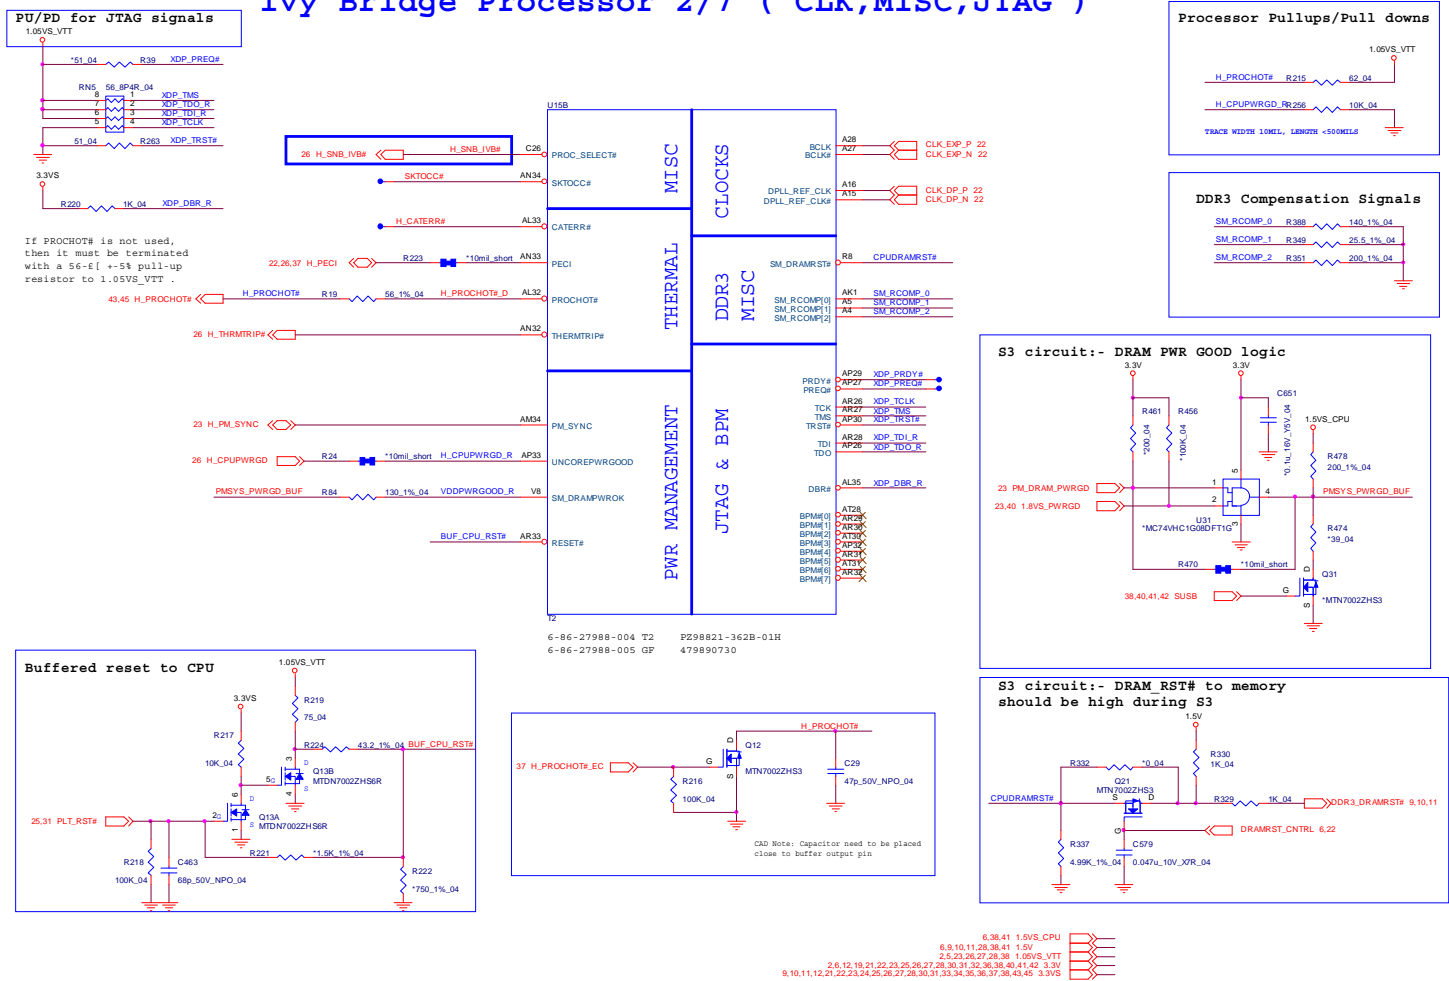

Ivy Bridge Processor 3/7 (DDR3)




Schematic Diagrams

Ivy Bridge 4/7


Sheet 5 of 55
Ivy Bridge 4/7

Ivy Bridge Processor 4/7 (POWER)

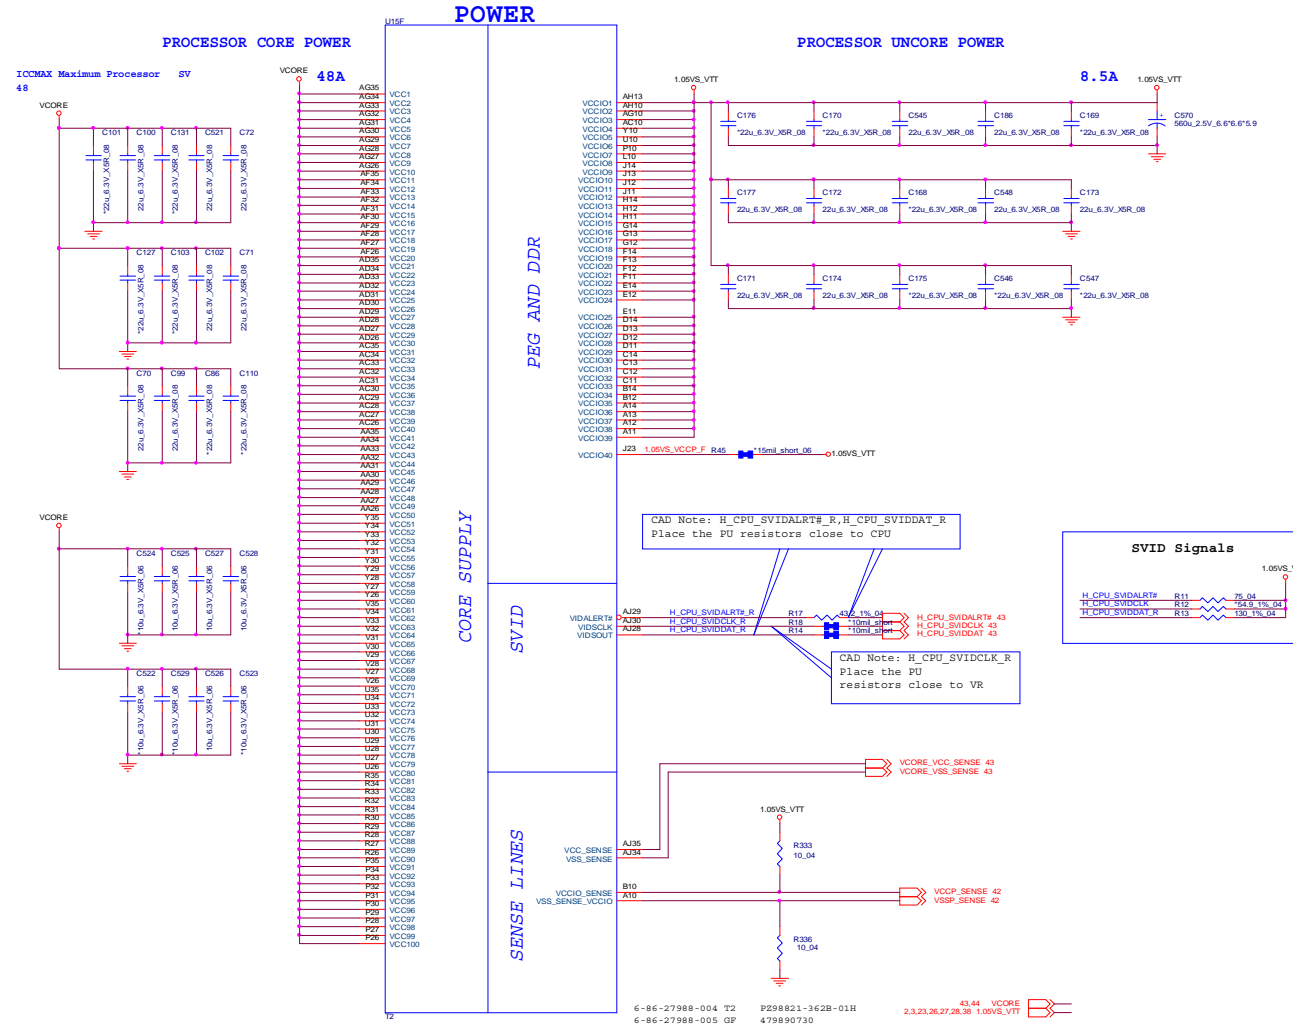

Ivy Bridge 5/7

Ivy Bridge Processor 5/7 (GRAPHICS POWER)

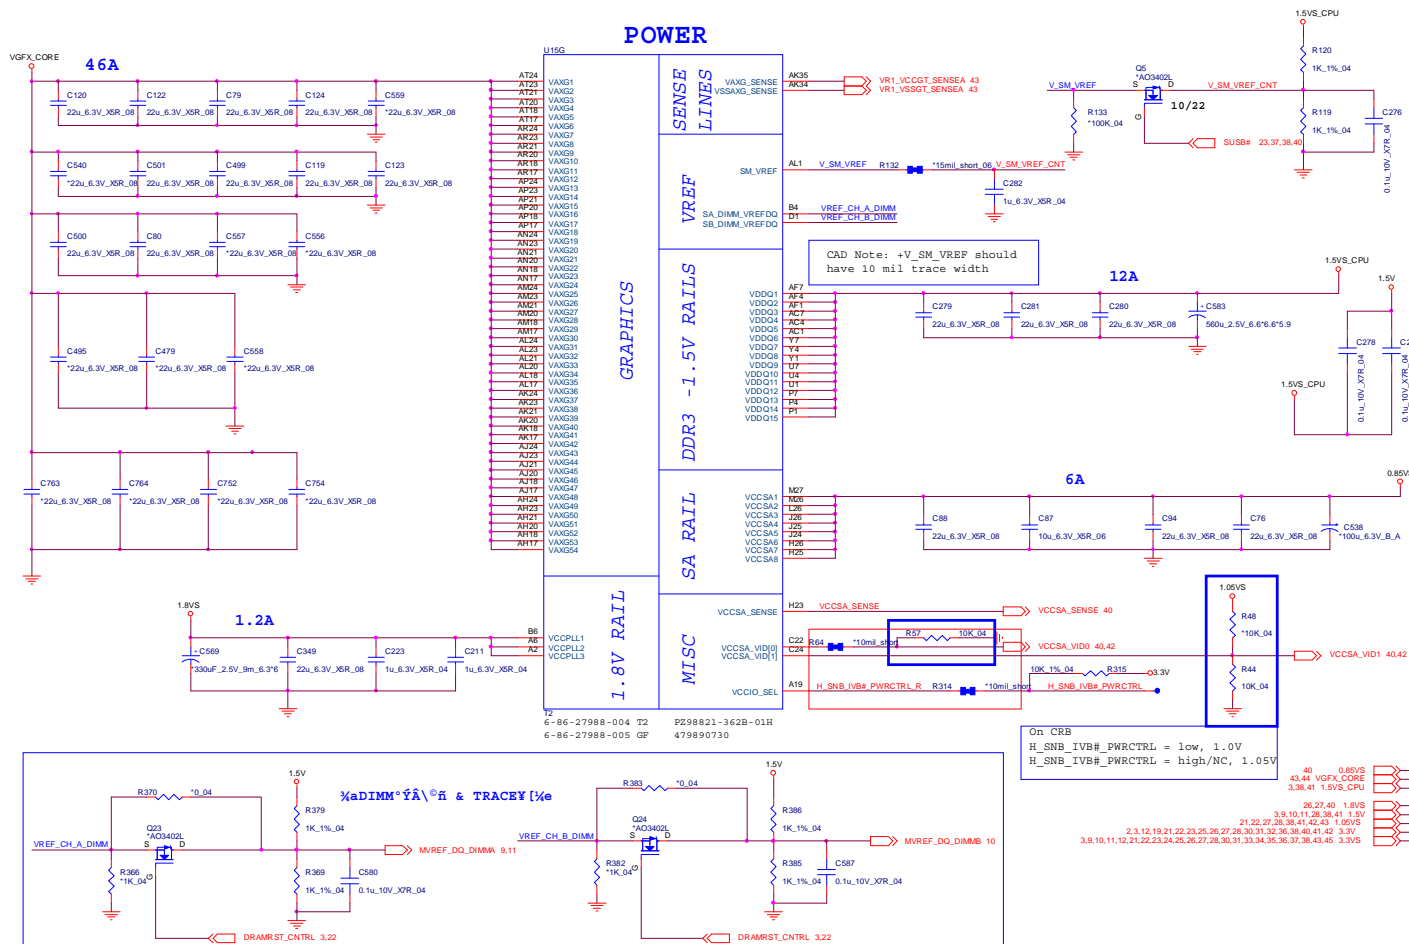Sheet 6 of 55
Ivy Bridge 5/7



Ivy Bridge 6/7

Ivy Bridge Processor 6/7 (GND)

B.Schematic Diagrams






Sheet 7 of 55
Ivy Bridge 6/7

CAD Note: 0 ohm resistor
should be placed close
to CPU

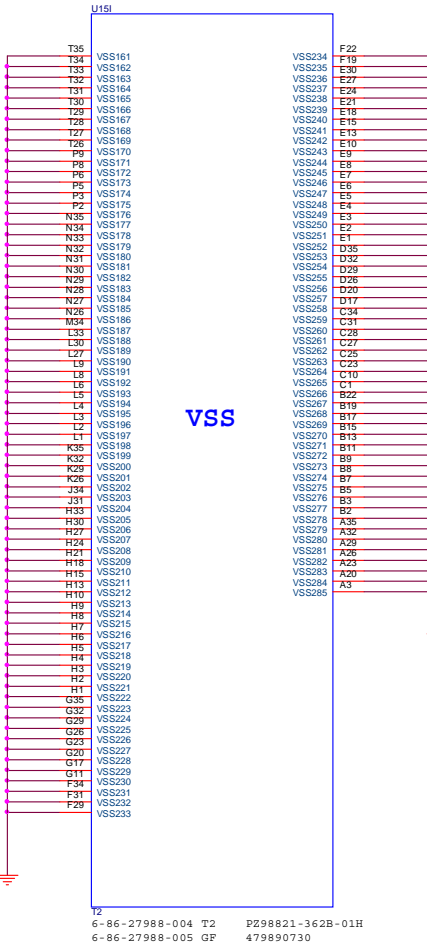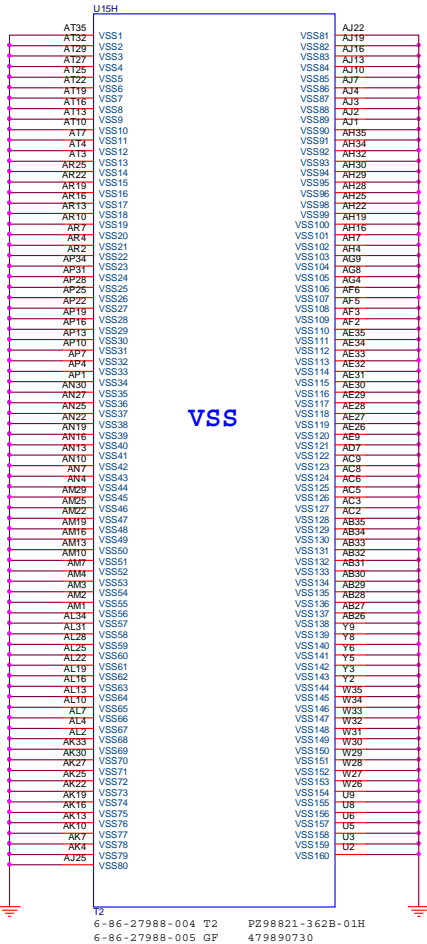

Ivy Bridge 7/7

Ivy Bridge Processor 7/7 (RESERVED)

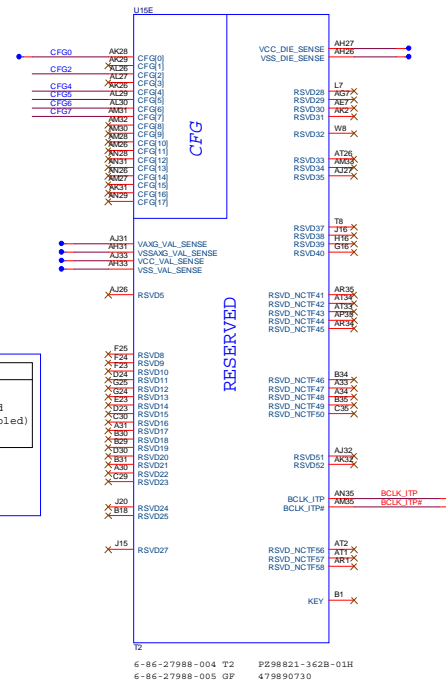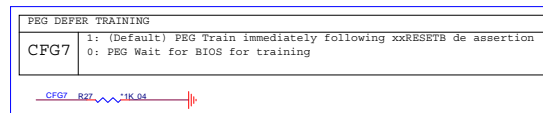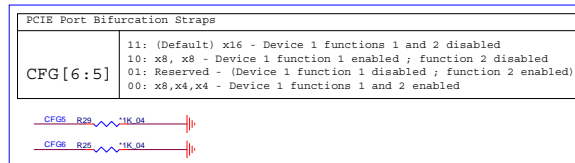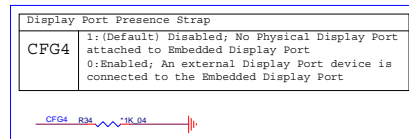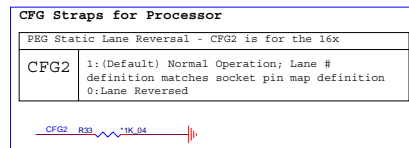

Sheet 8 of 55
Ivy Bridge 7/7

2,3,6,12,18,21,22,23,25,26,27,28,30,31,32,36,38,40,41,42 3.3V


Schematic Diagrams

DDR3 SO-DIMM A_0

SO-DIMM A_0

CHANGE TO STANDARD

Sheet 9 of 55
DDR3 SO-DIMM
A_0

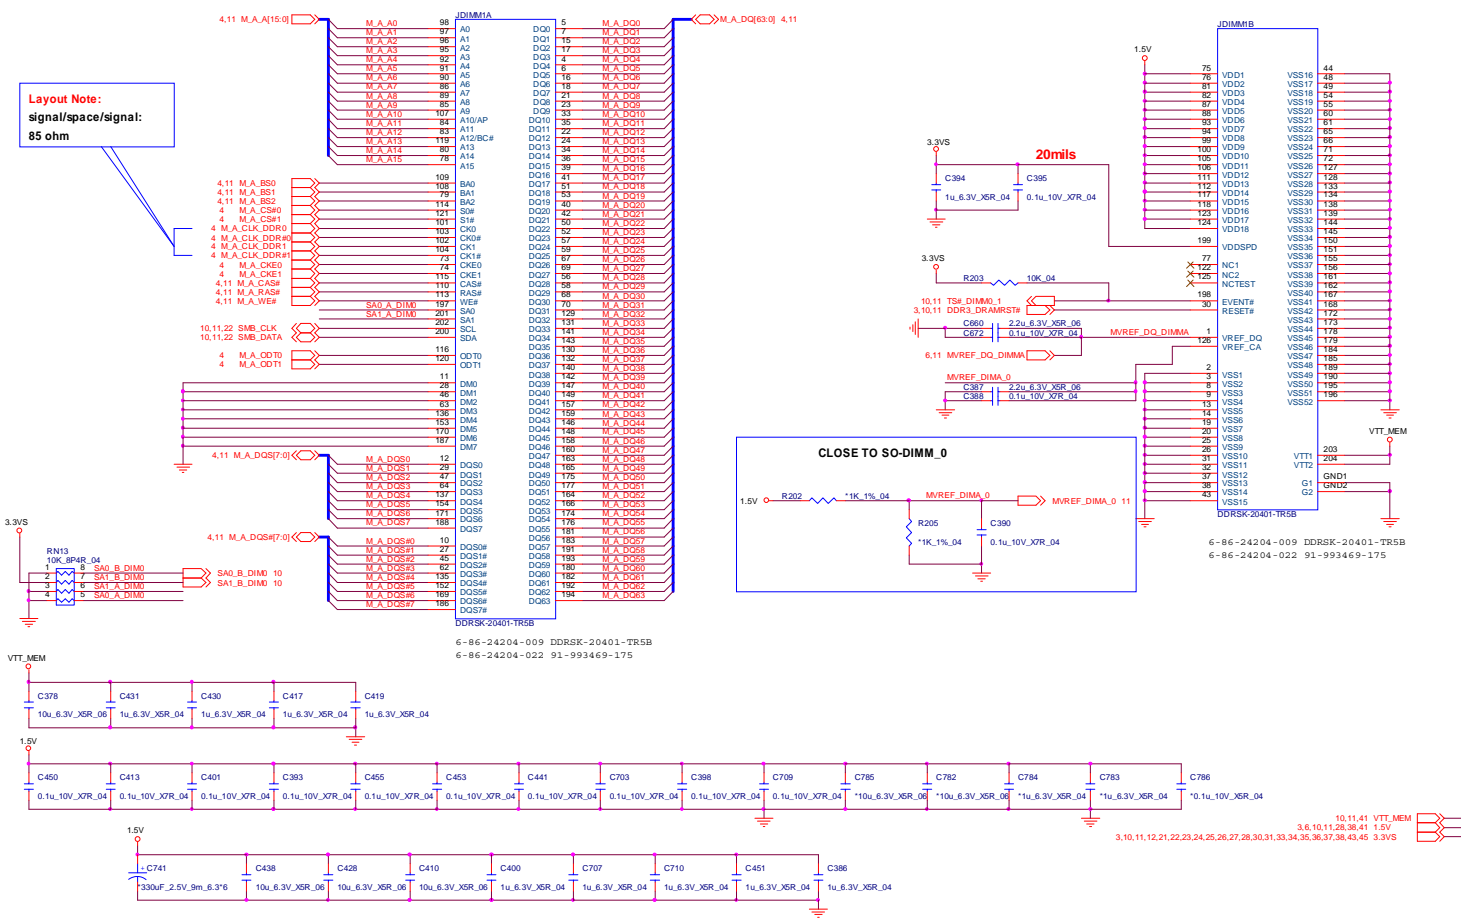

SO-DIMM B_0

The image displays a detailed PCB layout for the DORSK-20401-TR90. The layout is organized into several functional blocks:

- Top Left:** Contains two callouts for capacitors C429 and C423, both 10pF 50V NPO, 04, with labels for M.B. CLK, DOR0, and M.B. CLK, DOR1.
- Top Center:** A large pin header for M.B. A0 through M.B. A15, with a 150-pin connector. It also includes a callout for M.B. DQ0 through M.B. DQ15, with a 16-pin connector.
- Top Right:** A large pin header for VDD1 through VDD18, with a 18-pin connector. It also includes a callout for VSS1 through VSS18, with a 18-pin connector.
- Center:** The main component area, featuring a large rectangular component labeled DORSK-20401-TR90. It has numerous pins labeled with M.B. A0 through M.B. A15, M.B. DQ0 through M.B. DQ15, and M.B. DQ16 through M.B. DQ31. It also includes a callout for M.B. DQ32 through M.B. DQ31, with a 16-pin connector.
- Bottom Left:** A large rectangular component labeled DORSK-20401-TR90, with pins labeled M.B. A0 through M.B. A15, M.B. DQ0 through M.B. DQ15, and M.B. DQ16 through M.B. DQ31. It also includes a callout for M.B. DQ32 through M.B. DQ31, with a 16-pin connector.
- Bottom Center:** A large rectangular component labeled DORSK-20401-TR90, with pins labeled M.B. A0 through M.B. A15, M.B. DQ0 through M.B. DQ15, and M.B. DQ16 through M.B. DQ31. It also includes a callout for M.B. DQ32 through M.B. DQ31, with a 16-pin connector.
- Bottom Right:** A large rectangular component labeled DORSK-20401-TR90, with pins labeled M.B. A0 through M.B. A15, M.B. DQ0 through M.B. DQ15, and M.B. DQ16 through M.B. DQ31. It also includes a callout for M.B. DQ32 through M.B. DQ31, with a 16-pin connector.

Key layout notes and specifications include:


- Layout Note:** signal/space:signal: 8 / 4 / 8
- 20mils:** Dimension for the spacing between components.
- CLOSE TO SO-DIMM1:** Dimension for the spacing between components.
- Layout Note:** SO-DIMM_1 is placed farther from the GMCH than SO-DIMM_0
- 9.11, 12, 21, 22, 23, 24, 25, 26, 27, 28, 30, 31, 33, 34, 35, 36, 37, 38, 41, 45:** List of pins for VTT_MEM.
- 9.11, 12, 21, 22, 23, 24, 25, 26, 27, 28, 30, 31, 33, 34, 35, 36, 37, 38, 41, 45:** List of pins for VTT_MEM.

DDR3 SO-DIMM A_1


CHANGE TO STANDARD

Sheet 11 of 55
DDR3 SO-DIMM
A_1

PANEL CONNECTOR

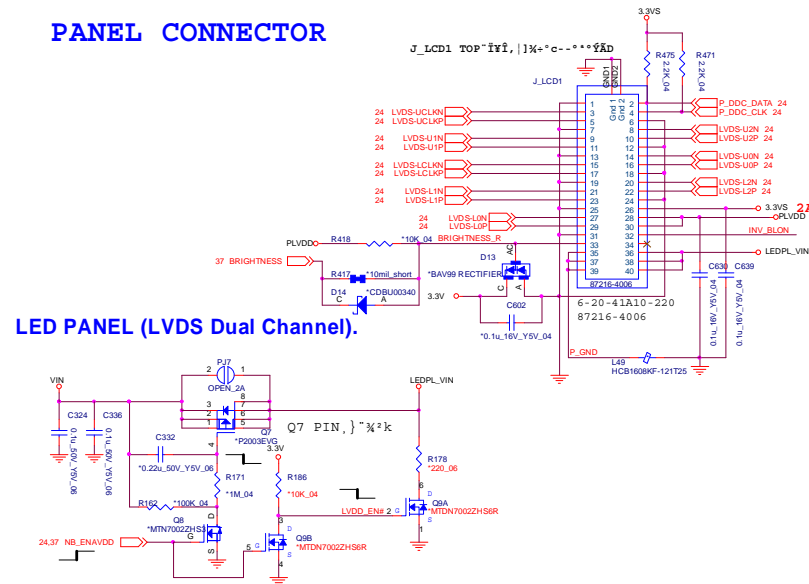


W150ERQAY©694V-0 -G"ú®e«OA®:q*ý
 A & B Yó,¼«º®i®E*«ºD5V-Å-n¿|XUL 94V-0
 ~NViVH0EY|A"£~Ñµ|panel*º:q~Wu,ð*«OA®:q*ý

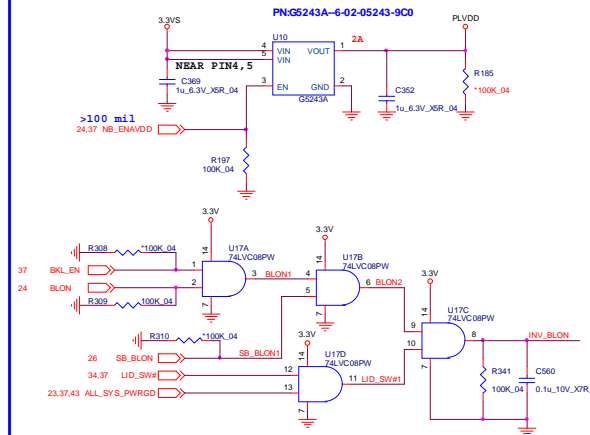[illegible]


VGA PCI-E Interface

Sheet 13 of 55
VGA PCI-E
Interface

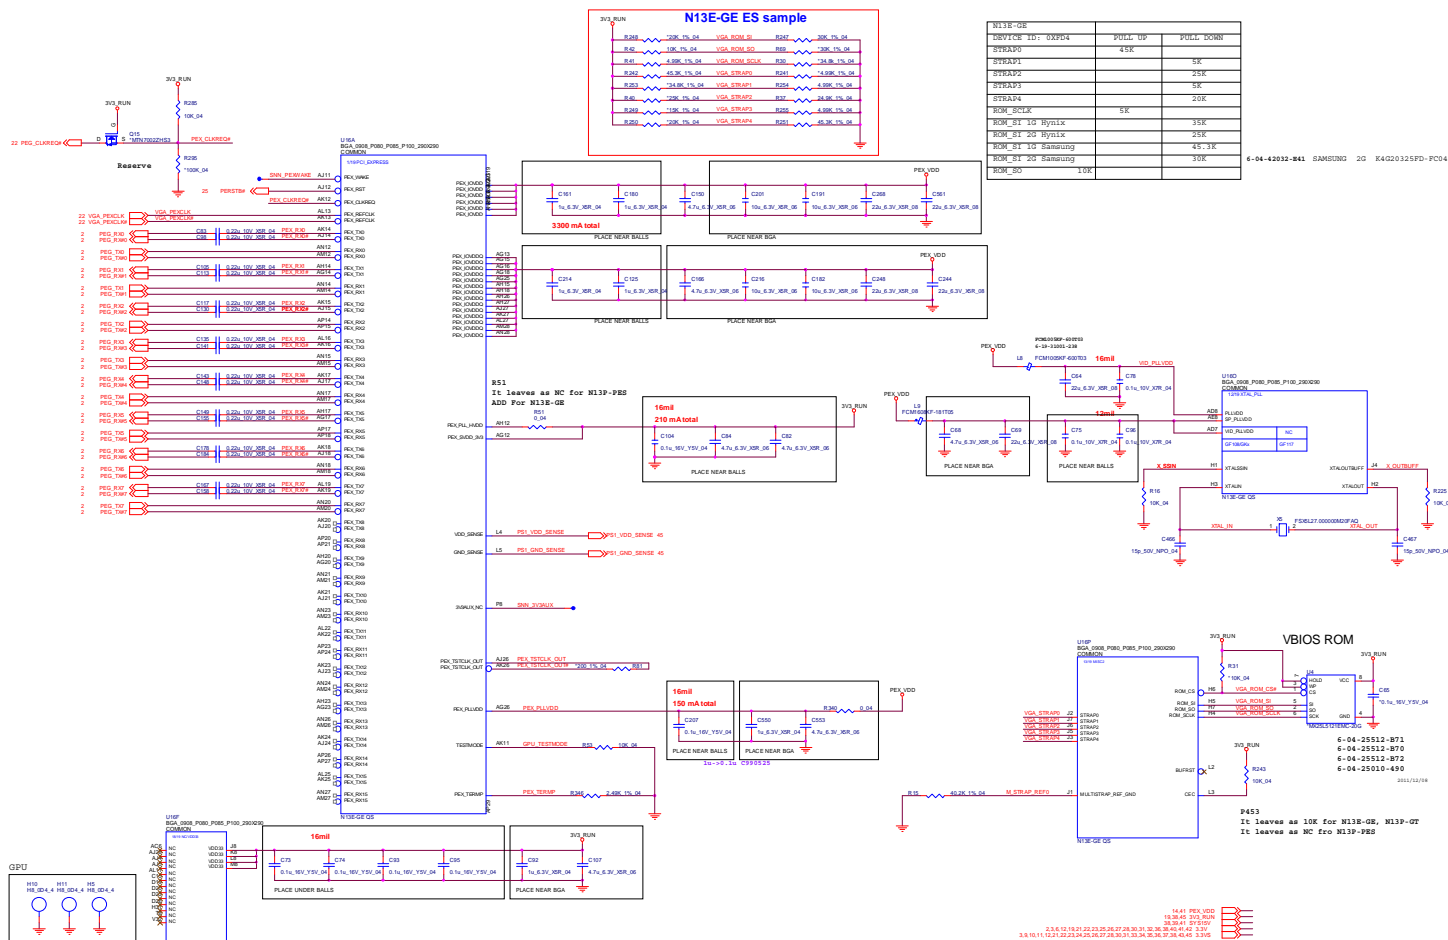

VGA Frame Buffer Interface

Frame Buffer Interface

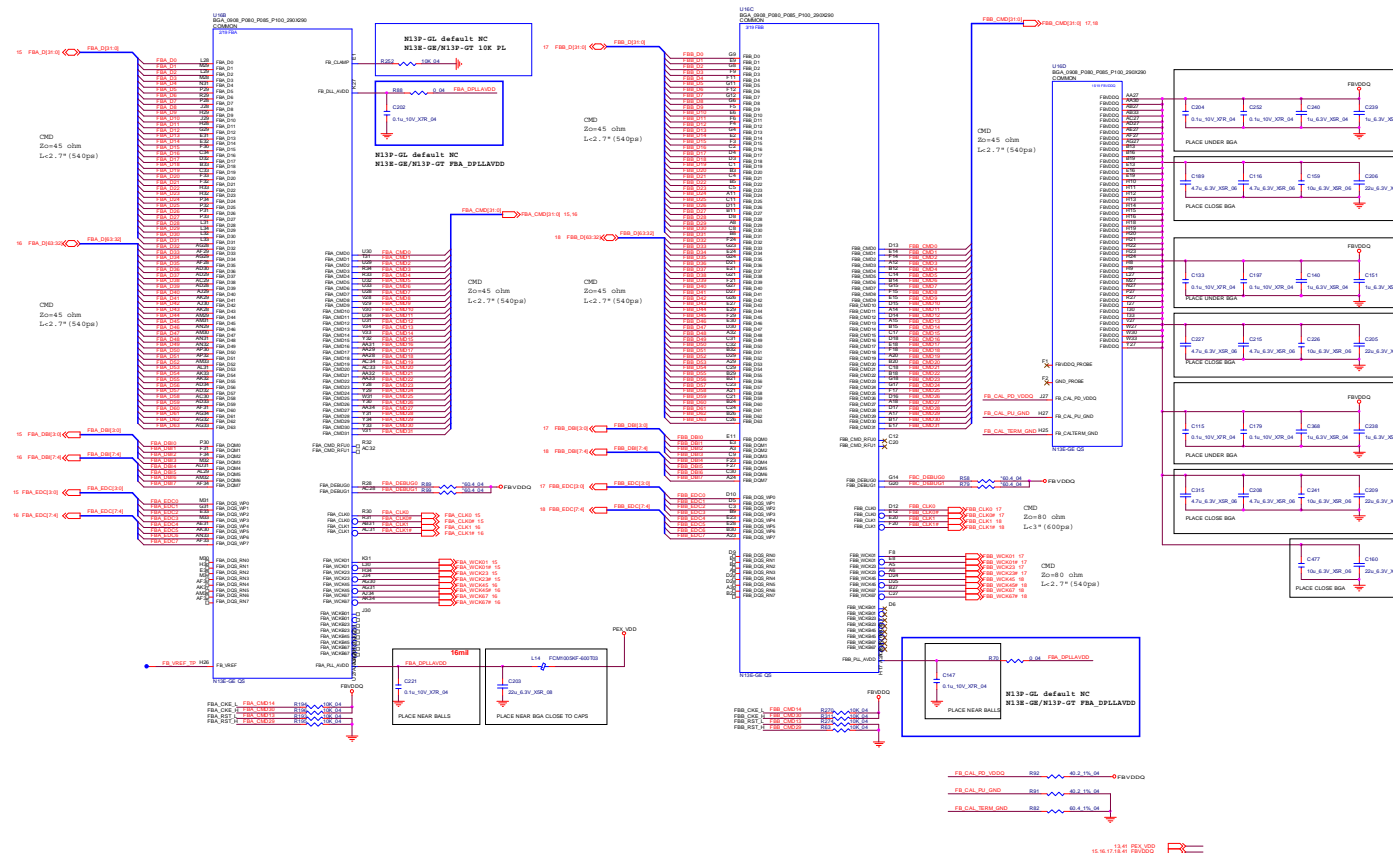


Sheet 14 of 55
VGA Frame Buffer Interface


VGA Frame Buffer A

B.Schematic Diagrams

Sheet 15 of 55
VGA Frame Buffer
A

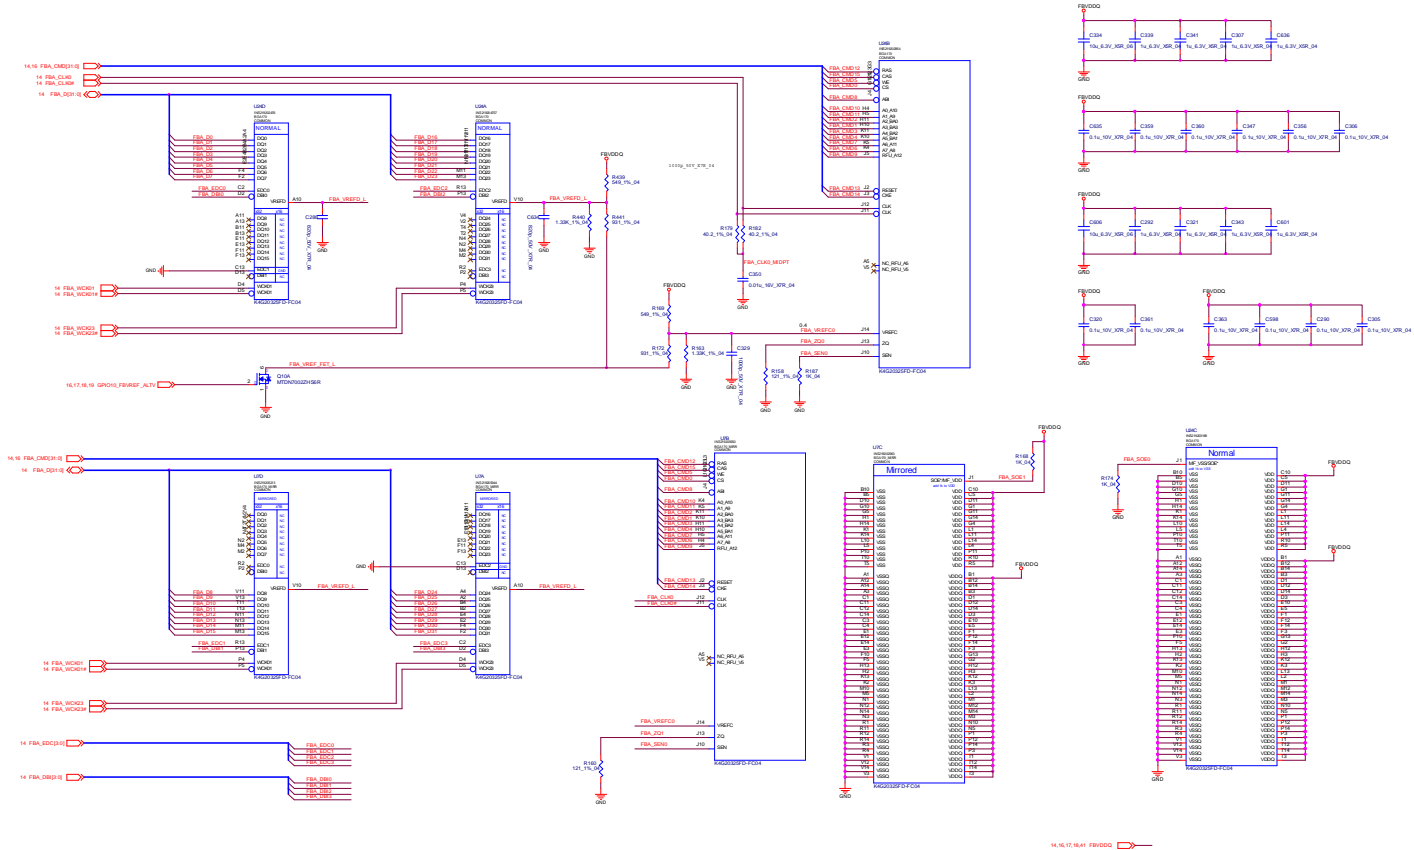



VGA Frame Buffer A

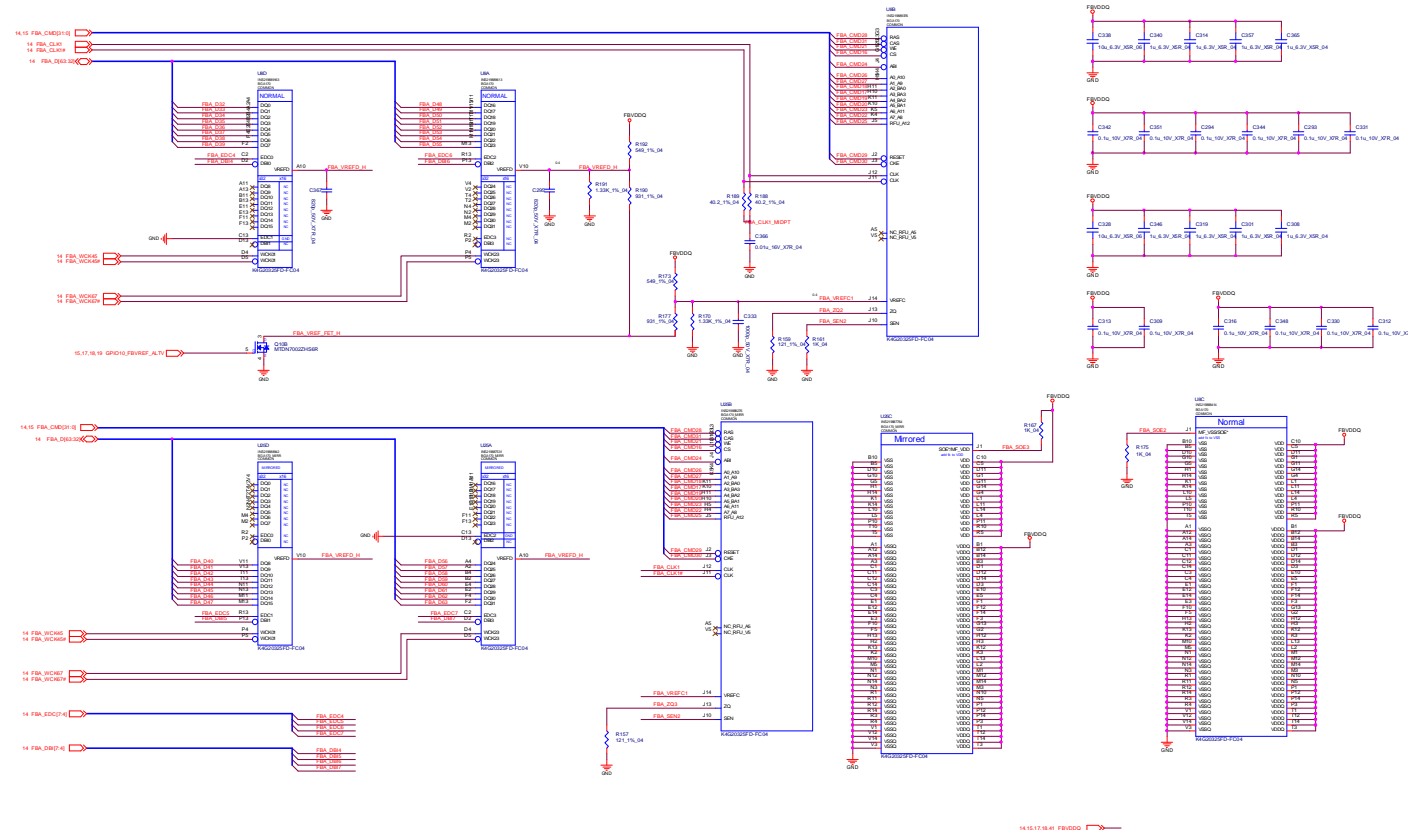

Sheet 16 of 55
VGA Frame Buffer
A

VGA Frame Buffer B

6. Frame Buffer Partition B - Lower Half



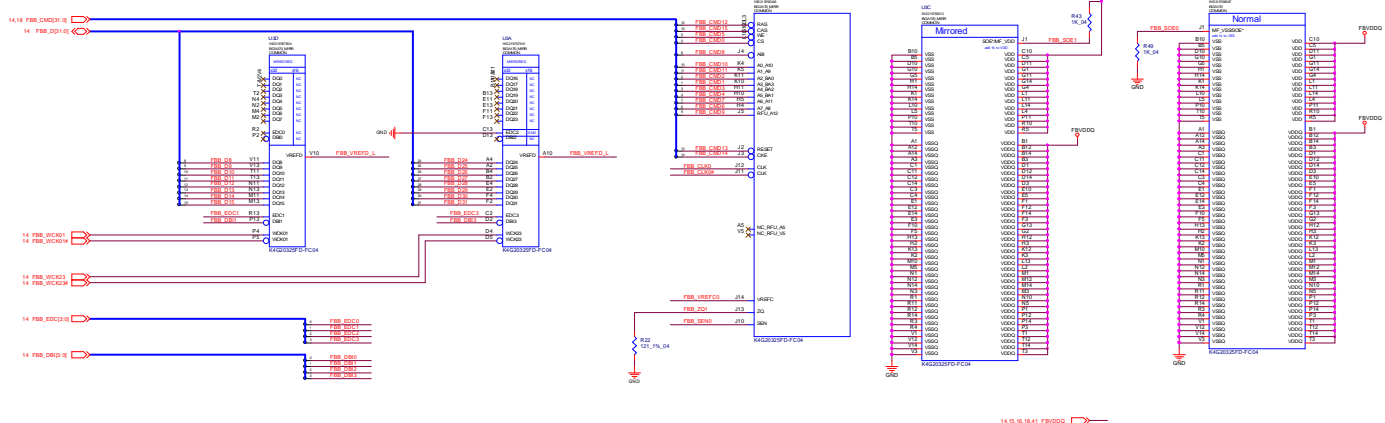
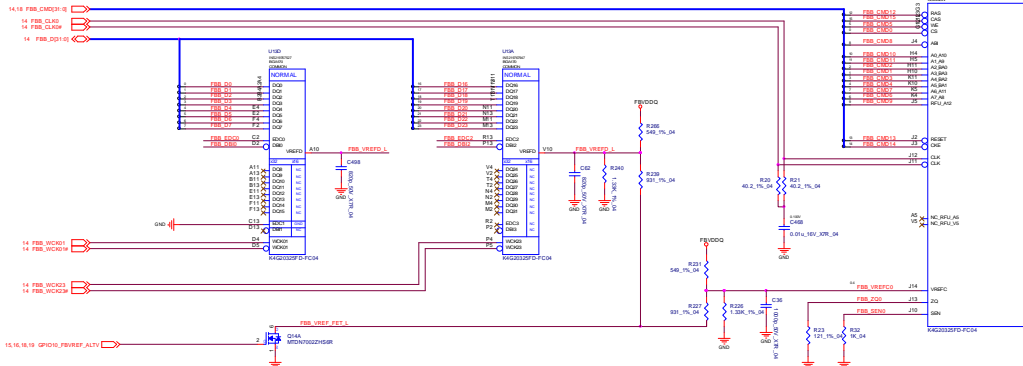


B. Schematic Diagrams

Sheet 17 of 55
VGA Frame Buffer
B

VGA Frame Buffer B

7. Frame Buffer Partition B - Upper Half

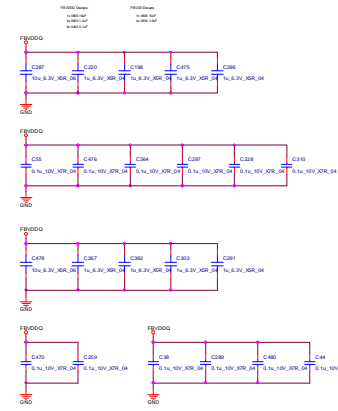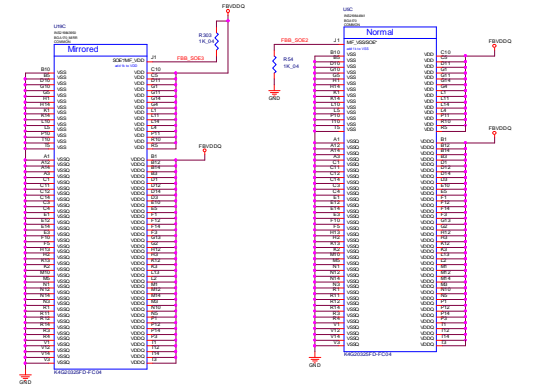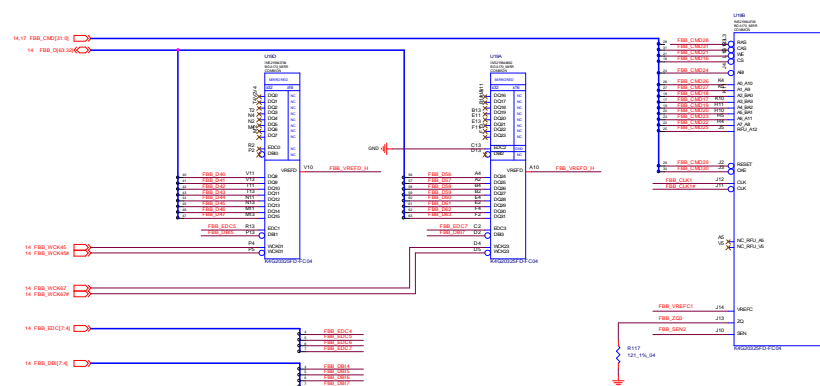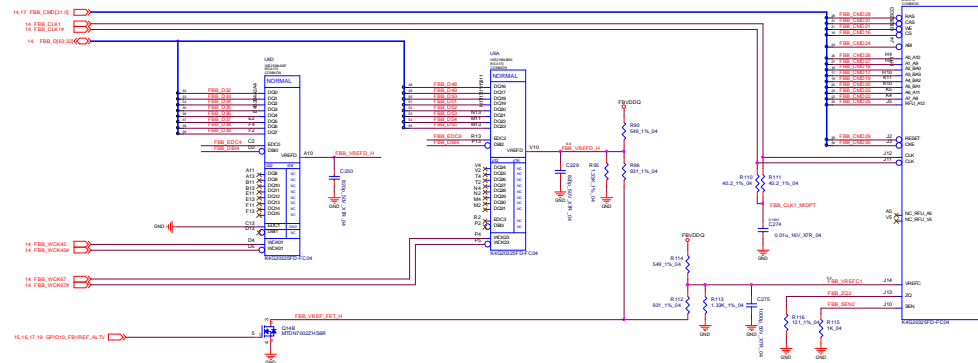


Sheet 18 of 55
VGA Frame Buffer
B

B.Schematic Diagrams


VGA I/O

Sheet 19 of 55
VGA I/O

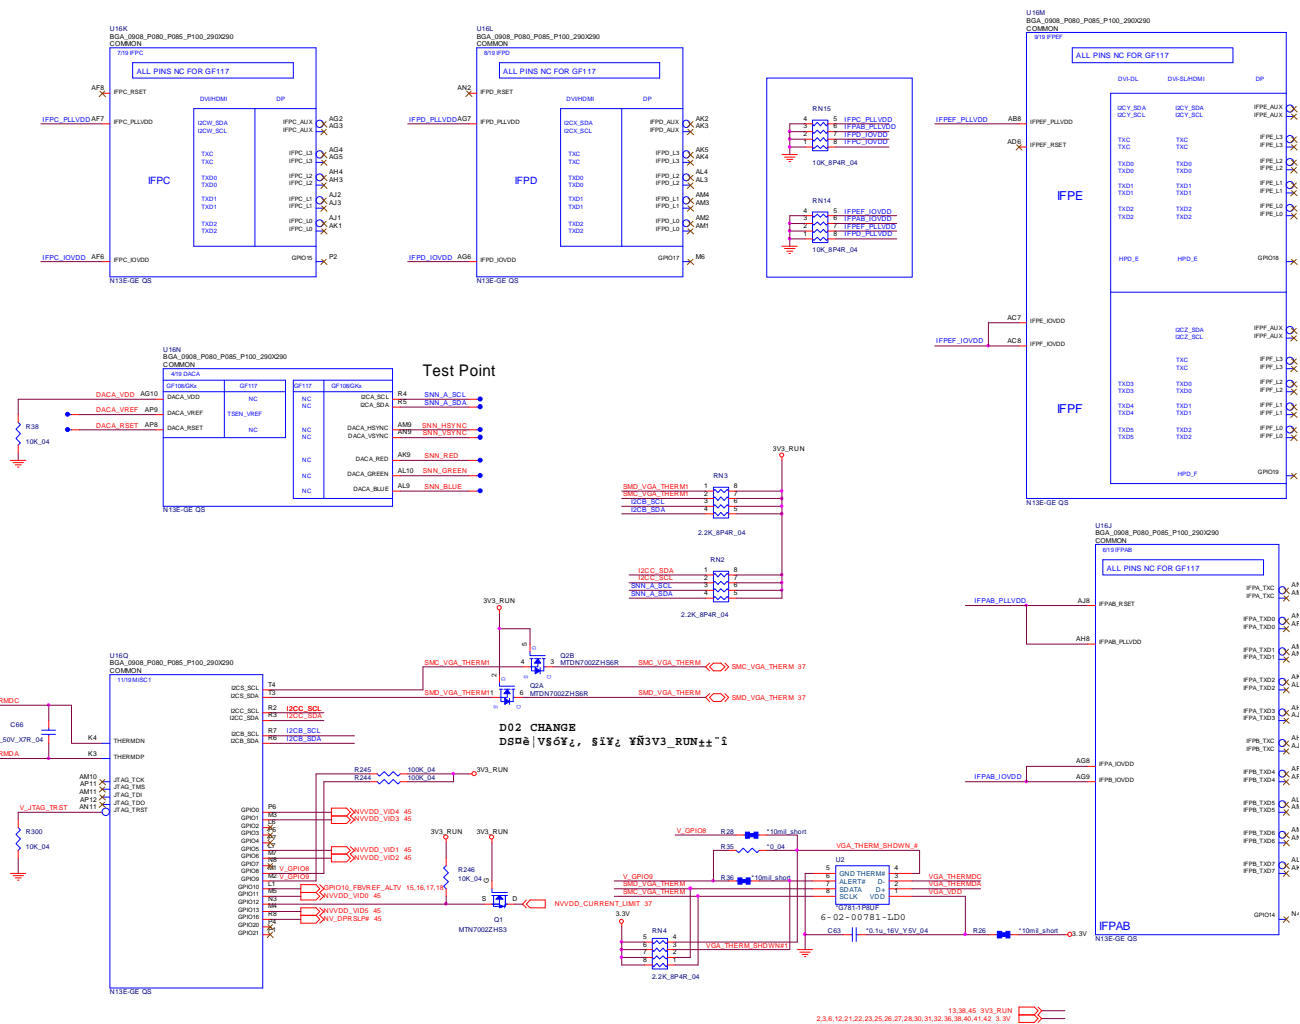

Schematic Diagrams

VGA NVDD Decoupling

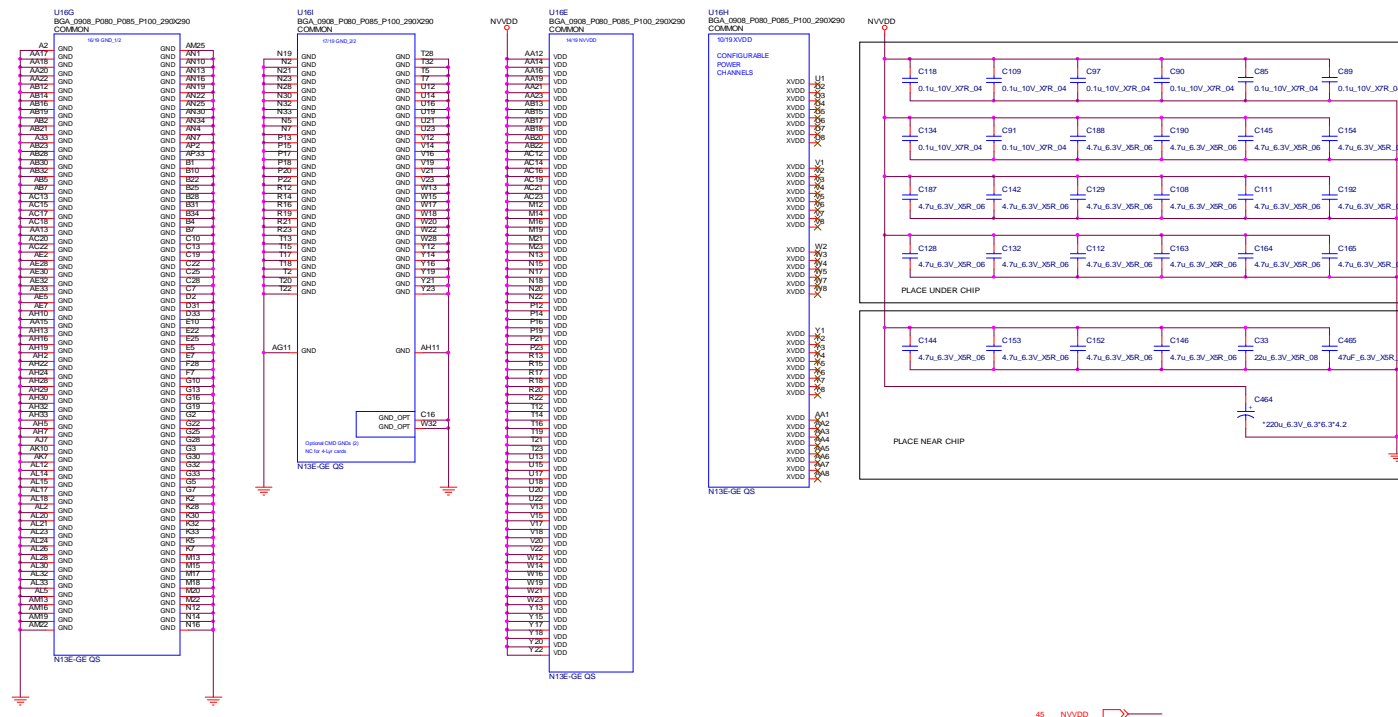

Sheet 20 of 55
VGA NVDD
Decoupling

B.Schematic Diagrams

PantherPoint M 1/9

Sheet 21 of 55
PantherPoint M 1/9



B.Schematic Diagrams

PantherPoint M 2/9 B - 23


[illegible]

Sheet 22 of 55
PantherPoint M 2/9

PantherPoint M 3/9


Sheet 23 of 55
PantherPoint M 3/9

PantherPoint -M (DMI, FDI, GPIO)

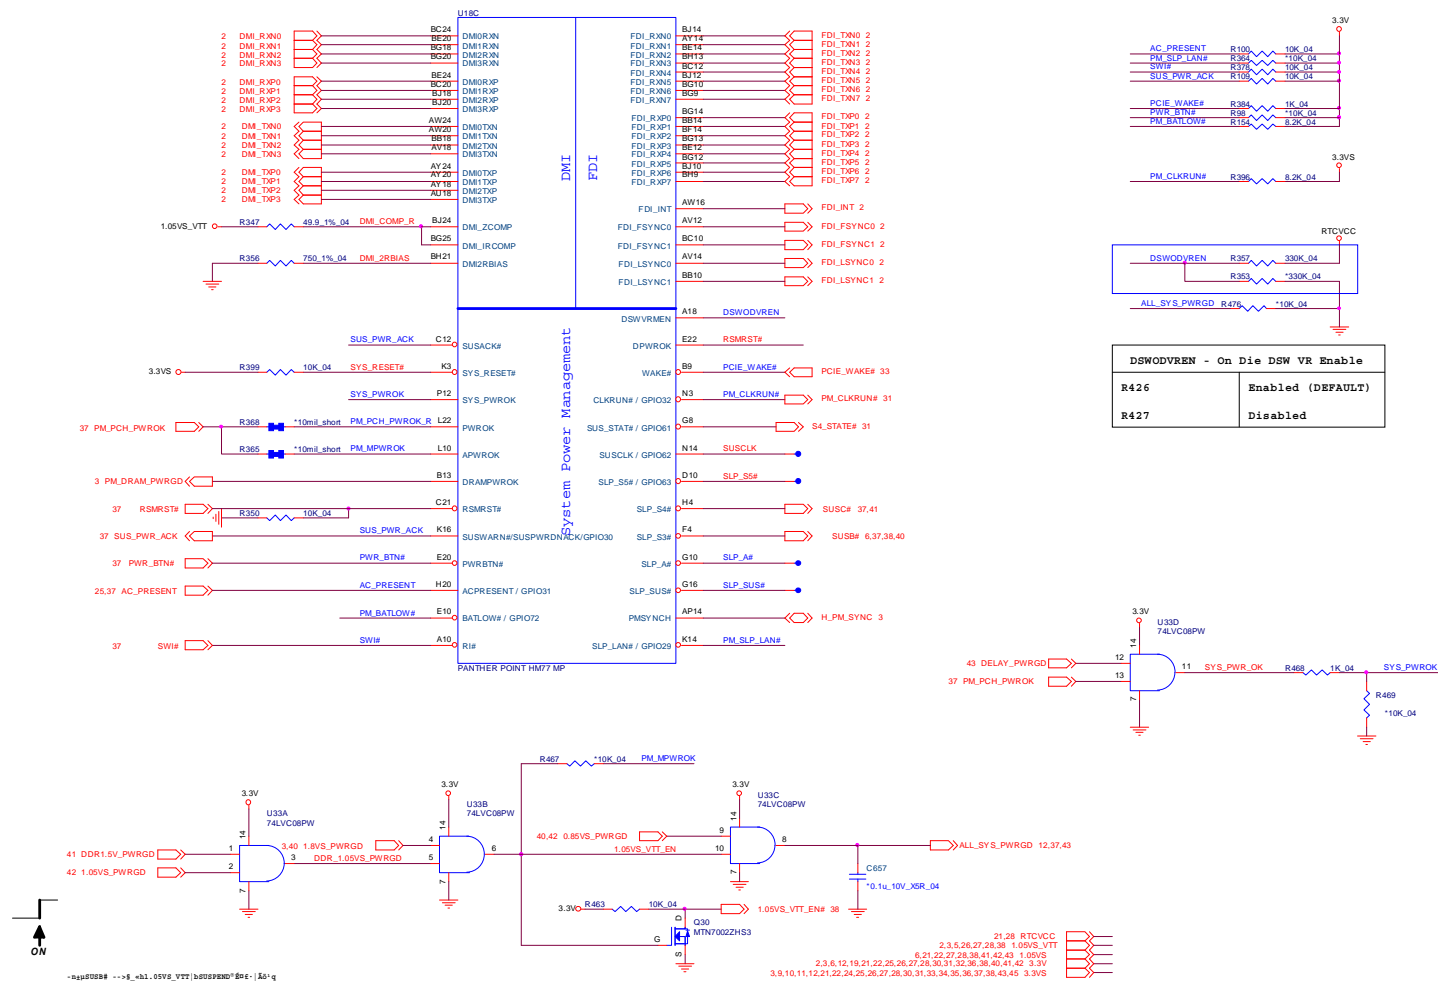

PantherPoint M 4/9

PantherPoint -M (LVDS,DDI)

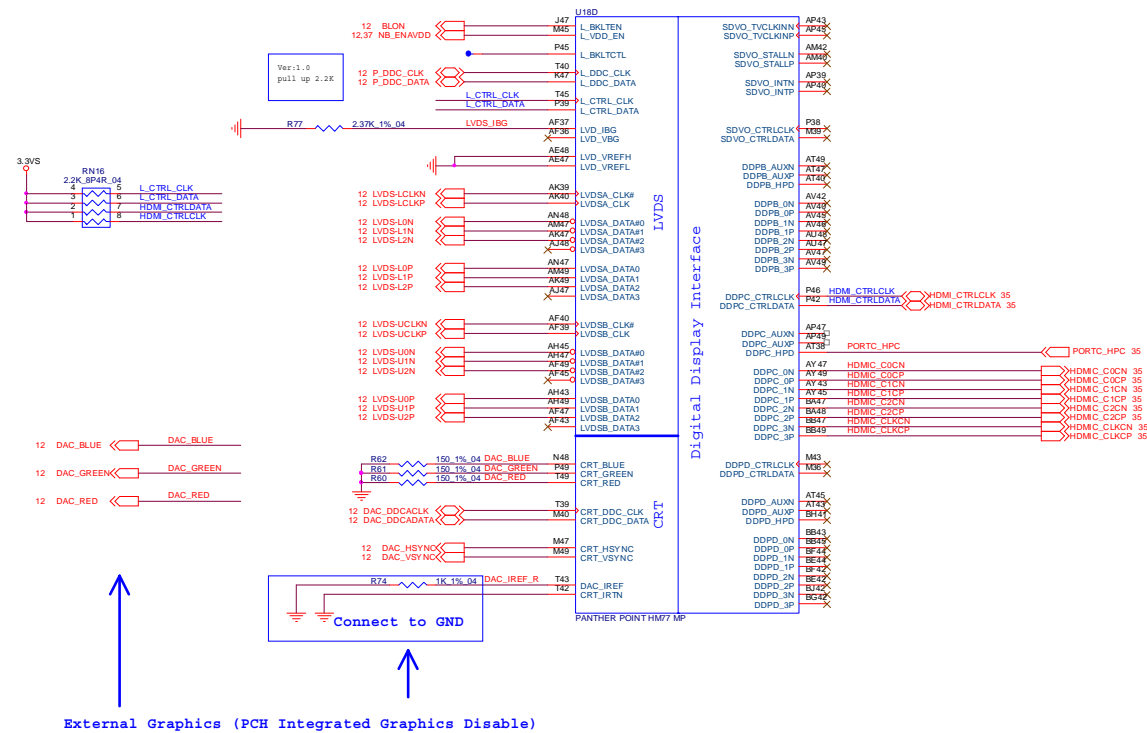


Sheet 24 of 55
PantherPoint M 4/9

PantherPoint -M (PCI,USB,NVRAM)




PantherPoint - M (GPIO,VSS NCTF,RSVD)

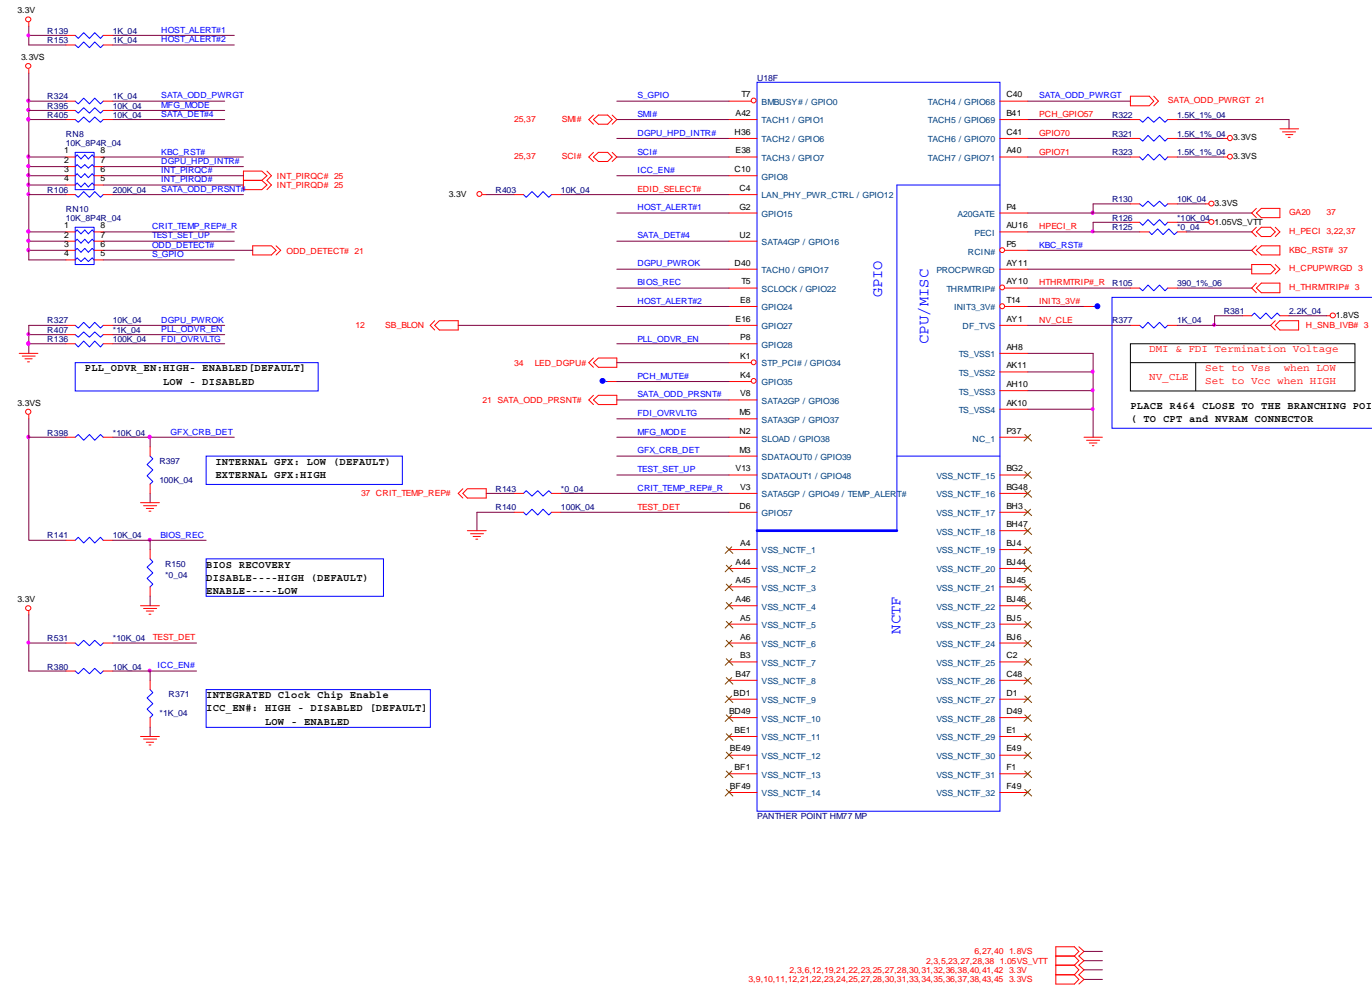

PantherPoint M 7/9

Sheet 27 of 55
PantherPoint M 7/9

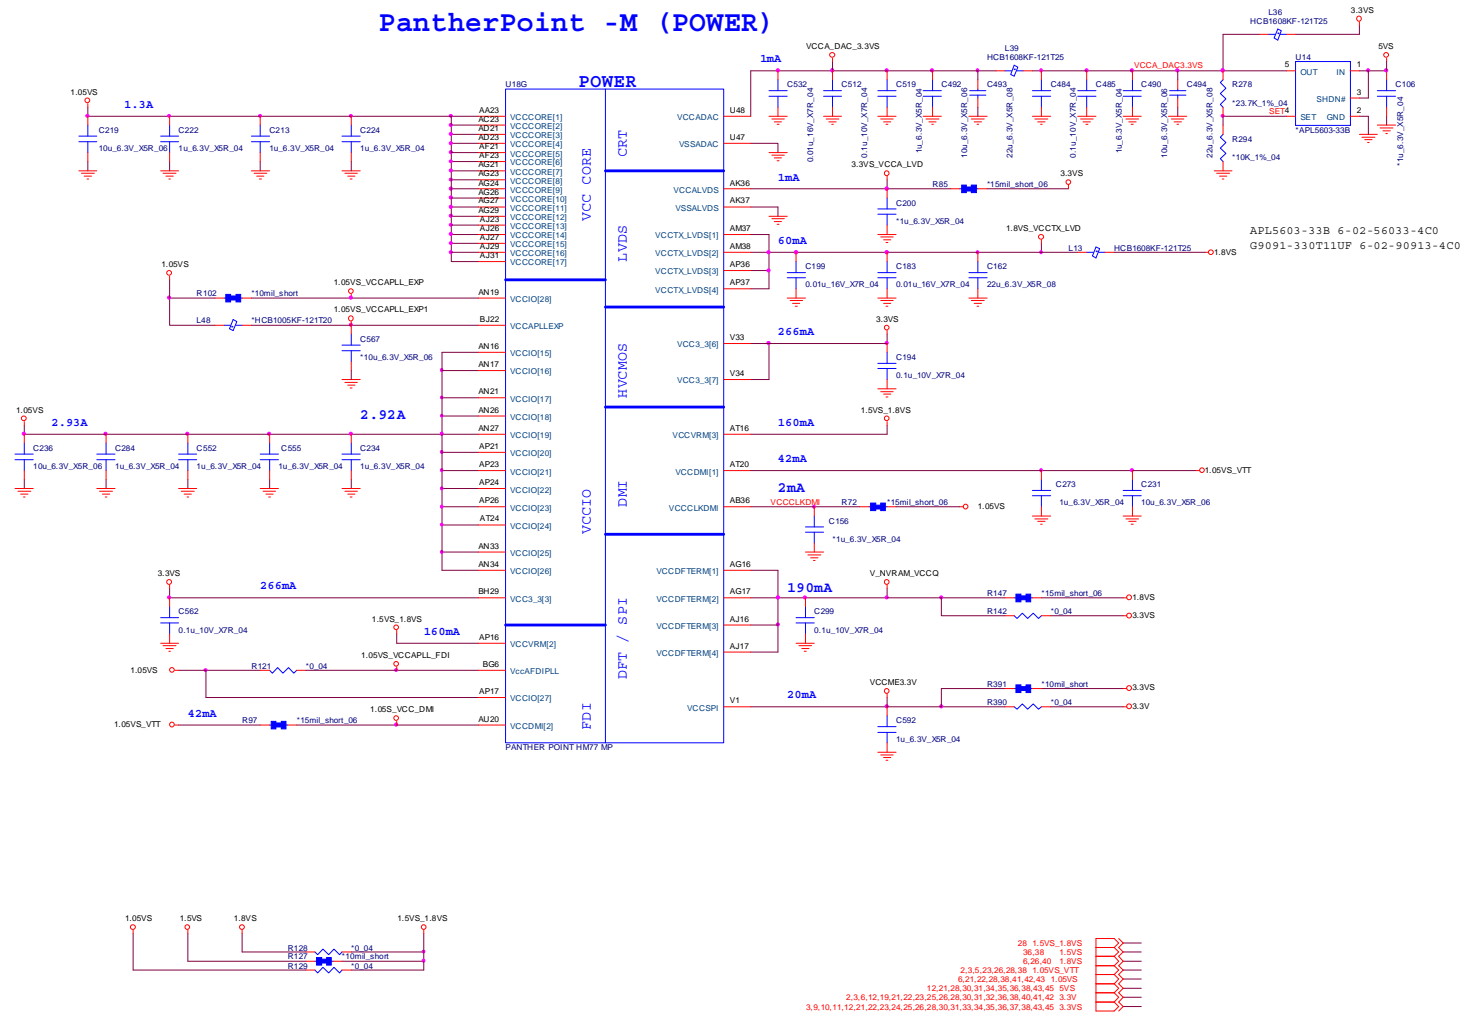

therPoint M 8/9 B - 29

POWER

USB

PCI/GPIO/LPC

SATA

MISC

CPU

HDA

Table:

Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

Note: C417 - STUFFED ONLY FOR CPT INTERPOSER; UNSTUFF FOR CPT


CougarPoint power supply range		
Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

Sheet 28 of 55
PantherPoint M 8/9

Schematic Diagrams








PantherPoint M 9/9

PantherPoint -M (GND)

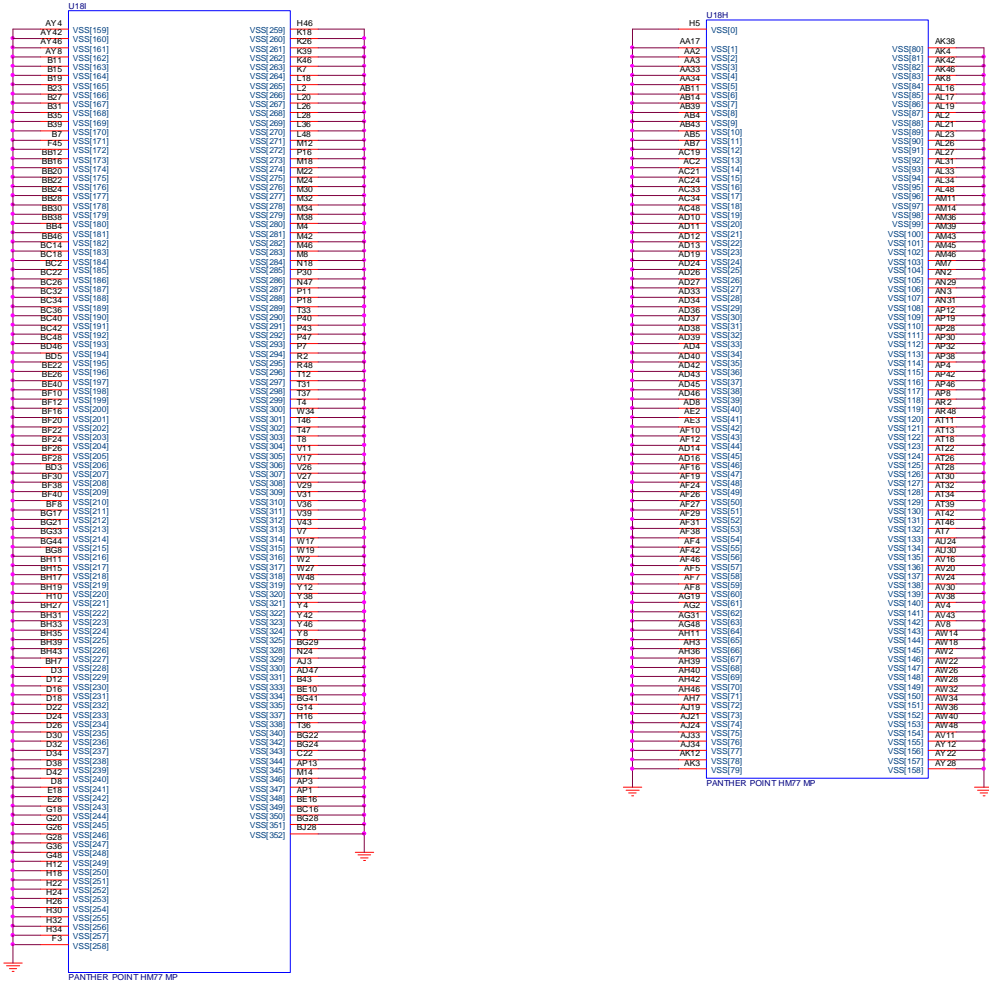

Voltage Rail	Voltage	S0 Iccmax Current (A)
V_CPU_IO	1.05	1 (mA)
V5REF	5	1 (mA)
V5REF_Sus	5	1 (mA)
Vcc3_3	3.3	0.266
VccADAC3	1.05	1 (mA)
VccADPLLA	1.05	0.08
VccADPLLB	1.05	0.08
VccCore	1.05	1.3
VccDMI	1.1	0.042
VccIO	1.05	2.925
VccASW	1.05	1.01
VccSPI	3.3	0.020
VccDSW3_3	3.3	2 (mA)
VccDFTERM	1.8	0.19
VccBus3_3	3.3	0.097
VccBusHDA	3.3	1 (mA)
VccVFM	1.5	0.16
VccCLKDMI	1.05	0.02
VccSSC	1.05	0.095
VccDIFFCLKN	1.05	0.055
VccALVDS	3.3	1 (mA)
VccTX_LVDS	1.8	0.06

Sheet 30 of 55
Mini PCIE, FAN,
Audio Con

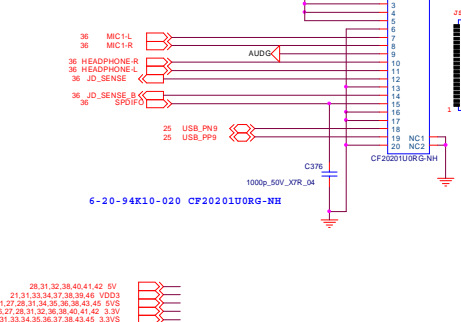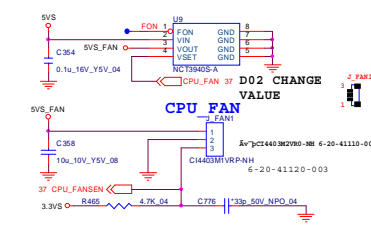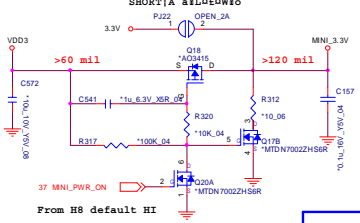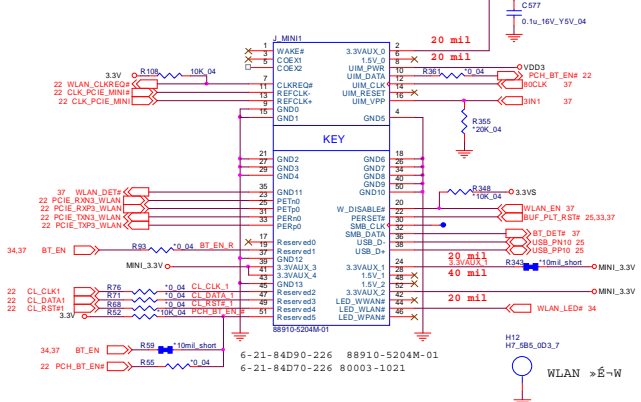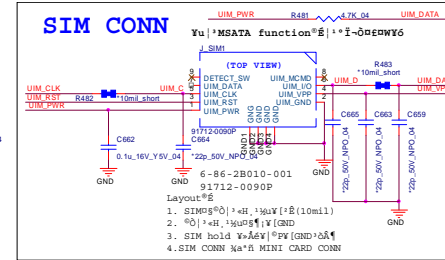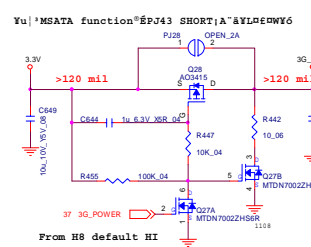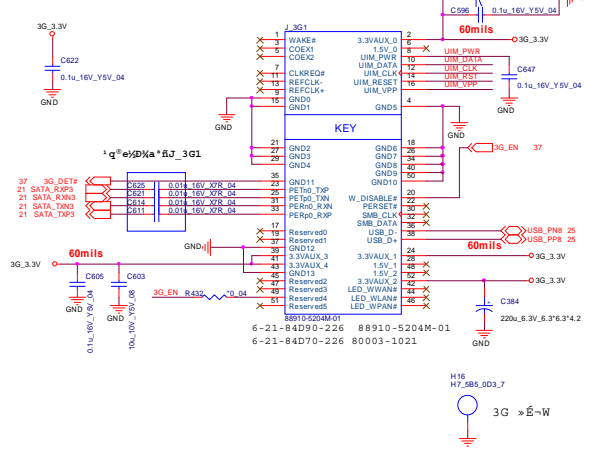


USB Charge, CCD, TPM, Multi-Con


[illegible]

CTL1	CTL2	CTL3:	0	0	0----> Out discharge, power switch Off
CTL1	CTL2	CTL3:	0	x	1----> Dedicated charging port, auto-detect
CTL1	CTL2	CTL3:	1	0	1----> Dedicated charging port, Divider Mode only
CTL1	CTL2	CTL3:	1	1	1----> Charging downstream port, BC1.2.


Co-lay

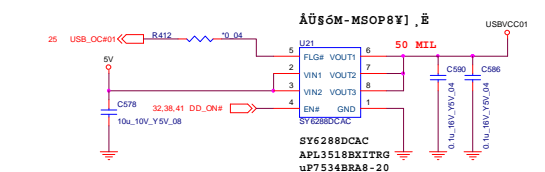


CLICK CONN

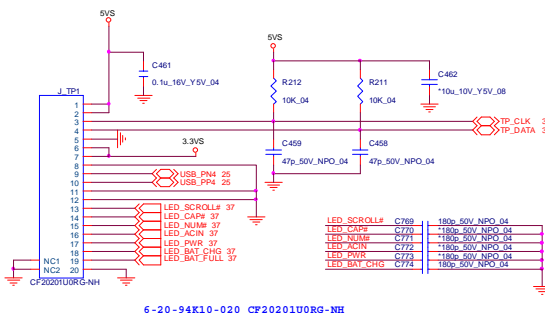

CCD

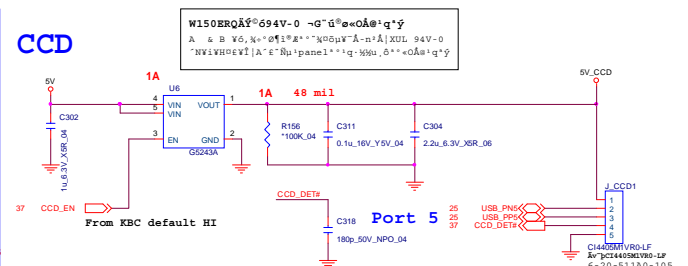


TPM 1.2

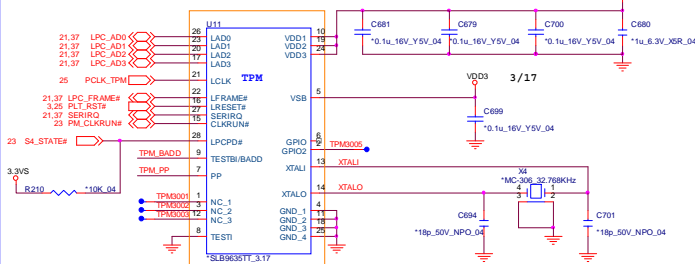


LPC reset timing:

LPCPD# inactive to LRST# inactive 32~96us

 
Hi: ACCESS



FOR POWER SWITCH BOARD

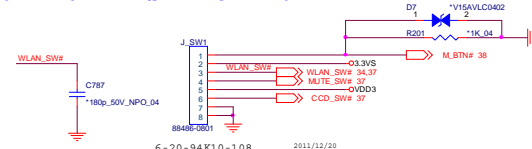


6-20-94K10-108 2011/12/20

 


ESATA/USB3.0 Connector


USB POWER SWITCH

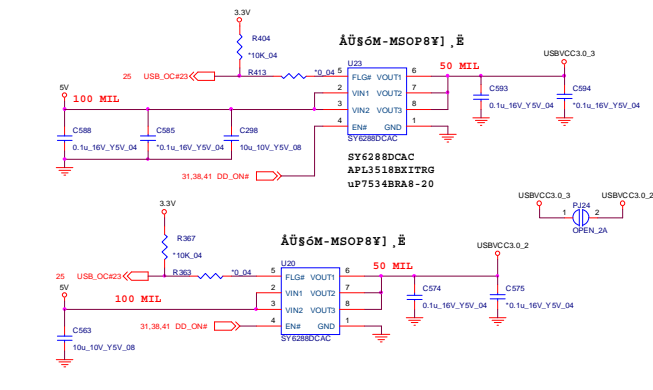


ESATA+USB3.0 USB2.0 PORT(PORT0) USB3.0 PORT(PORT1)

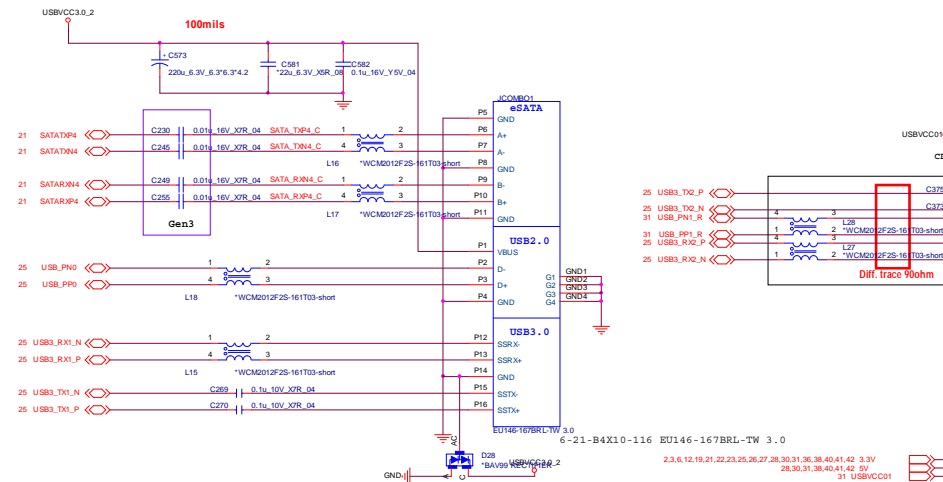

USB2.0 PORT(PORT2) USB3.0 PORT(PORT3)

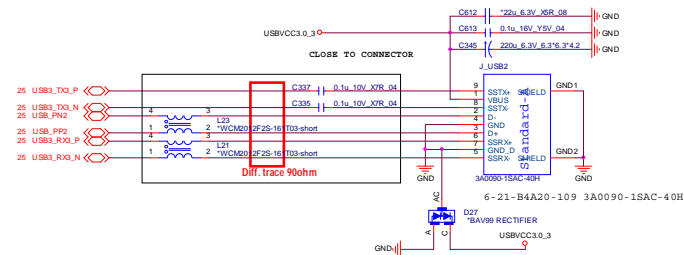

USB2.0 PORT(PORT1) Debug USB3.0 PORT(PORT2) USB2.0 Charge Function

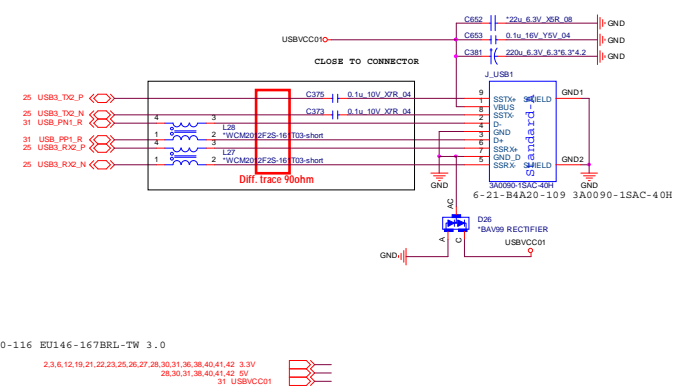






























Sheet 32 of 55
ESATA/USB3.0
Connector

Schematic Diagrams

Card Reader / LAN RTL8411


Sheet 33 of 55
Card Reader /
LAN RTL8411

       LAN (RTL8411)

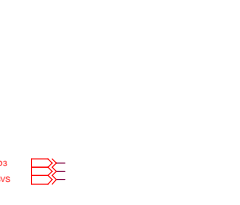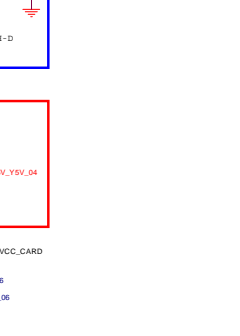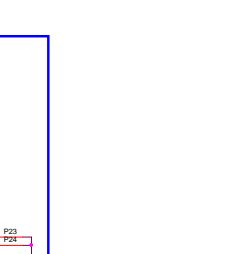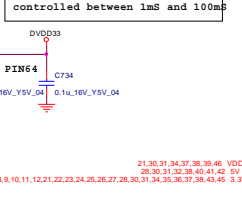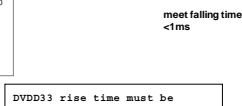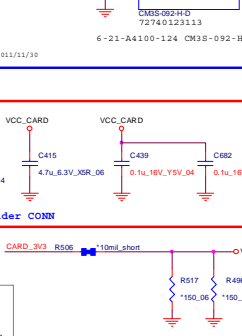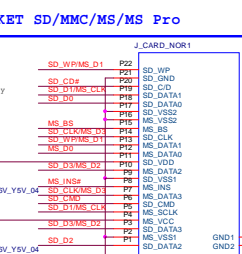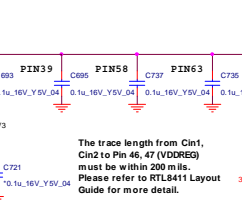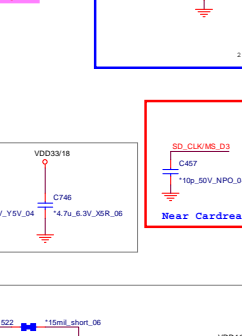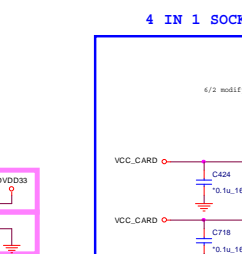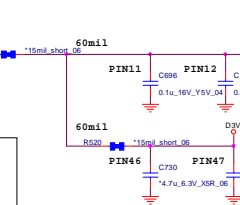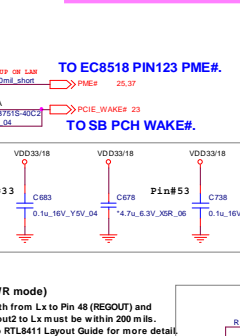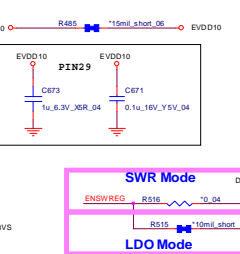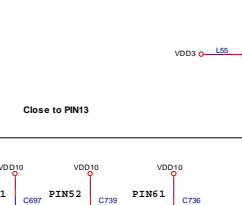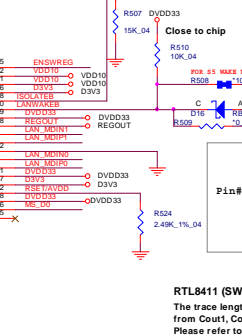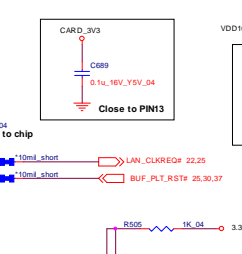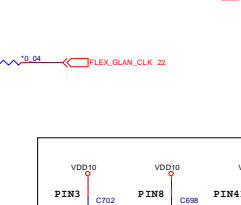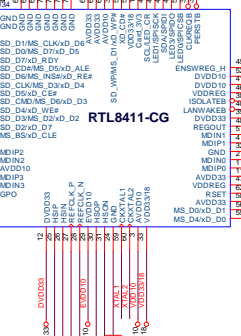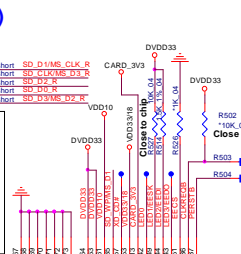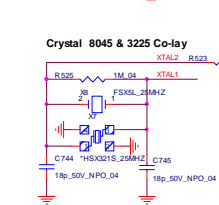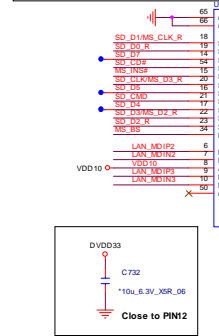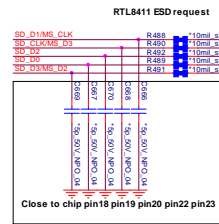


SATA HDD, VLED CON, LID SW

HDD CONNECT1 (MASTER)


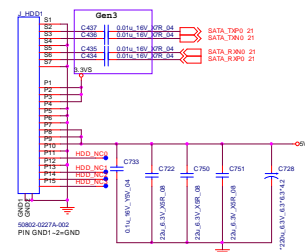


HDD CONNECT2 (SLAVE)

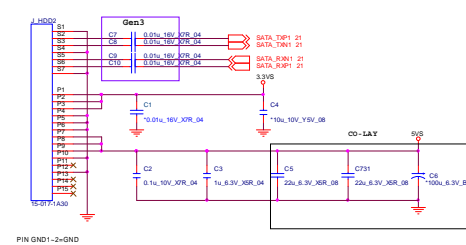

LID SWITCH

 W370ET W350ET LID / VGA LED CON

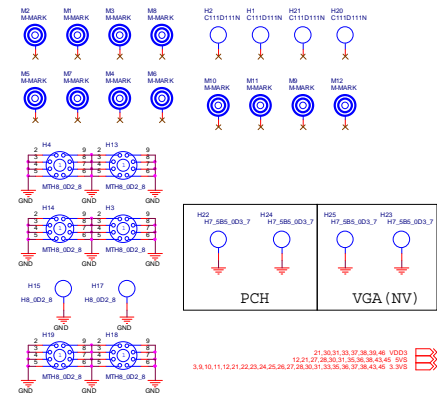


Sheet 34 of 55
SATA HDD, VLED
CON, LI DSW


Schematic Diagrams

HDMI, RJ45, Audio AMP


GIGA LAN (RTL8411)
LAN POART

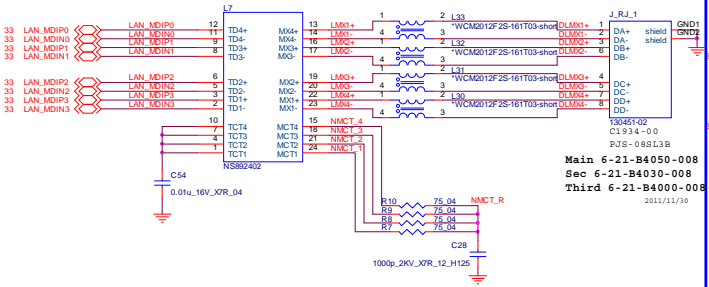


AUDIO AMP Class D
The volume control, the gain range is from -80db (Vvolume=5V) to +20db (Vvolume=0V) with 64 steps precise control.
PCB Footprint (PDSO-G24)

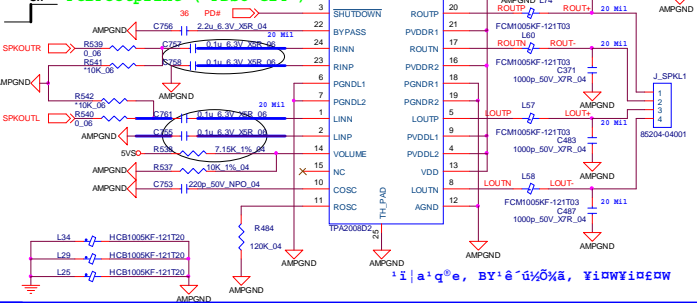


HDMI LEVEL SHIFT

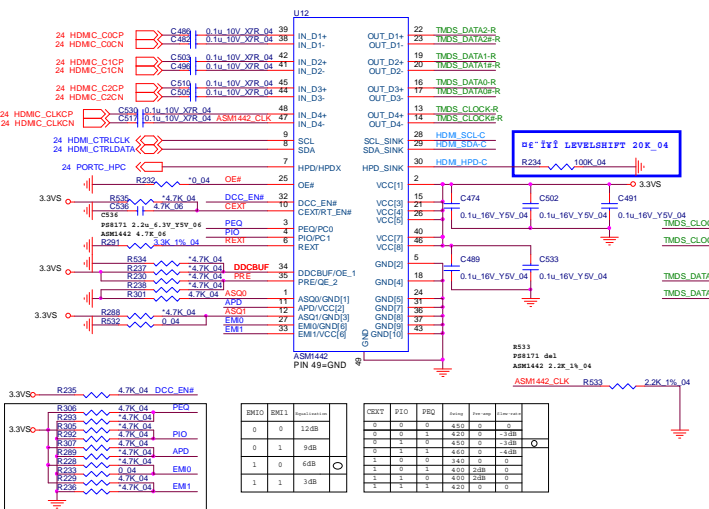

HDMI CONNECTOR

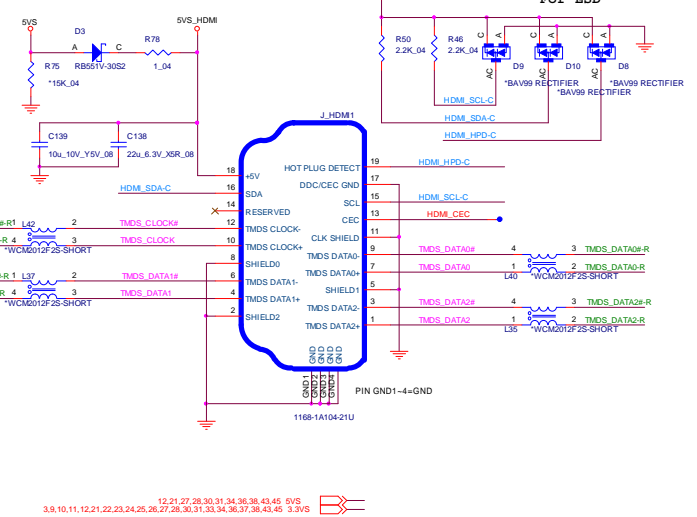


CODEC (ALC269)

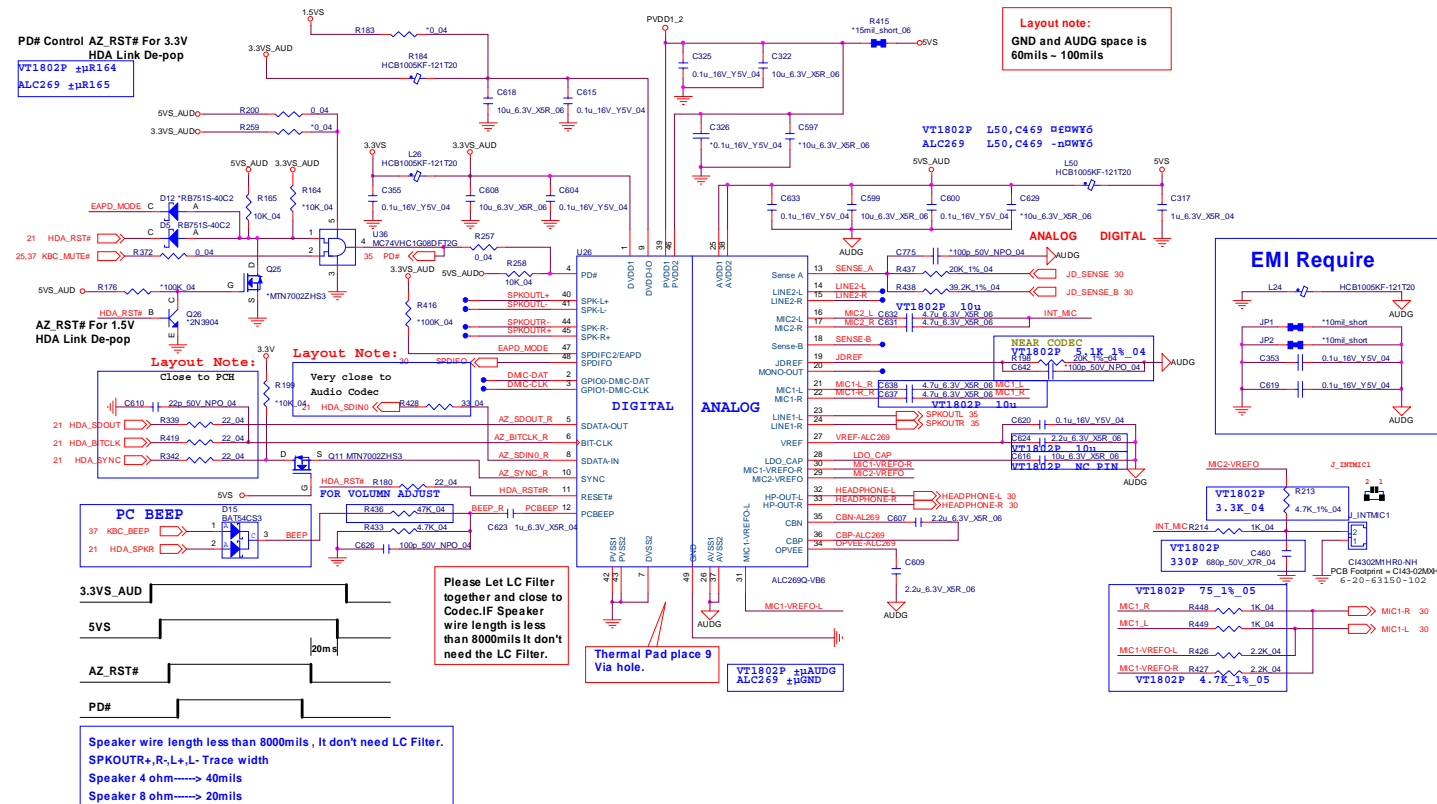


Sheet 36 of 55
Audio Codec
ALC269


B - 38 KBC ITE IT8518E

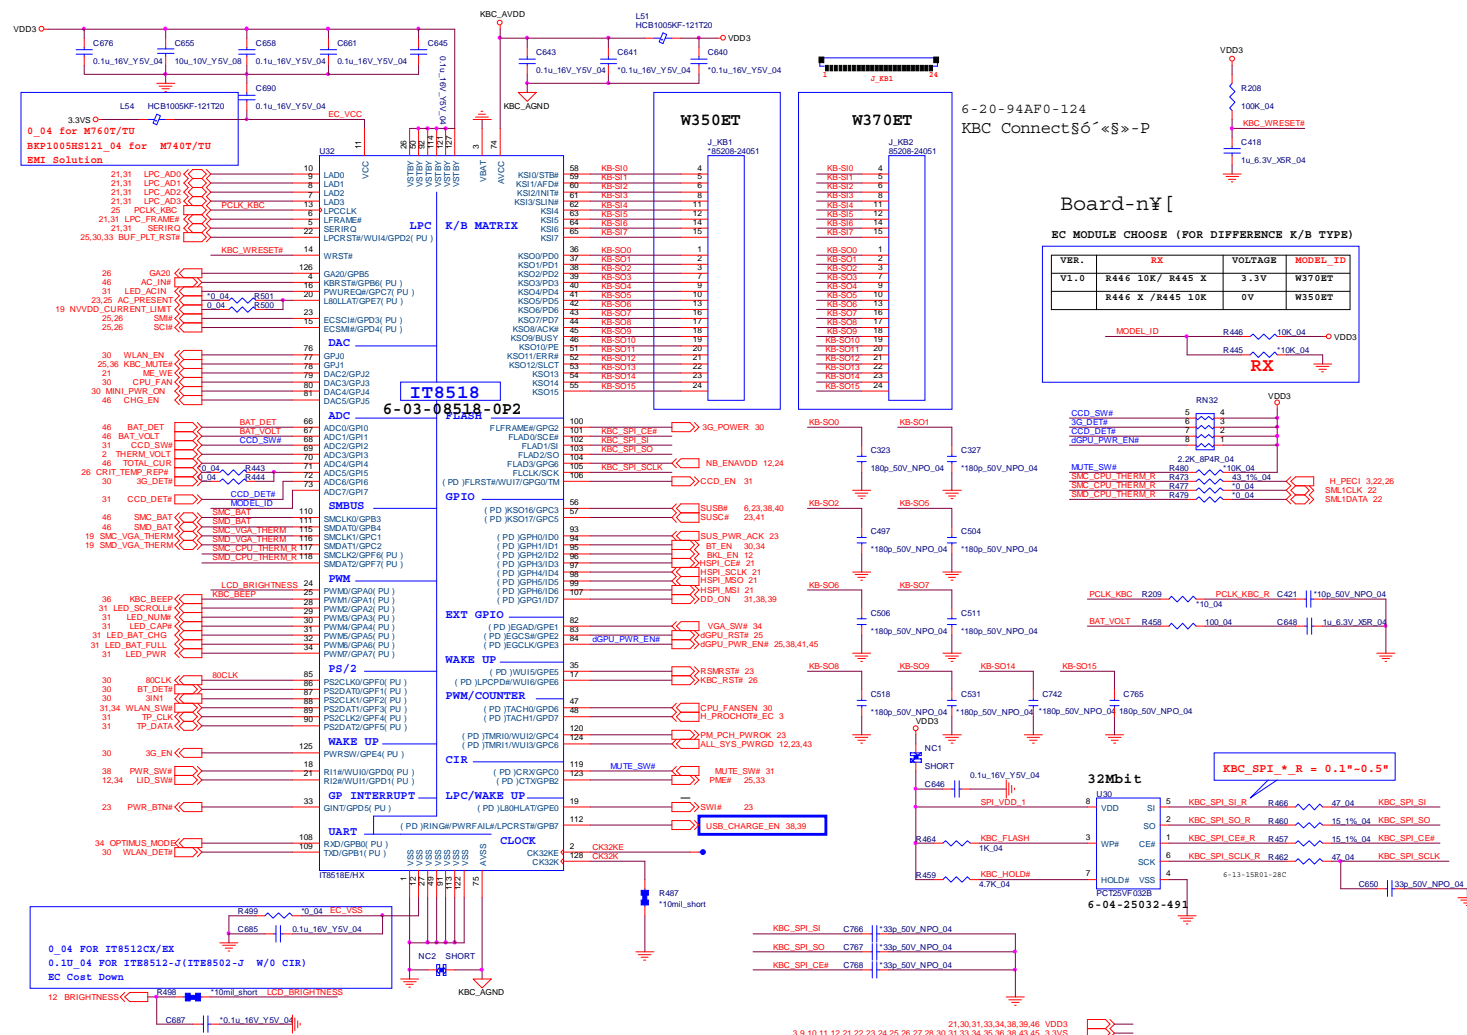


5VS, 3VS, 3.3VM, 1.5VS_CPU

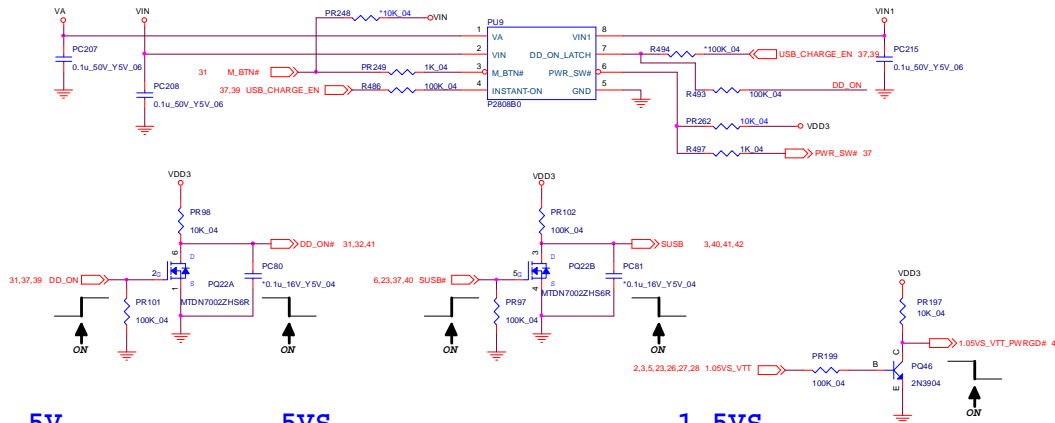


1.05VS_VTT

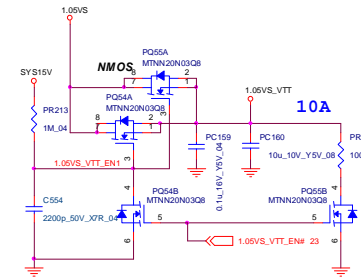


5V

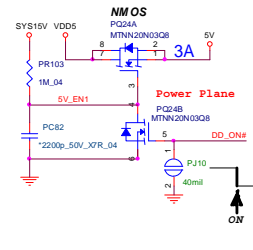


5VS

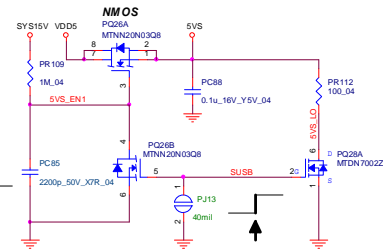


1.5VS

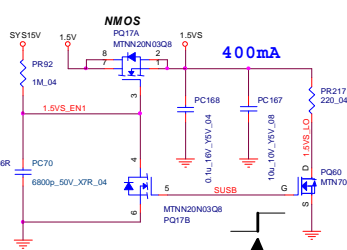


1.5VS_CPU

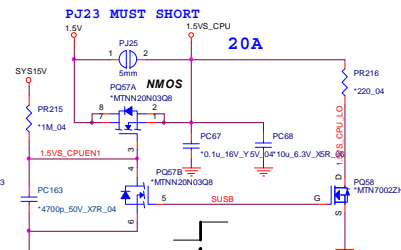



3.3V

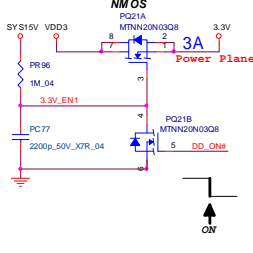

3.3VS

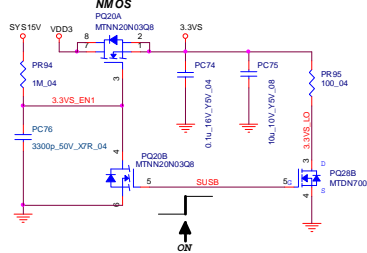


3V3_RUN

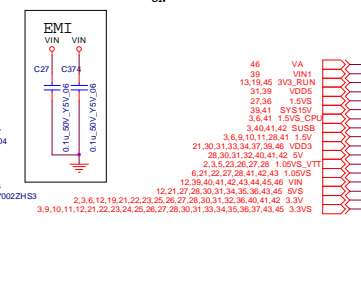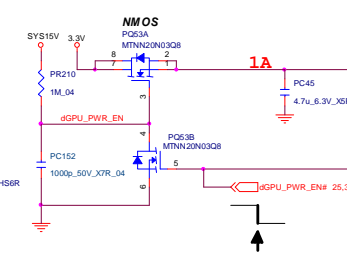


VDD3, VDD5

Sheet 39 of 55
VDD3, VDD5

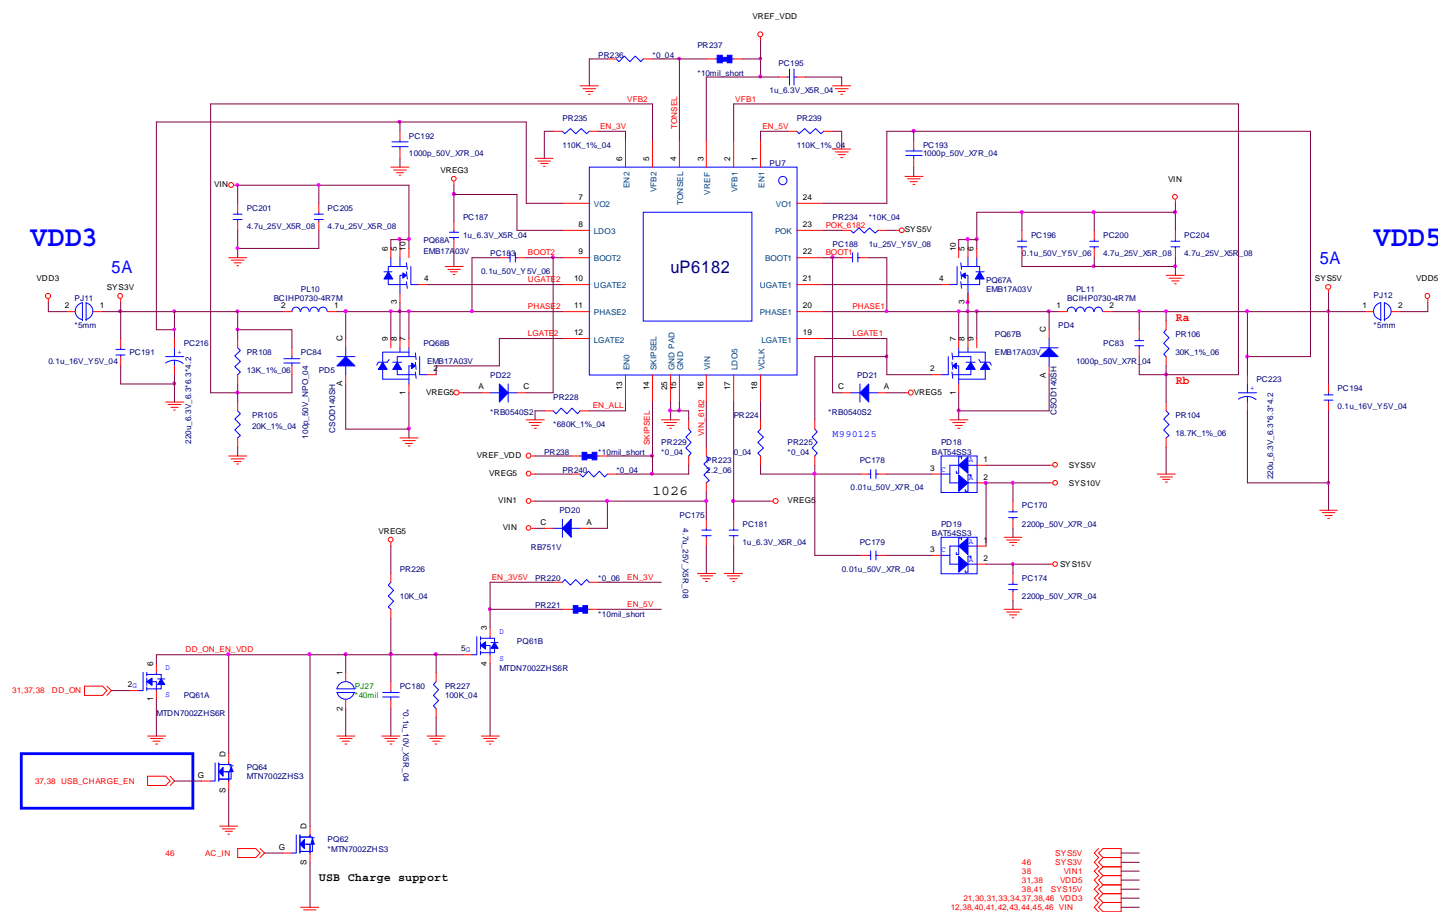


Power 0.85VS, 1.8VS

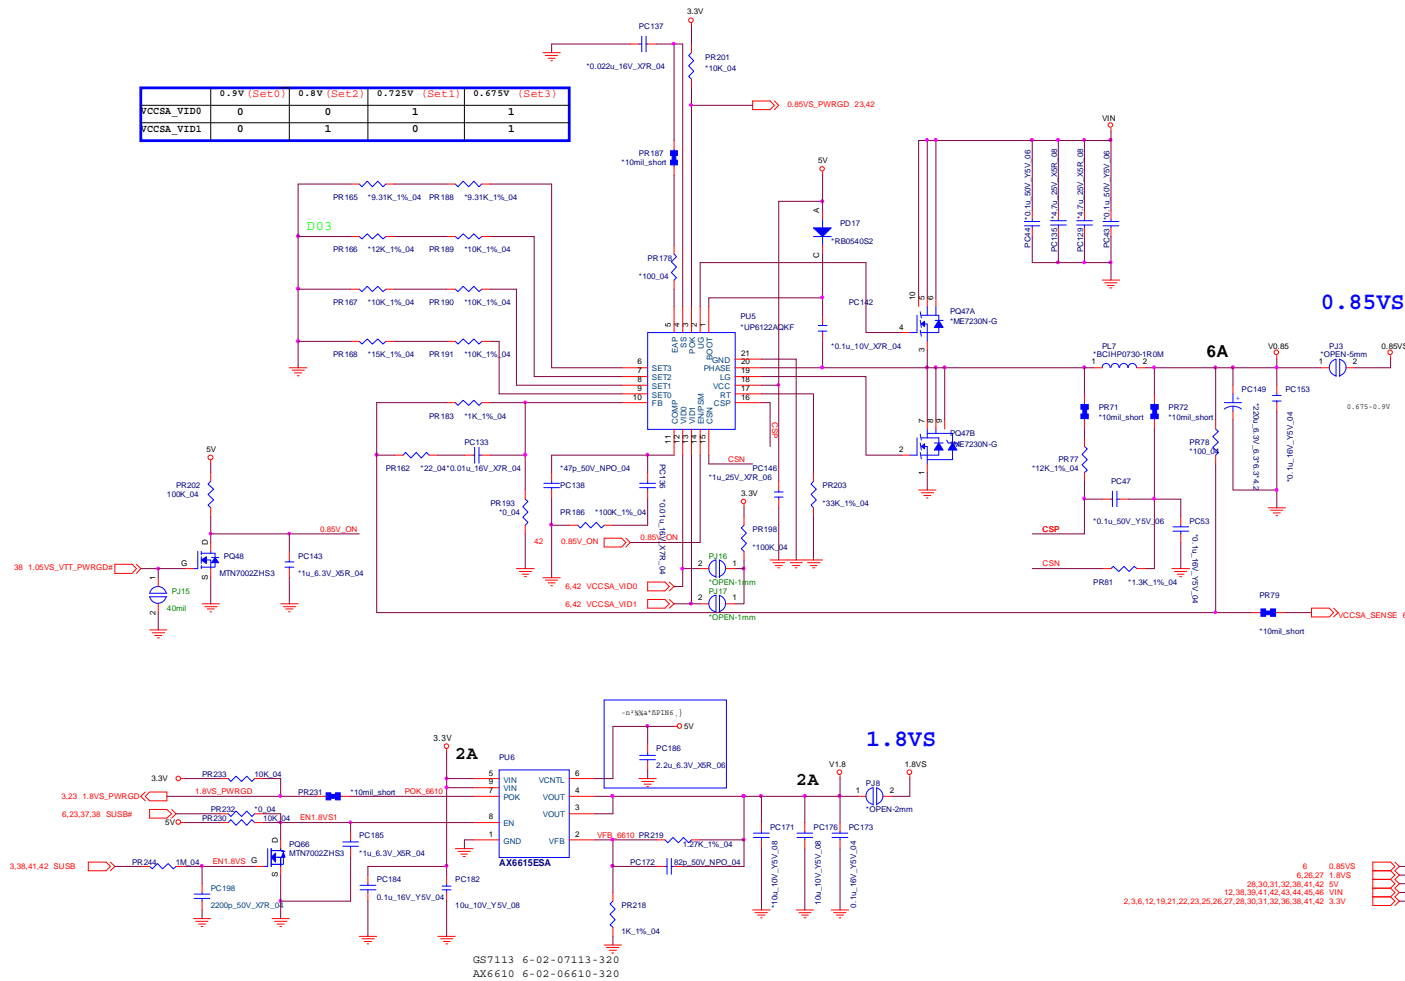


Sheet 40 of 55
Power 0.85VS,
1.8VS

Power 1.5/0.75V/PEX_VDD

Sheet 41 of 55
Power 1.5/0.75V/
PEX_VDD

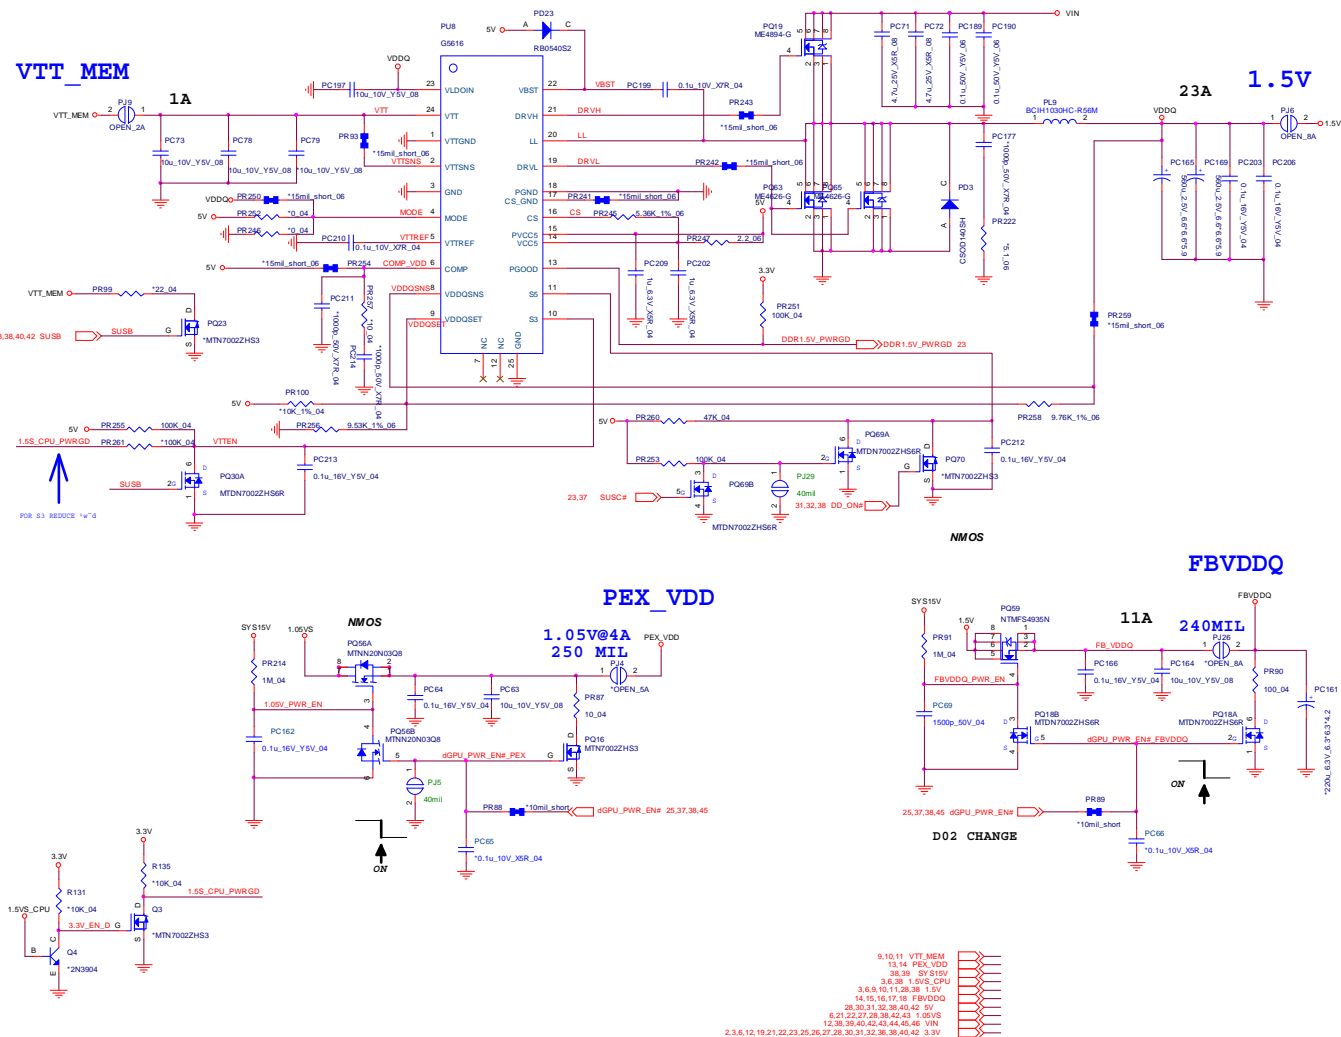


Sheet 42 of 55
 Powe 1.05VS/
 0.85VS

 


Power V-Core 1


Sheet 43 of 55
Power V-Core 1

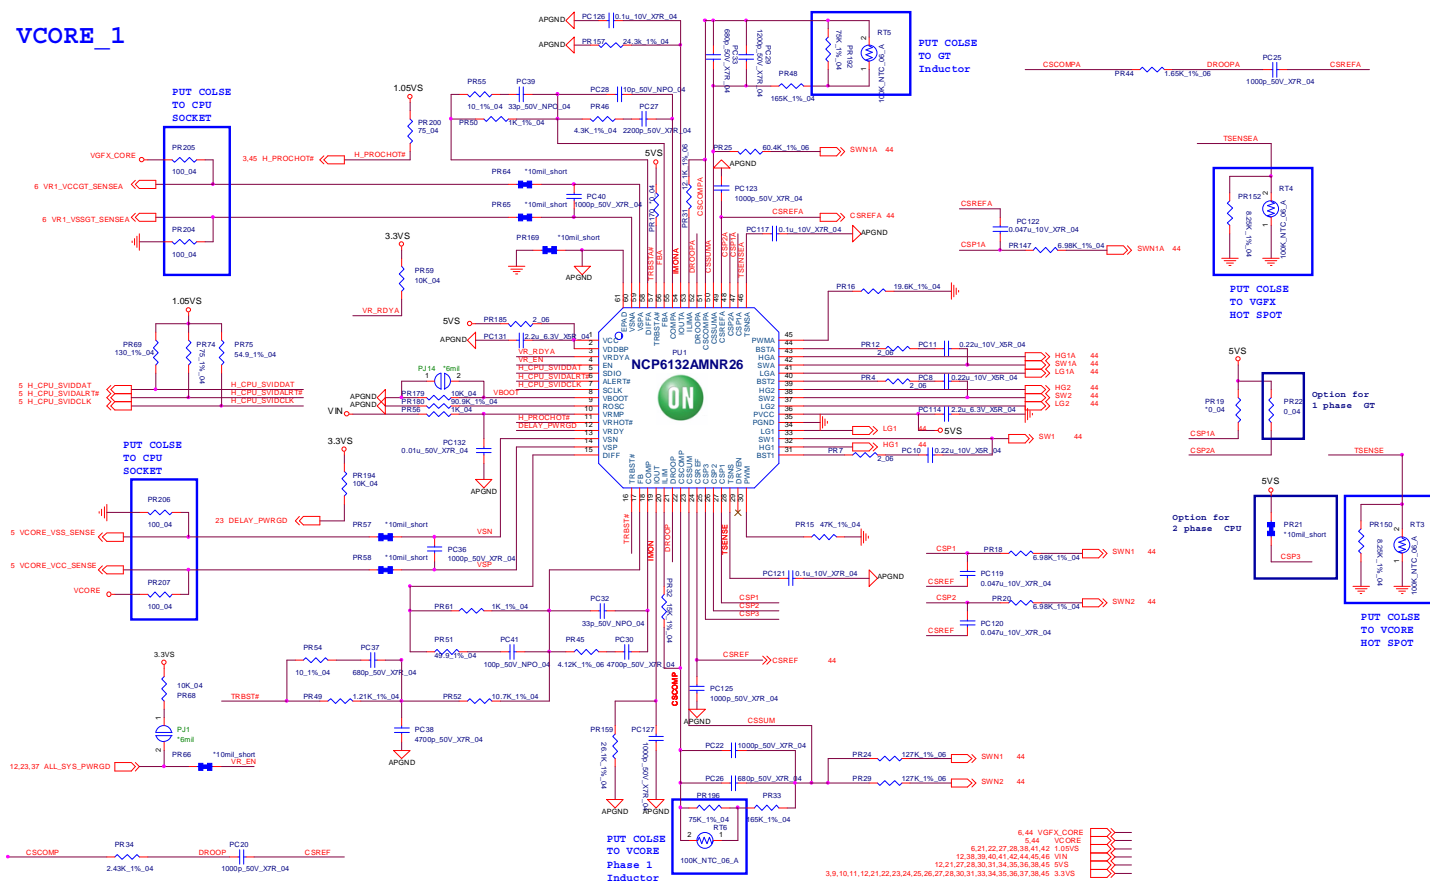

Power V-Core 2

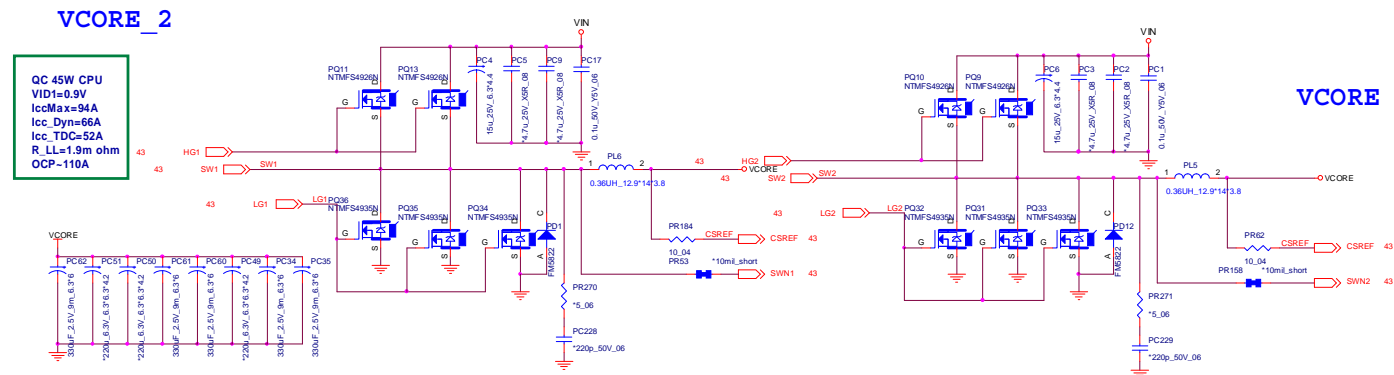


Sheet 44 of 55
Power V-Core 2

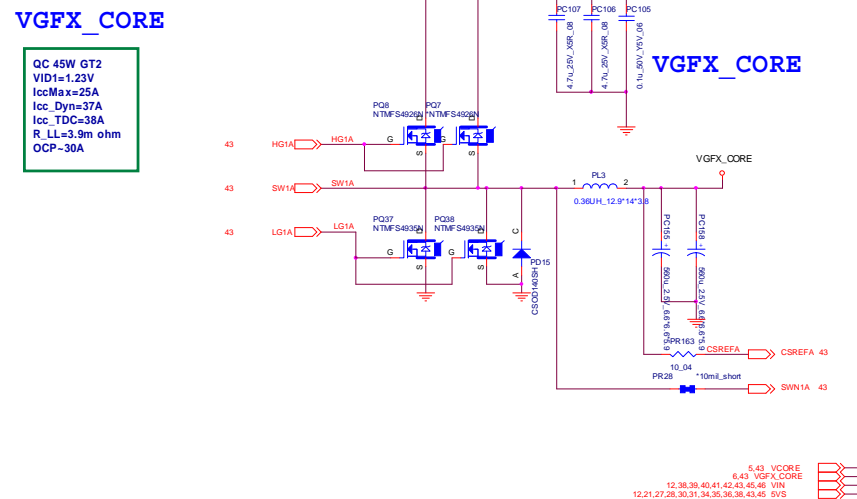


VGA NVVDD

Sheet 45 of 55
VGA NVVDD

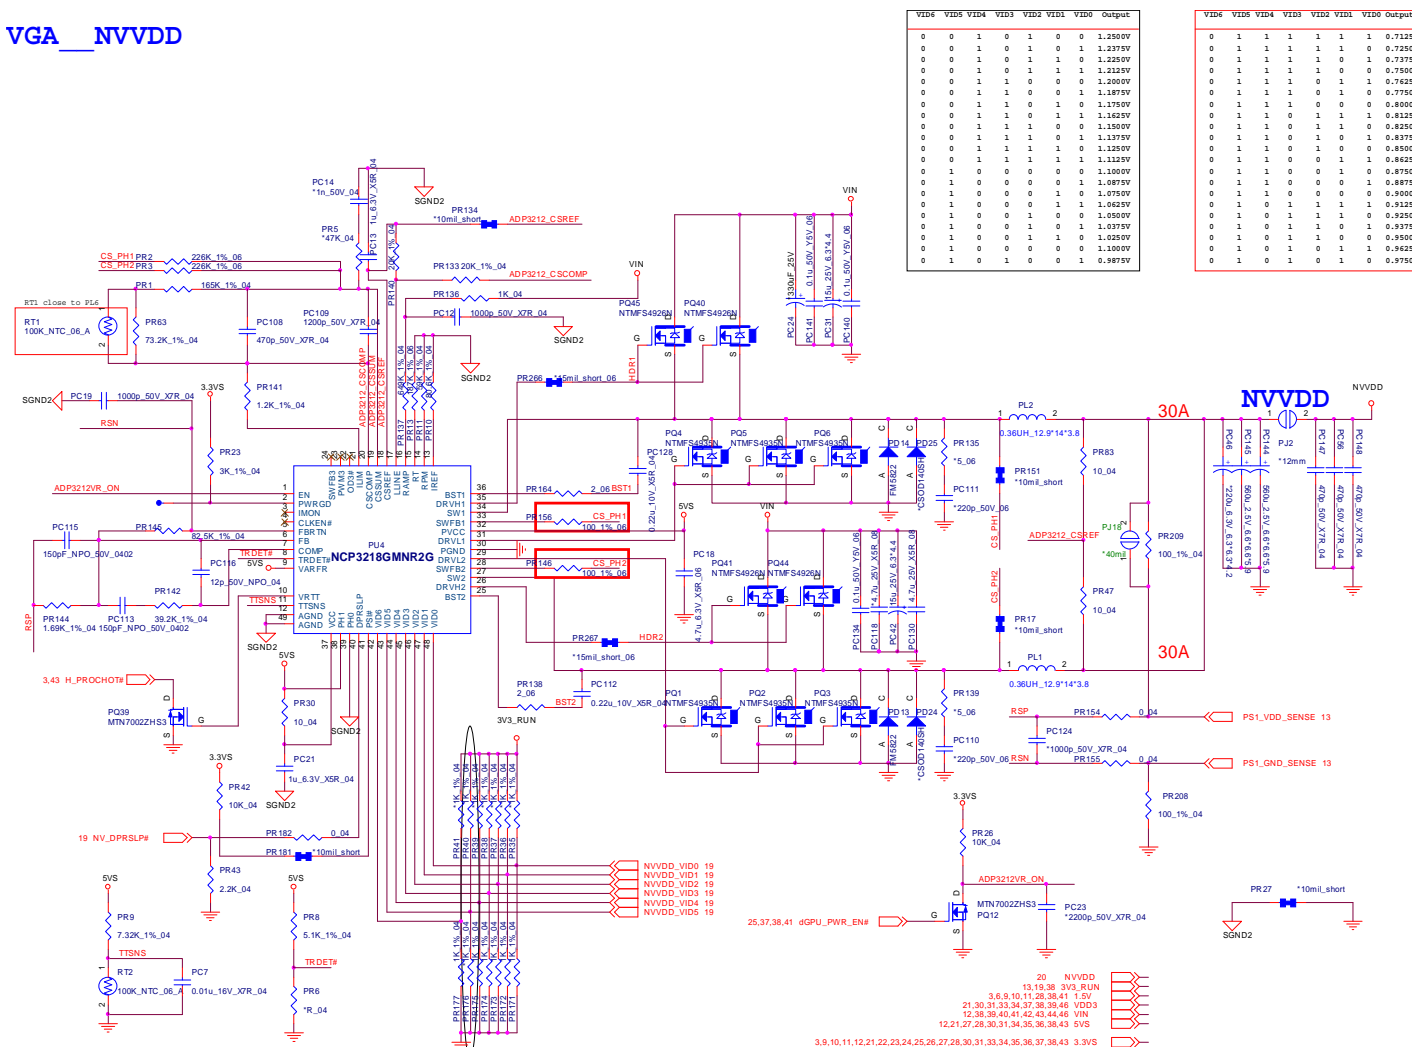


AC-In, Charger

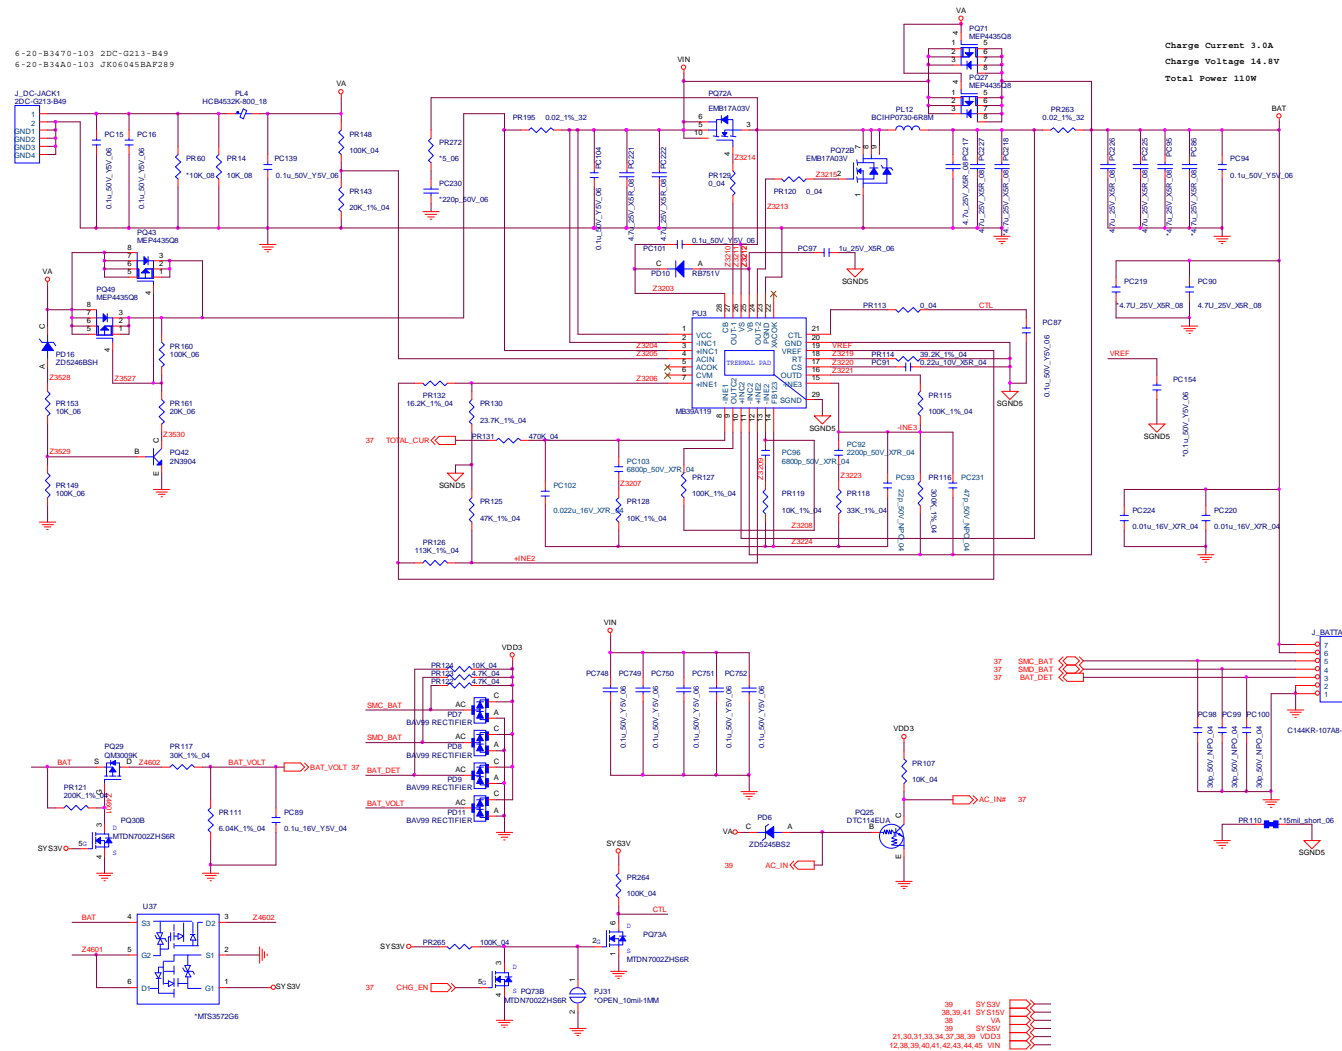

Sheet 46 of 55
AC-In, Charger


B. Schematic Diagrams

USB PORT (PORT9)

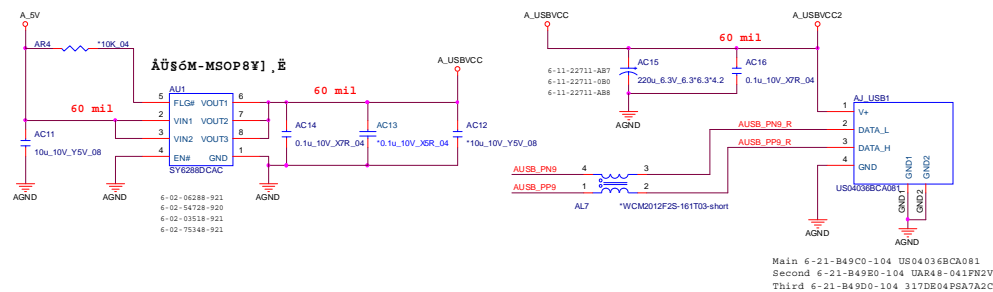

Sheet 47 of 55
W370/350ET Audio
Board






AUDIO BOARD

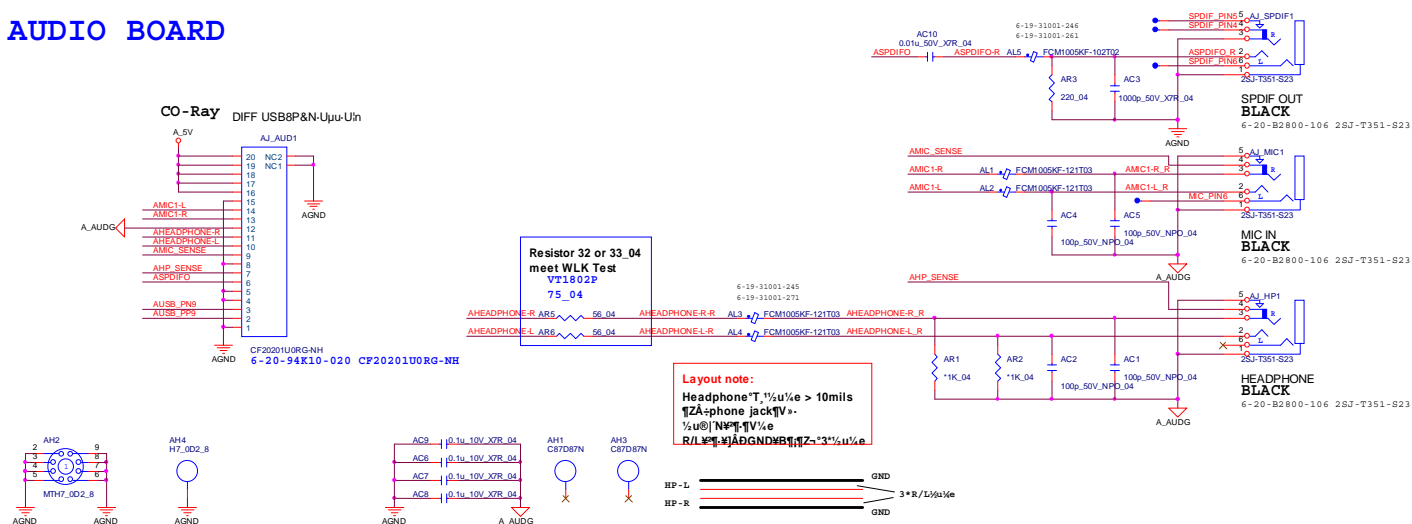

W370/350ET Power LED Board

W370ET /W350ET

LED

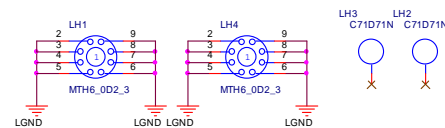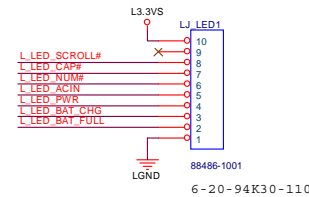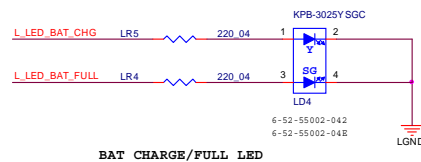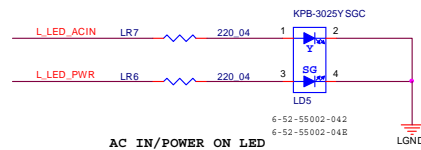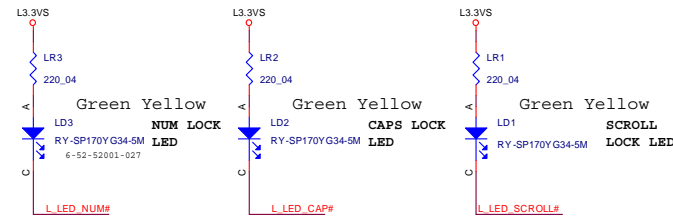


Sheet 48 of 55
W370/350ET Power
LED Board

Schematic Diagrams


W370/350ET Click Board

Sheet 49 of 55
W370/350ET Click
Board

W350ET&W370ET CLICK BOARD

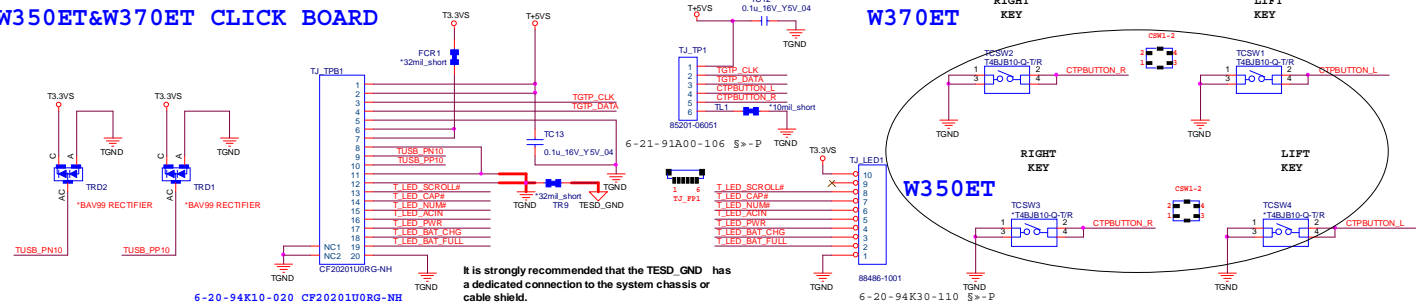


W350ET FINGERPRINT

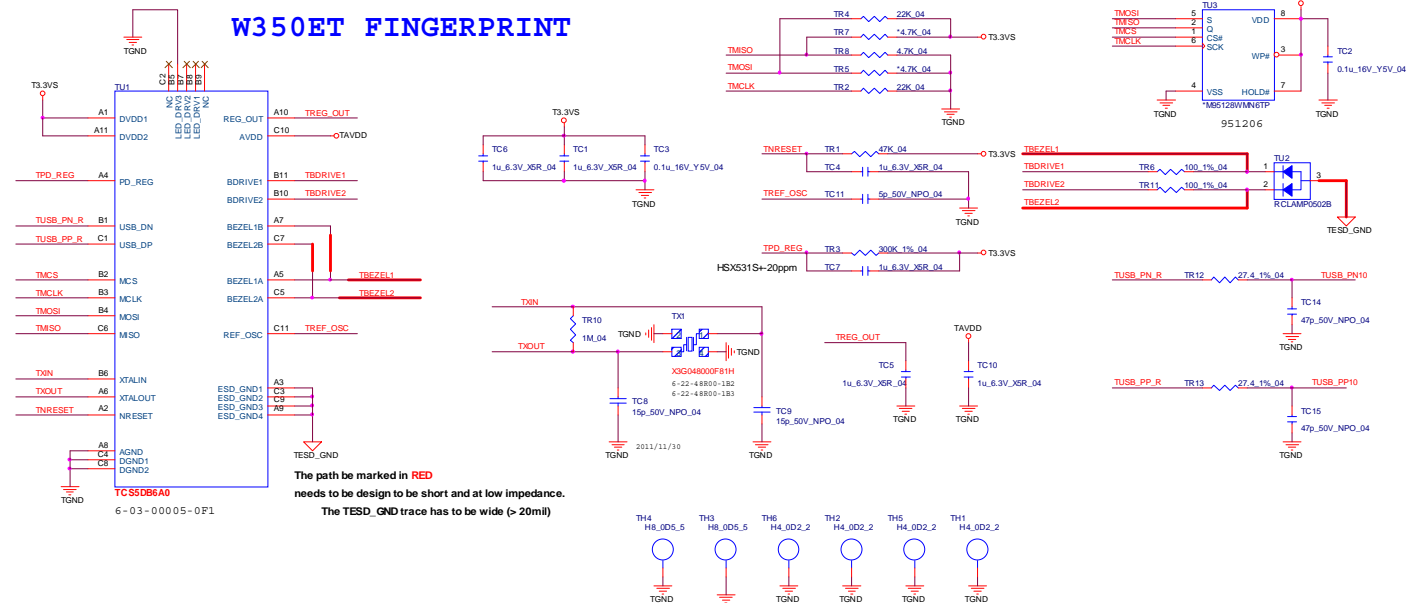

W370ET Power Switch Board

W370ET POWER SWITCH BOARD

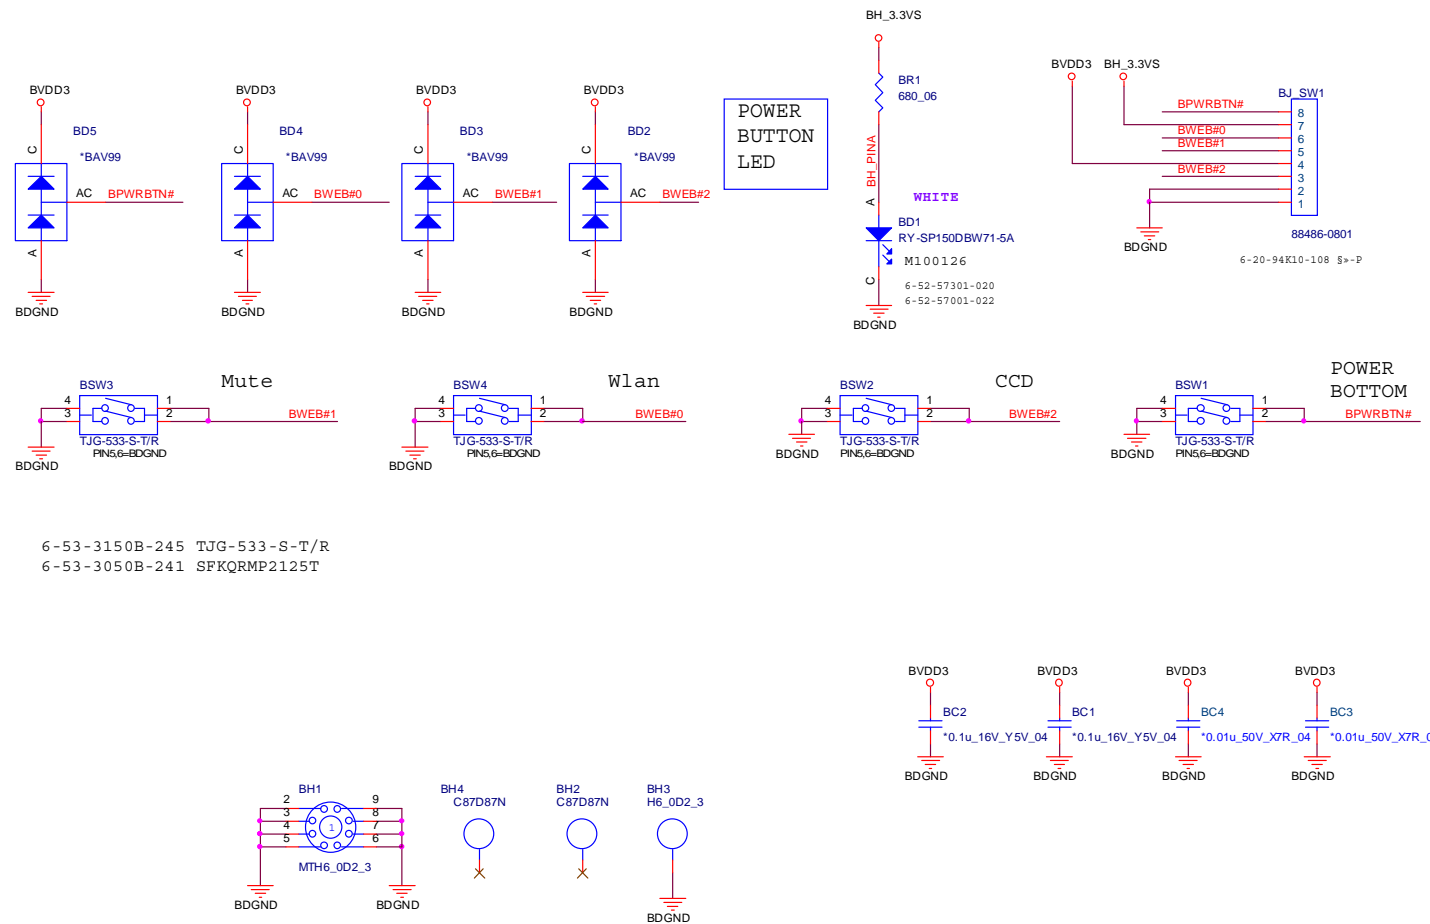


Sheet 50 of 55
W370ET Power
Switch Board

Schematic Diagrams

W350ET Power Switch Board


Sheet 51 of 55
W350ET Power
Switch Board

W350ET POWER SWITCH BOARD

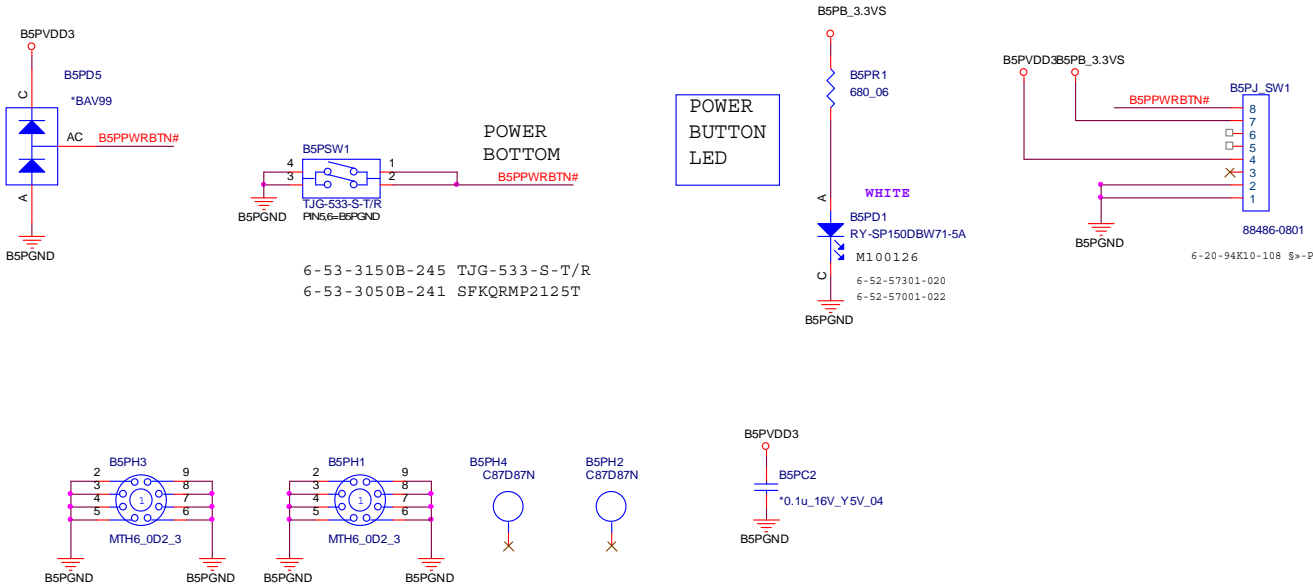

W370ET LID & VGA LED SW BOARD


HDD LED BT&WLAN LED VGA SWITCH & LED

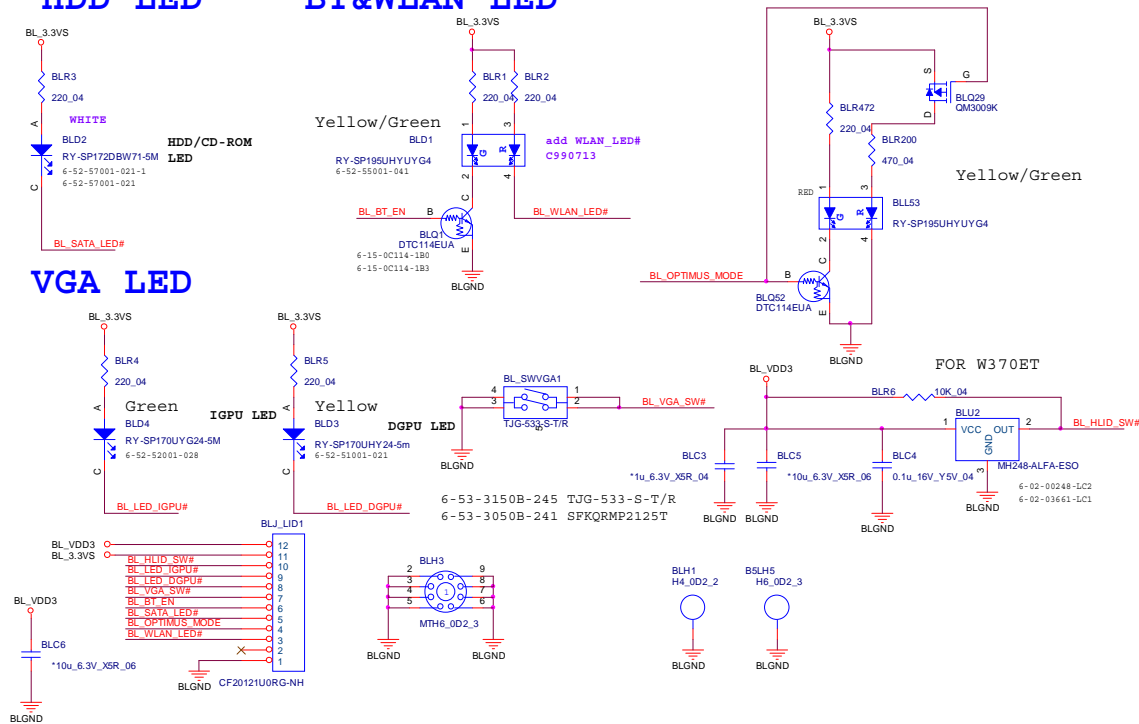


B.Schematic Diagrams

W350ET LID & VGA LED BOARD

VGA LED

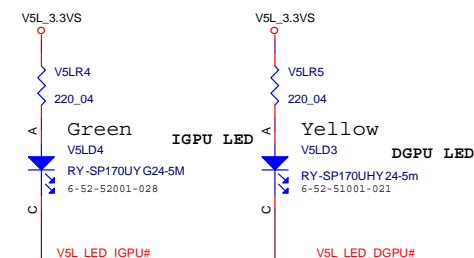


FOR W350ET

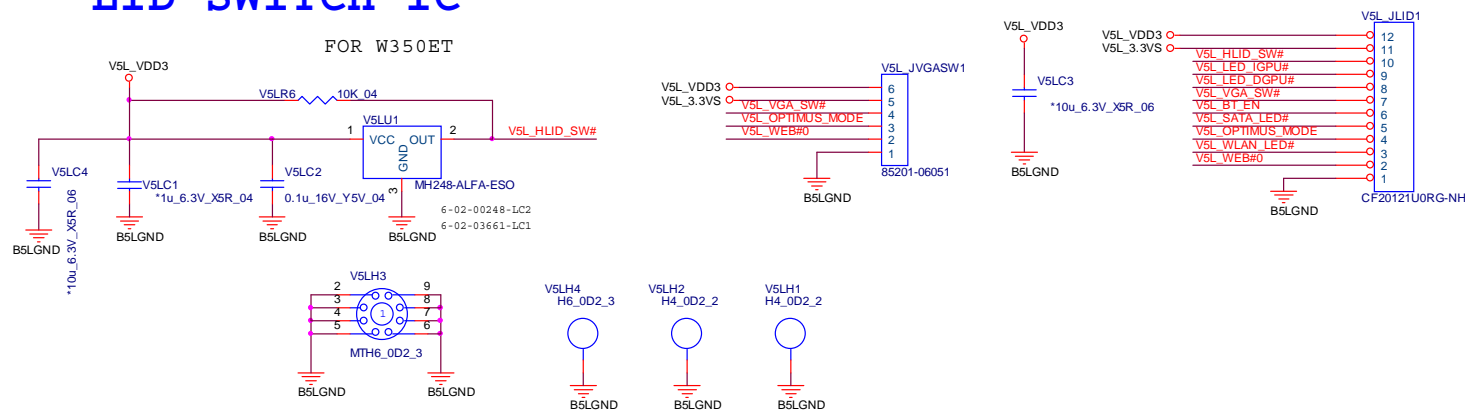




W350ET VGA / WLAN SW Board

W350ET VGA & WWW SW BOARD

VGA SWITCH & LED

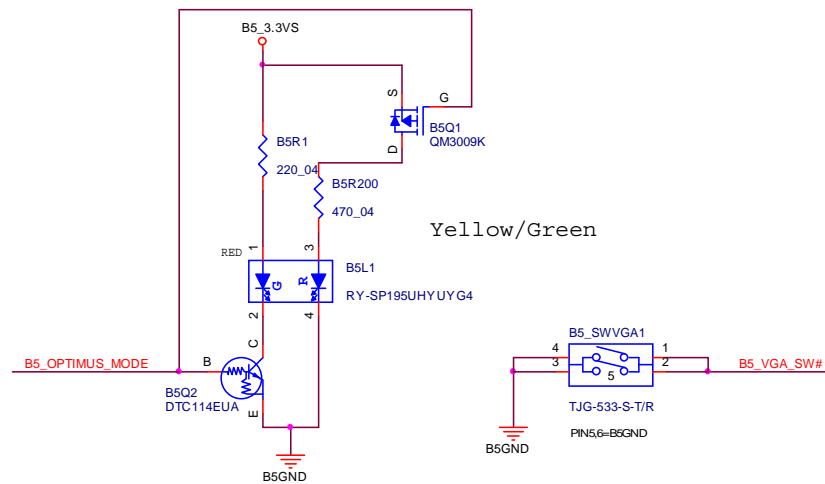


6-53-3150B-245 TJG-533-S-T/R
6-53-3050B-241 SFKQRMP2125T

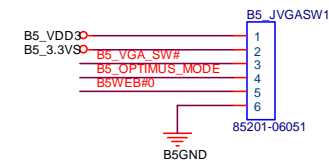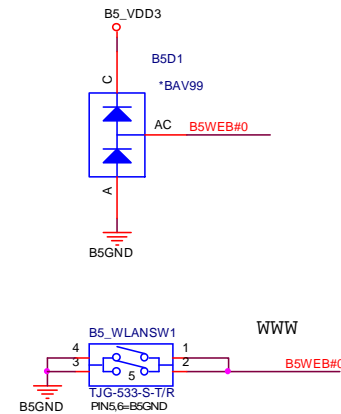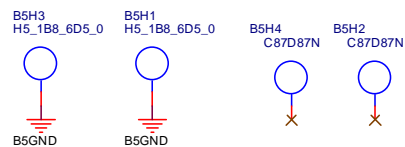

Sheet 54 of 55
W350ET VGA /
WLAN SW Board

POWER ON SEQUENCE

Sheet 55 of 55
POWER ON
SEQUENCE

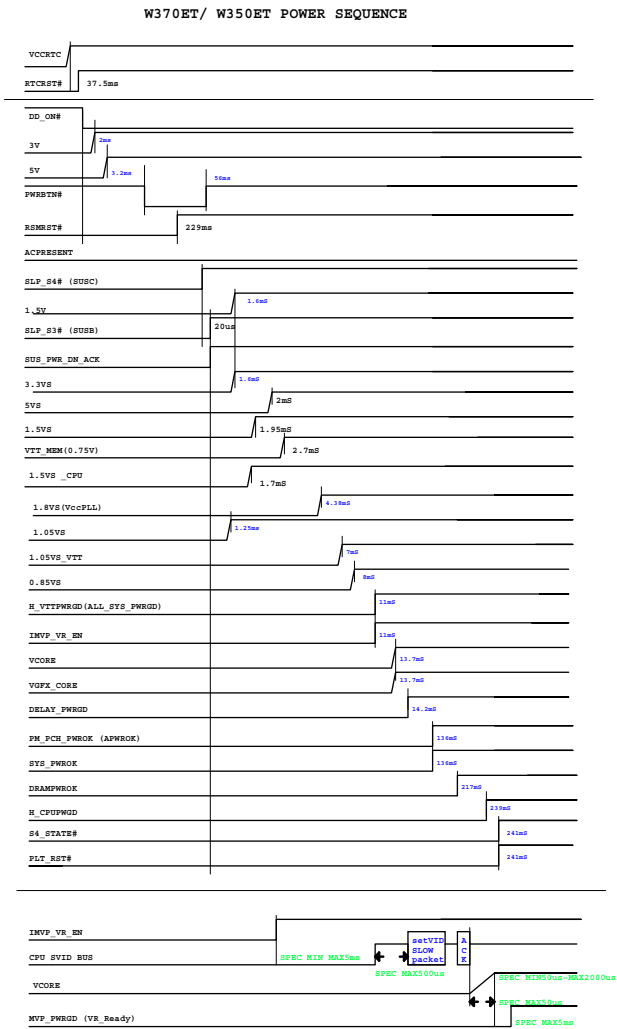

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: `DISK C:\>` (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.